



DODGE MAGNUM HATCH Release Diagram:

If your Unit has a (+) Positive Trunk/Hatch Output use this diagram.

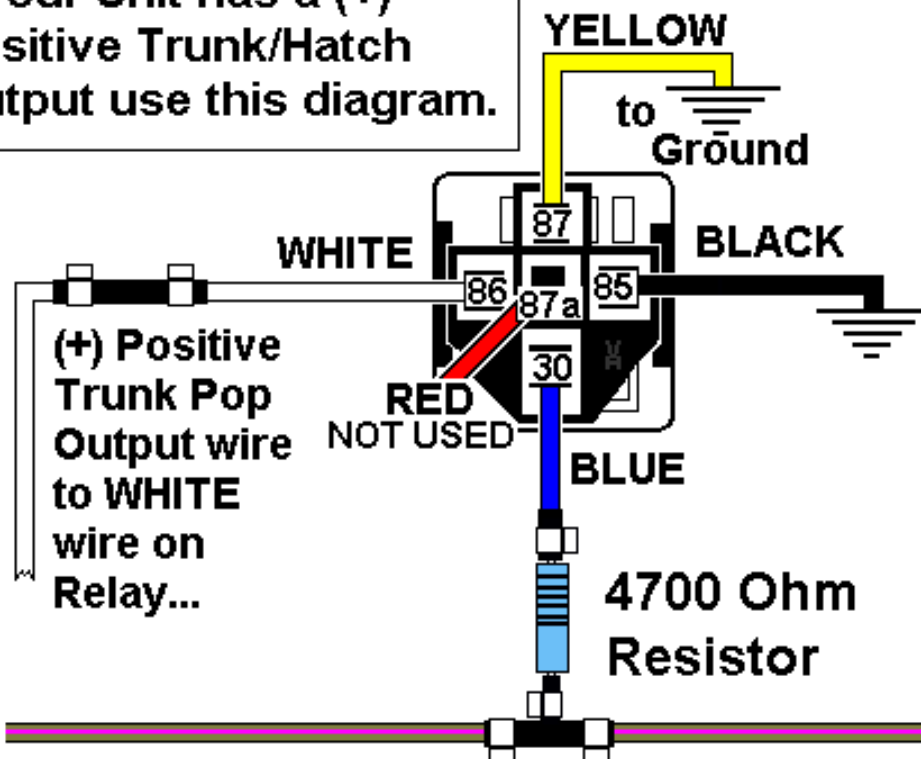

PURPLE/TAN in Passenger Kick Panel

If your Unit has a (-) NEGATIVE Truck Pop Output you can use just the 4700 Ohm Resistor without the Relay...

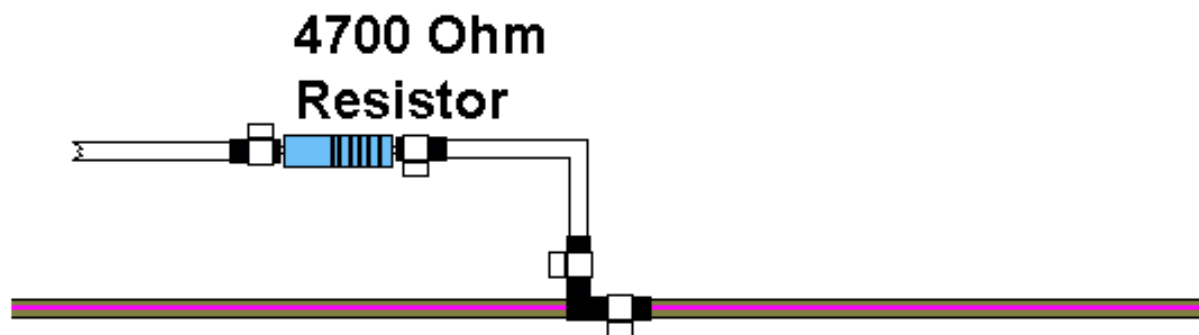

PURPLE/TAN in Passenger Kick Panel