

Engine & Cooling

Fuel

Ignition

 
Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

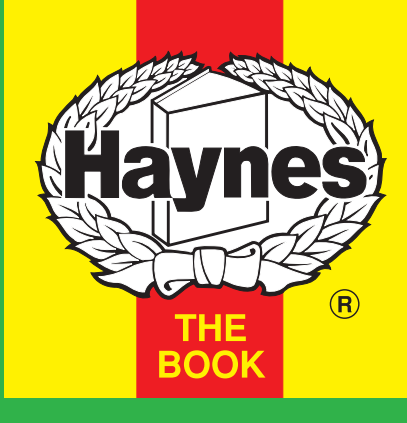

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENUHELP

Engine and cooling system

80 & Coupé 1.8E & 4x4

1986 to 1989

Type		DZ (82kW) SOHC
Capacity (cm ³) / number of cylinders		1781 / 4
Compression ratio / pressure	bar	10.0 / ≥7.5
Oil pressure	bar	[2.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	85
Radiator cap pressure	bar	1.2 to 1.5

Fuel system

80 & Coupé 1.8E & 4x4

1986 to 1989

Idle speed - manual [auto]	rpm	950±30
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	0.5 to 1.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		K-Jetronic
Main jet / needle		—
Injection pressure	bar	4.0 to 4.6
Pump pressure	bar	5.2 to 5.9
Octane rating	RON	98[E 98 RON] ¹

Ignition system

80 & Coupé 1.8E & 4x4

1986 to 1989

Type		TSZ
Ignition coil		Bosch
Primary resistance	ohms	0.52 to 0.76
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Bosch
Points gap (air gap)	mm	—
Dwell angle	° (%)	N/A
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	6±1 BTDC @ 900±100 ¹
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	4 to 8 BTDC @ 900±50 ²
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	0 @ 1050 to 1450
	° Crankshaft @ rpm	17 to 21 @ 4000
	° Crankshaft @ rpm	20 to 24 @ 6000
Vacuum range check	mbar	60 to 340
Maximum vacuum advance	° Crankshaft	13 to 17
Spark plugs		Bosch/Champion
Type		W7DTC / N7YCX
Electrode gap	mm	0.70 to 0.90

Electrical system

80 & Coupé 1.8E & 4x4

1986 to 1989

Battery	V / CC / RC	12 / _
Alternator voltage / full load current / engine rpm		12.5 to 14.5 / _ / 2000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

80 & Coupé 1.8E & 4x4

1986 to 1989

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	175/70x14: 195/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.1 / 2.1
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+10'±10']
Camber		-45'±30'. 4x4: -50'±30'
Castor		+1°15'±30'. Sport: +1°25'±30'
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+20'±20']. 4x4: [+20'±10']
Camber		-1°±20'. 4x4: -45'±30'

Torque wrench settings

80 & Coupé 1.8E & 4x4

1986 to 1989

Cylinder head - stage 1	Nm	40 N
- stage 2	Nm	60
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	30 + 90°
Main bearings	Nm	65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 + 90°
Front hubs	Nm	265 LkC ³
Rear hubs	Nm	WSM ⁴
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	20

Capacities

80 & Coupé 1.8E & 4x4


1986 to 1989

Engine oil & filter	litres	Steel sump: 3.0 ⁵
Gearbox - 4-speed [5-speed]	litres	2.4. 4x4: 2.9
Automatic transmission - refill	litres	3.0
Final drive	litres	AT & 4x4: 0.75
Cooling system	litres	7.0
Fuel tank	litres	68. 4x4: 70


Notes and Illustrations

- ¹[E 95 RON], 0±1 BTDC
- ²[E 95 RON], 0±2 BTDC
- ³PAS+4x4 with detachable wheel housing: M14: 120+ 90° M16: 200 + 90°. 4x4 with nuts: 265 4x4: 320
- ⁴Aluminium sump: 3.5

 
1: Idle speed 2: CO / Mixture

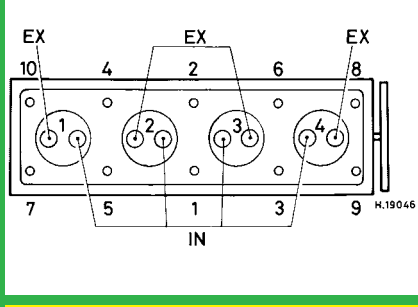

1781 cm³, 8V

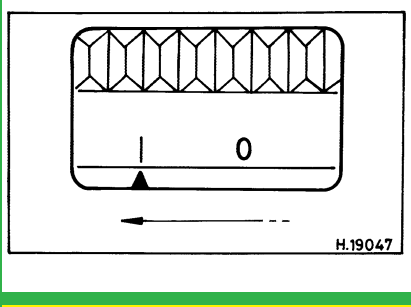 

1781 cm³, 8V

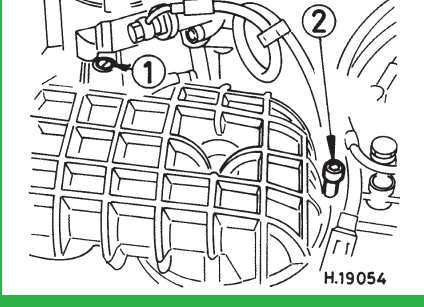 

K-Jetronic