

VAUXHALL/OPEL

Brava Pick-up & CAT

1988 to 1995

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Brava Pick-up & CAT

1988 to 1995

Type		4ZD1 SOHC 81kW (Cat: 69kW)
Capacity (cm ³) / number of cylinders		2254 / 4
Compression ratio / pressure	bar	8.0 / 11.8
Oil pressure	bar	[3.9 to 4.9]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.15
Valve clearance - exhaust	mm	0.25
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82
Radiator cap pressure	bar	0.9 to 1.2

Fuel system

Brava Pick-up & CAT

1988 to 1995

Idle speed - manual [auto]	rpm	800
Fast idle speed - manual [auto]	rpm	2800 to 3200
CO @ idle speed [3000 rpm] - see page VI	%	CAT: ≤0.5 [≤0.3]
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200. CAT: ≤300
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Nippon Kikaki/Hitachi
Type / ref		NK: 21E324. H: DCR384
Main jet / needle		NK: 126, 165. H: 112, 165 ¹
Injection pressure	bar	—
Pump pressure	bar	0.25
Octane rating	RON	91[E 91 RON] ²

Ignition system

Brava Pick-up & CAT

1988 to 1995

Type		HEI
Ignition coil		—
Primary resistance	ohms	1.1 to 1.5
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	[0.20 to 0.40]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	6 BTDC @ 800
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	—
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BPR6ES11 / RN7YC
Electrode gap	mm	1.00 to 1.10

Electrical system

Brava Pick-up & CAT

1988 to 1995

Battery	V / CC / RC	12 / 60Ah
Alternator voltage / full load current / engine rpm		14.2 to 14.8 / 45 / 3000
Starter motor current / voltage - cranking	A / V	280 / 8.0
- locked	A / V	—

Running gear

Brava Pick-up & CAT

1988 to 1995

Brakes -		
Front (min. friction material thickness)	mm	—
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	—
Estate / Van	Size	185x14: 205x16
Pressure - front / rear - Saloon	bar	—
- Estate / Van	bar	1.8 / 4.5 ³

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±2.0
Camber		+30'±1°
Castor		SWB: +1°35'±45' ⁴
King pin inclination		+10°±1°

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settings

Brava Pick-up & CAT

1988 to 1995

Cylinder head - stage 1	Nm	78 oiled
- stage 2	Nm	88 to 108
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	57 to 61 oiled
Main bearings	Nm	83 to 113 oiled
Clutch cover	Nm	14 to 24
Flywheel [driveplate]	Nm	54 to 64
Front hubs	Nm	WSM
Rear hubs	Nm	—
Wheel nuts / bolts	Nm	Steel: 88. Alloy: 118
Spark plugs	Nm	14 to 24

Capacities

Brava Pick-up & CAT

1988 to 1995

Engine oil & filter	litres	4.9
Gearbox - 4-speed [5-speed]	litres	1.6. 4x4: 4.4
Automatic transmission - refill	litres	—
Final drive	litres	1.5 ⁵
Cooling system	litres	9.0
Fuel tank	litres	75

Notes and Illustrations

¹NK 21E324-351: 121, 155

 
²CAT: 91 [U]

³4x4: 205x16: 2.0 / 2.7


⁴4x4: +1°55'±45'. LWB: +1°50'±45'. 4x4: +2°10'±45'. Flat deck: +1°10'±45'

⁵4x4 front: 1.0


1: Idle speed 2: CO / Mixture

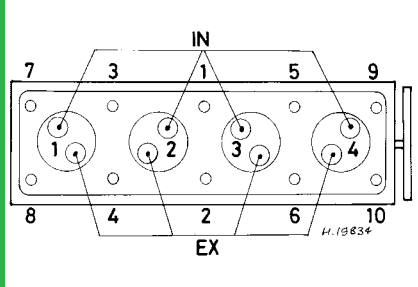

2254 cm³

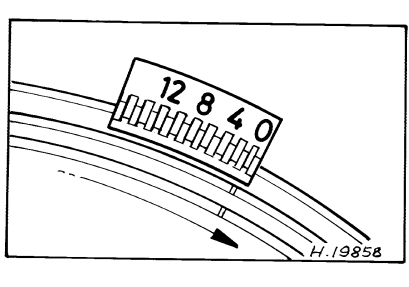 

2254 cm³

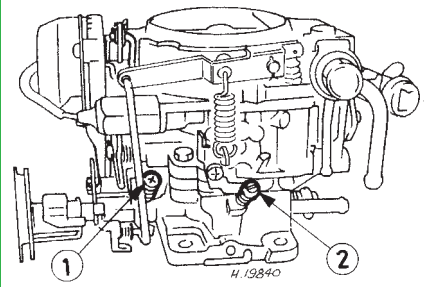 

Nippon Kikaki / Hitachi