

2007 Honda Element EX

2007-08 ELECTRICAL Fuse/Relay Boxes - Element

2007-08 ELECTRICAL

Fuse/Relay Boxes - Element

CONNECTOR TO FUSE/RELAY BOX INDEX

UNDER-HOOD FUSE/RELAY BOX

UNDER-HOOD FUSE/RELAY BOX

| Socket | Ref | Terminal | Connects to |
|--------------------------------|-----|----------|--|
| A | 11 | 2 | Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH) (EXCEPT SC MODEL)</u>) |
| A/C compressor clutch relay | 6 | 4 | |
| A/C condenser fan relay | 3 | 4 | |
| B | 16 | 5 | Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH) (EXCEPT SC MODEL)</u>) |
| Blower motor relay | 8 | 4 | |
| C | 12 | 12 | Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH) (EXCEPT SC MODEL)</u>) |
| D | 15 | 14 | Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH) (EXCEPT SC MODEL)</u>) |
| E | 14 | 7 | Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH) (EXCEPT SC MODEL)</u>) |
| ELD unit | 13 | 3 | Engine compartment wire harness (see <u>ENGINE COMPARTMENT WIRE HARNESS (LEFT BRANCH) (EXCEPT SC MODEL)</u>) |
| Horn relay | 4 | 4 | |
| Headlight relay ⁽¹⁾ | 10 | 4 | |
| Headlight relay 1 (2) | 9 | 4 | |
| Headlight relay 2 (2) | 10 | 4 | |
| Radiator fan relay | 5 | 4 | |
| Rear window defogger relay | 7 | 4 | |
| T101 (Battery) | 2 | | Starter subharness (see <u>STARTER SUBHARNESS</u>) |
| T102 (Alternator) | 1 | | Starter subharness (see <u>STARTER SUBHARNESS</u>) |

(1) Except SC model

(2) SC model

2007 Honda Element EX

2007-08 ELECTRICAL Fuse/Relay Boxes - Element

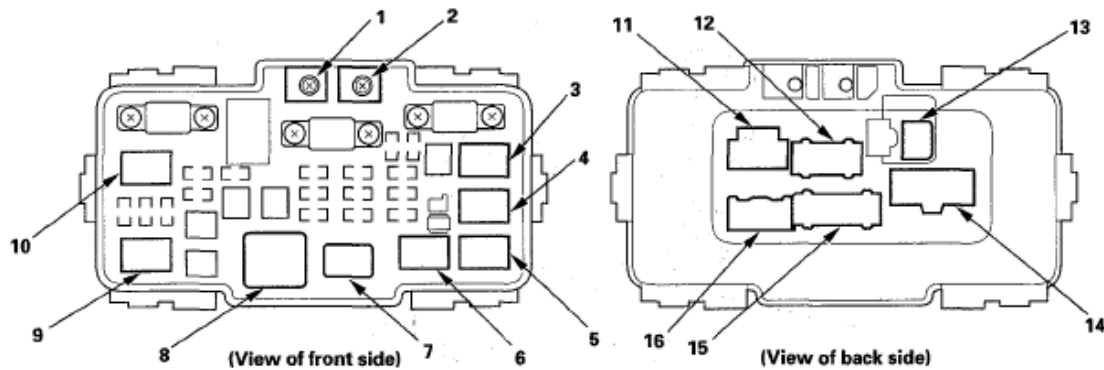


Fig. 1: Identifying Under-Hood Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

UNDER-DASH FUSE/RELAY BOX

UNDER-DASH FUSE/RELAY BOX

| Socket | Ref | Terminal | Connects to |
|--------|-----|----------|--|
| A | 2 | 5 | Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>) |
| B | 3 | 6 | Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>) |
| C | 1 | 14 | Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>) |
| D | 4 | 12 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| E | 5 | 13 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| F | 19 | 12 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |
| G | 9 | 10 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| H | 8 | 3 E | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| I | 20 | 5 | |
| J | 21 | 8 | Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>) |
| K | 23 | 17 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |
| L | 24 | 10 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |
| M | 22 | 12 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |
| N | 27 | 6 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |

2007 Honda Element EX

2007-08 ELECTRICAL Fuse/Relay Boxes - Element

| | | | |
|--|----|----|--|
| O | 26 | 12 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |
| P | 7 | 18 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| Power window relay | 12 | 4 | |
| Q | 6 | 8 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| R | 10 | 6 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| S | 25 | 2 | Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>) |
| Starter cut relay | 14 | 4 | |
| T | 18 | 3 | Multiplex control unit service check connector |
| Taillight relay | 13 | 4 | |
| Turn signal/hazard relay | 11 | 3 | |
| U | 15 | 1 | Optional connector |
| V | 16 | 4 | Optional connector |
| W (Memory erase signal (MES) connector) | 17 | 2 | ECM/PCM wire harness (see <u>ECM/PCM WIRE HARNESS</u>) |
| X (plugs directly into the multiplex control unit) | 28 | 8 | Dashboard wire harness B (see <u>DASHBOARD WIRE HARNESS B</u>) |
| Y (plugs directly into the multiplex control unit) | 29 | 13 | Dashboard wire harness A (see <u>DASHBOARD WIRE HARNESS A (LEFT BRANCH)</u>) |

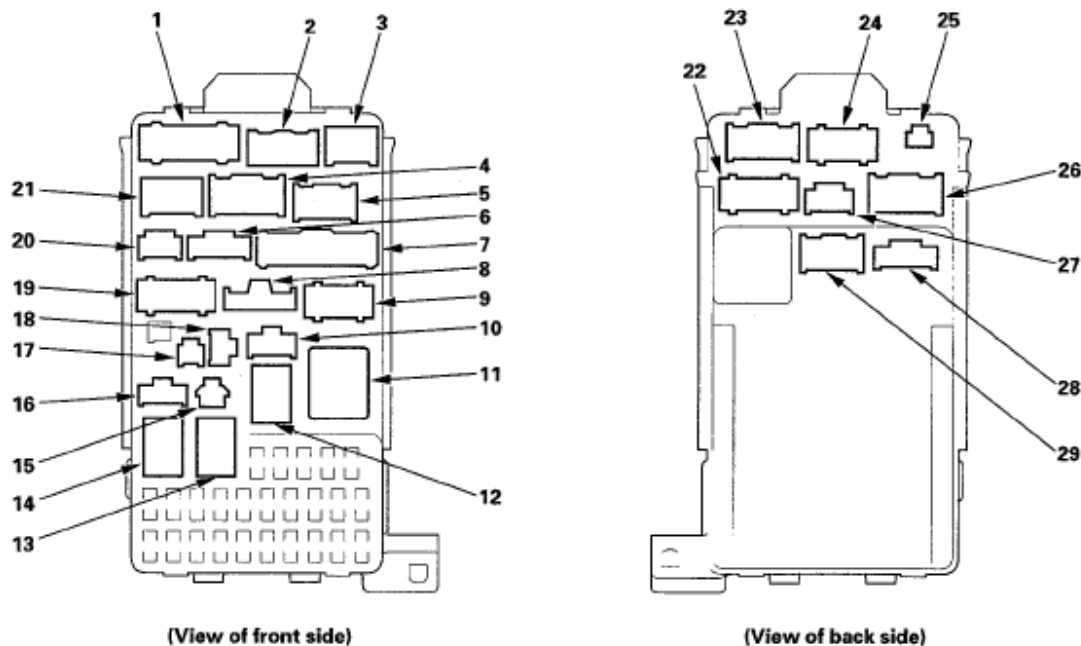


Fig. 2: Identifying Under-Dash Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.