


**2003-06 ACCESSORIES & EQUIPMENT**

**Ignition-Switch - Element**

**TEST**

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX** ), and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES** ) in the SRS before performing repairs or service.

1. Remove the dashboard lower cover (see **DRIVER'S DASHBOARD LOWER COVER REMOVAL/INSTALLATION** ).
2. Disconnect connector A (5P) from the under-dash fuse/relay box.

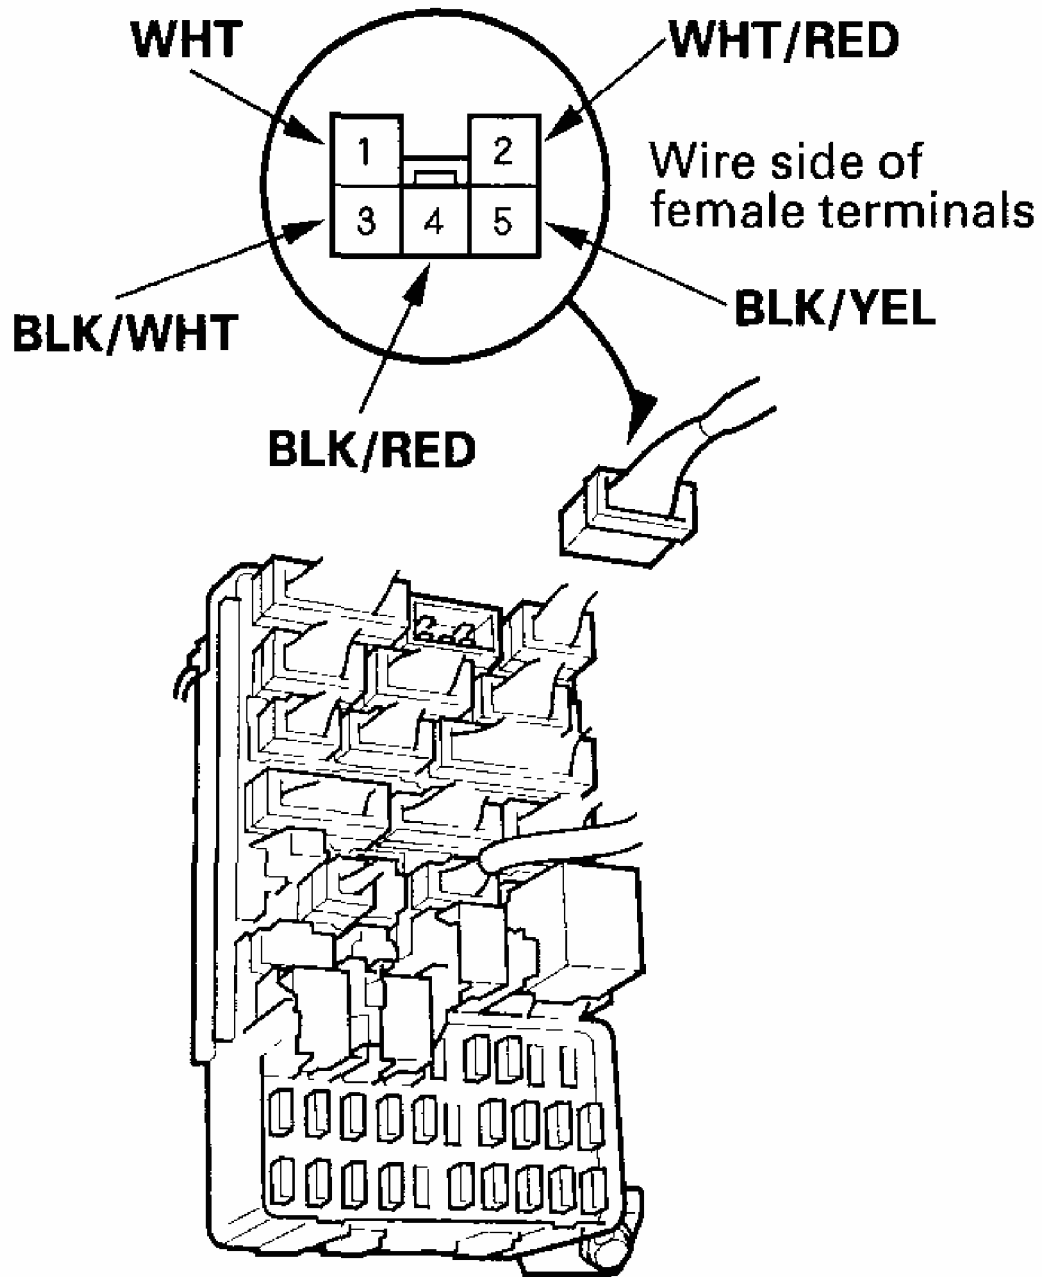

G03679738

**Fig. 1: Disconnecting Connector A (5P) From Under-Dash Fuse/Relay Box**  
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Check for continuity between the terminals in each switch position according to the table.

2004 Honda Element DX

2003-06 ACCESSORIES & EQUIPMENT Ignition-Switch - Element

Terminal Position	WHT/ RED (ACC)	WHT (BAT)	BLK/ YEL (IG1)	BLK/ RED (IG2)	BLK/ WHT (ST)
<b>O (LOCK)</b>					
<b>I (ACC)</b>	○	○			
<b>II (ON)</b>	○	○	○	○	
<b>III (START)</b>		○	○		○

G03679739

**Fig. 2: Checking Continuity Between Terminals**  
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

- If the continuity checks do not agree with the table, replace the steering lock (ignition) switch (see **STEERING LOCK REPLACEMENT**).