

## ***BASIC OPERATION***


---

### **QUICK REFERENCE**

|  |   |
|--|---|
| Driver's seat .....                    | 2 |
| Steering wheel .....                   | 2 |
| Automatic transmission (GS430) .....   | 3 |
| Automatic transmission (GS300) .....   | 4 |
| Headlight and turn signal switch ..... | 5 |
| Wiper switch .....                     | 6 |

## BASIC OPERATION – QUICK REFERENCE

### 1. DRIVER'S SEAT

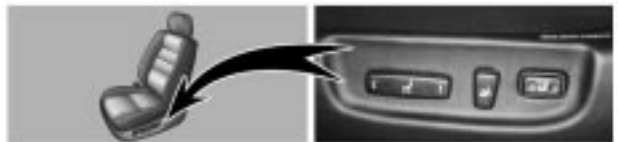


Seat adjustment

|  |                       |  |  |
|--|-----------------------|--|--|
|  | Seat position         |  |  |
|  | Seat cushion angle    |  |  |
|  |                       |  |  |
|  | Seat cushion height   |  |  |
|  | Seatback angle        |  |  |
|  | Lumbar support        |  |  |
|  | Head restraint height |  |  |
|  | Head restraint angle  |  |  |


### 2. STEERING WHEEL

#### • TILT STEERING WHEEL

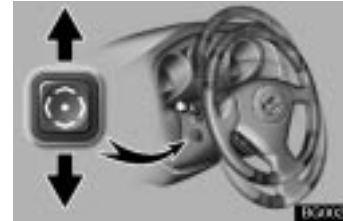

To tilt the steering wheel up or down to the desired angle, push the control switch in the required direction and release the button when the steering wheel reaches the desired angle.

#### • TELESCOPIC STEERING WHEEL

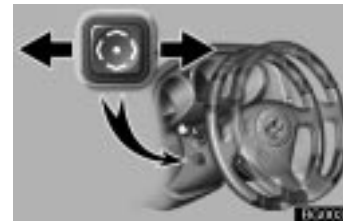

To move the steering wheel to the desired position, push the control switch away from you or pull it toward you until the steering wheel reaches the desired position.

### 3. AUTOMATIC TRANSMISSION (GS430)



#### SELECTOR LEVER POSITION

- P:** Parking, engine starting and key removal
- R:** Reverse
- N:** Neutral
- D:** Normal driving (with overdrive on)
- 4:** Engine braking\*
- 3, 2:** Stronger engine braking
- L:** Maximum engine braking

#### OPERATION OF SELECTOR LEVER



★ Shift while pressing the brake pedal. (Ignition switch must be in the "ON" position.)

\*When the cruise control is being used, even if you downshift from "D" to "4", engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 191.

## BASIC OPERATION – QUICK REFERENCE

### AUTOMATIC TRANSMISSION(GS300)



#### SELECTOR LEVER POSITION

- P:** Parking, engine starting and key removal
- R:** Reverse
- N:** Neutral
- D:** Normal driving (with overdrive on)
- M:** Manual shifting up or down shifting\*
- 3, 2:** Stronger engine braking
- L:** Maximum engine braking

#### OPERATION OF SELECTOR LEVER






- ★ Shift while pressing the brake pedal. (Ignition switch must be in the "ON" position.)

\*When the cruise control is being used, even if you downshift from "D" to "4", engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 191.




## 4. HEADLIGHT AND TURN SIGNAL SWITCH



### ● HEADLIGHT SWITCH

With the ignition OFF



|   |  |
|---|--|
|  | Parking, tail, license plate, side marker and instrument panel lights turn on. |
|  | Headlights also turn on.   |
|  | Automatic light control  |

With the engine started and parking brake released

|   |  |
|---|--|
|    | Parking, tail, license plate, side marker and instrument panel lights turn on. |
|   | Headlights also turn on at full intensity.                                     |
|  | Automatic light control  |

|   |                   |
|---|-------------------|
|  | High beam         |
|  | Headlight flasher |



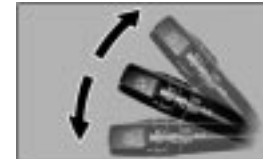


### ● TURN SIGNAL SWITCH

|   |                             |
|---|-----------------------------|
|  | Right or left turn          |
|  | Lane change (Right or left) |

## BASIC OPERATION – QUICK REFERENCE

---

### 5. WIPER SWITCH

|   |                        |
|---|------------------------|
|    | Mist wiper operation   |
|    | Intermittent operation |
|    | Low speed operation    |
|   | High speed operation   |
|  | Washer on              |