

SECTION 1 - 4

INSTRUMENTS AND CONTROLS

Interior equipment

Vanity mirrors	52
Interior lights	53
Personal lights	53
Ignition switch light	54
Clock	54
Cigarette lighter and ashtray	55
Power outlet	56
Rear console box	57
Glove box	57
Garage door opener	58
Cup holders	60
Coin box	61
Tie-down hooks	61
Floor mat	62
First-aid kit holder	63
Luggage stowage precautions	63

INTERIOR EQUIPMENT

 
VANITY MIRRORS



To use the vanity mirrors, swing the sun visor down and open the cover.

The vanity light comes on when you open the cover.


Sun visors

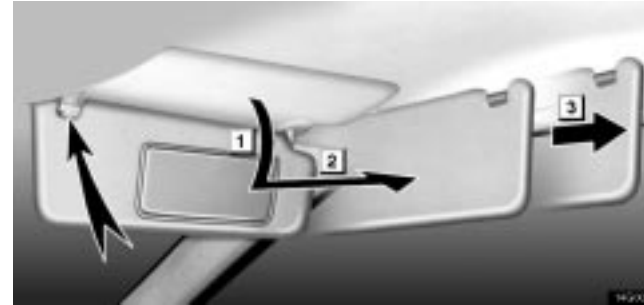

- 1 To block out glare from the front, swing the sun visor down.
- 2 To block out glare from the side, remove the sun visor from the hook and swing it to the side.
- 3 To block out glare coming obliquely from behind you, slide the visor backwards.

At this position, the vanity light does not come on.

 INTERIOR LIGHTS

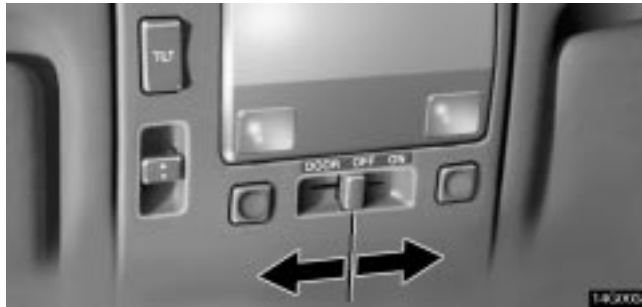

To turn on the interior light, slide the switch.

With the switch in the "DOOR" position, the light comes on when any of the doors are opened. After all the doors are closed, the light remains on for about 15 seconds and then goes out.

However, in the following cases, the light goes out immediately:

1. All the doors are closed when the ignition key is in "ACC" or "ON" position.
2. The ignition key is turned to "ACC" or "ON" when the light is still on.
3. All the doors are locked when the light is still on.
4. One door is closed with the lock button pushed in while the other doors are locked.

PERSONAL LIGHTS

Front



Rear



To turn on the personal light, push the switch. To turn it off, push the switch again.

INTERIOR EQUIPMENT

IGNITION SWITCH LIGHT



For easy access to the ignition switch, the ignition switch light comes on when any of the doors are opened.

The light remains on for about 15 seconds and goes out after all the doors are closed. However, the light goes out immediately when all the doors are locked or the ignition key is in the "ACC" or "ON" position.

CLOCK



 
The digital clock indicates the time with the ignition key at the "ACC" or "ON" position. To reset the hour, press the "H" button. To reset the minutes, press the "M" button. To adjust the time to the nearest hour, press the ":00" button.

For example, if the ":00" button is pressed when the time is between 9:30 – 9:59 or between 10:01 – 10:29, the time will change to 10:00.

With the tail lights on, the background brightness of the time indication will be reduced.

If the electrical power source has been disconnected from the clock, the time display will automatically be set to 1:00 (one o'clock).

CIGARETTE LIGHTER AND ASHTRAY

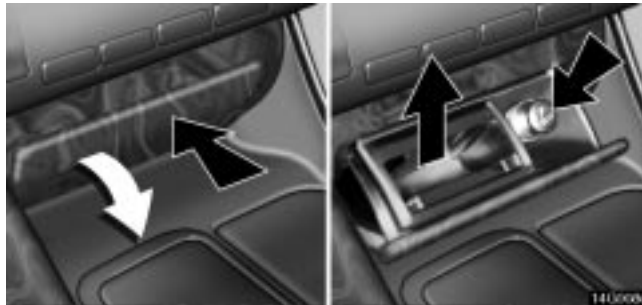

► Front cigarette lighter and ashtray

To use the cigarette lighter and ashtray, first push against the ashtray cover. Then when the ashtray opens out, press in the cigarette lighter. When it becomes heated, it automatically pops out ready for use.

Do not hold the cigarette lighter pressed in.

If the engine is not running, the ignition key must be in the "ACC" position.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in completely.

To remove the ashtray, just pull it up.

Use a Lexus genuine cigarette lighter or equivalent for replacement.



► Rear ashtray

To use the ashtray, pull on the lid.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in or close the lid completely.

To remove the ashtray, just pull it up.

 


CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always close the ashtray completely after using.

INTERIOR EQUIPMENT

POWER OUTLET

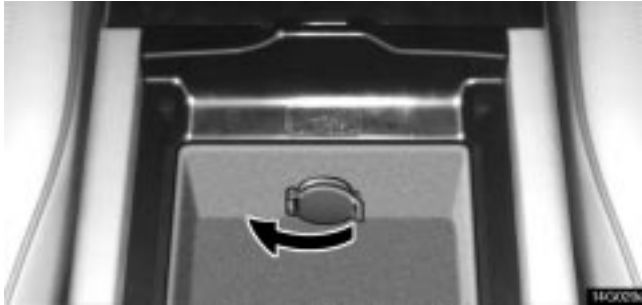

The power outlet is designed for power supply for car accessories.

 
The ignition key must be in the "ACC" or "ON" position for the power outlet to be used.

NOTICE

- *To prevent the fuse from being blown, do not use the electricity over the total vehicle capacity of 12V 3.5A.*
- *To prevent the battery from being discharged, do not use the power outlet longer than necessary when the engine is not running.*

- *Close the power outlet lid when the power outlet is not in use. Inserting a foreign object other than the appropriate plug that fits the outlet, or allowing any liquid into the outlet may cause electrical failure or short circuits.*


REAR CONSOLE BOX

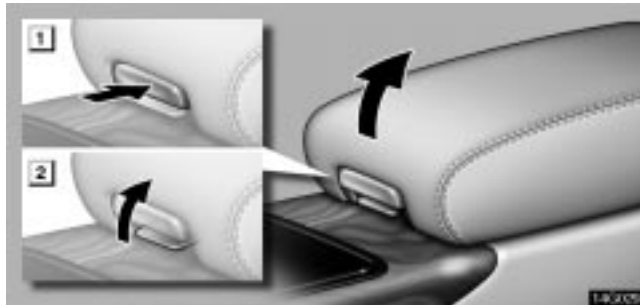

► **1** For upper box **2** For lower box

To use the rear console box, open as shown in the illustration.

 GLOVE BOX

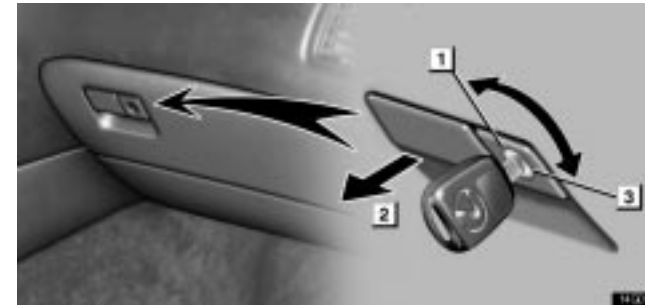

► **1** Unlock **2** Open **3** Lock

To open the glove box door, pull the lever. To lock the glove box door, insert the master key and turn it clockwise.

With the tail lights on, the glove box light will come on when the glove box door is open.

⚠ CAUTION

 
To reduce the chance of injury in case of an accident or a sudden stop, always keep the glove box door closed while driving.

INTERIOR EQUIPMENT

GARAGE DOOR OPENER

The garage door opener is manufactured under license from **HomeLink®** and can be programmed to operate garage doors, estate gates, security lighting, etc.

(a) Programming **HomeLink®**

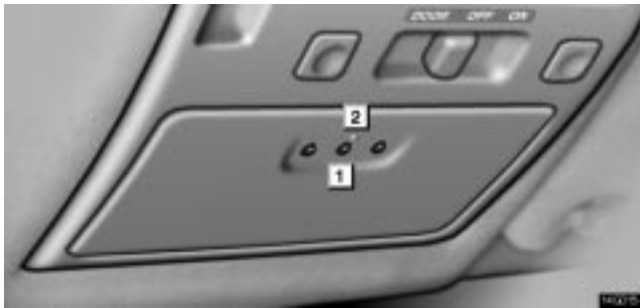

► **1** Buttons **2** Indicator light

The **HomeLink®** has 3 buttons and can be programmed to operate 3 separate devices.

Prepare the **HomeLink®** for programming by erasing all codes or the memorized data programmed by the former owner. Follow the procedure in "(c) Erasing the garage door opener memory".

1. Decide which one of the 3 buttons you want to program. Push and hold down the button for about 20 seconds until the indicator light begins to flash. While holding this button, follow steps "2" and "3".

2. Bring the hand held garage door opener within about 25 mm (1 in.) of the button being programmed and push the button on the hand held garage door opener. The signal from the hand held garage door opener is sent to the vehicle's opener.

3. When the frequency and code is registered, the indicator light flashes rapidly. At this point, you can release both buttons.

4. To program the remaining buttons, repeat steps "1" through "3".

If you want to replace an existing program with a new program, select the button you want to program. Follow the procedure from step 1.

If the transmitter has a "rolling code feature", it is necessary to program the in-garage receiver after programming **HomeLink®.**

1. Locate the "training" or "learning" button on the in-garage receiver and push and release this button. Location of the button may vary by the garage door opener manufacturer.

2. Firmly push and release the trained **HomeLink®** button 2 times (some garage door manufacturer may require you to push the **HomeLink®** button up to 3 times) to complete the process.

The garage door should now operate when the **HomeLink®** button is pushed.

Do not use the **HomeLink**[®] universal transmitter with any garage door opener that lacks the safety stop and reverse feature as required by Federal Safety Standards. This includes any garage door opener model manufactured before April 1, 1982.

 **CAUTION**

When programming or operating the garage door opener, make sure there is no one around the moving door. It is dangerous if someone is caught.

(b) Operating the garage door opener

Push the appropriate button to activate the garage door opener. The indicator light comes on. The garage door opener continues to send the signal for up to 20 seconds as long as the button is pushed.

(c) Erasing the garage door opener memory

Push and hold down the 2 outside buttons for about 20 seconds until the indicator light flashes. All memorized data will be erased.

FCC ID: CB2V94800
CANADA: 1763 102 264

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. **WARNING: This transmitter has been tested and complies with FCC and DOC/MDC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.**

INTERIOR EQUIPMENT

CUP HOLDERS



► **Front**

To use the cup holder, push the cup holder lid.

You can use it as an accessory box by removing the holder inside.

CAUTION

- Do not place anything else other than cups or drink-cans on the cup holder, as such items may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the cup holder closed when not in use.



► **Rear**

To use the cup holder, push the cup holder portion of the center armrest in the rear seat.

The cup holder is designed for holding cups or drink-cans securely.

CAUTION

- Do not place anything else other than cups or drink-cans on the cup holder, as such items may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or in an accident.
- To reduce the chance of injury in case of an accident or sudden stop while driving, keep the cup holder closed when not in use.

COIN BOX



To use the coin box, push against the coin box cover.

 **CAUTION**

Keep the coin box closed when not in use.

TIE-DOWN HOOKS



To secure your luggage, use the tie-down hooks as shown above.

See "Luggage stowage precautions" on page 63 for precautions in loading luggage.

 **CAUTION**

To avoid personal injury, keep the tie-down hooks stored under the carpet when not in use.

INTERIOR EQUIPMENT

FLOOR MAT



Use a floor mat of the correct size.

 
If the floor carpet and floor mat have a hole, then it is designed for use with a locking clip. Fix the floor mat with locking clip into the hole in the floor carpet.



CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

FIRST-AID KIT HOLDER

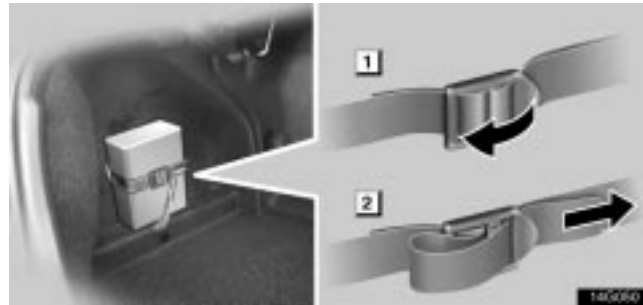

► **1 To loosen** **2 To tighten**

This belt is designed to hold the first-aid kit.

To loosen: Pull the buckle forward.

To tighten: Pull on the belt.

Make sure the first-aid kit is securely held.

LUGGAGE STORAGE PRECAUTIONS

When stowing luggage or cargo in the vehicle, observe the following:

- Put luggage or cargo in the trunk when at all possible. Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.

CAUTION

- **Do not place anything on the package tray behind the rear seatback. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.**
- **Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.**

NOTICE

Do not load the vehicle beyond the vehicle capacity weight specified on the tire pressure label.

