


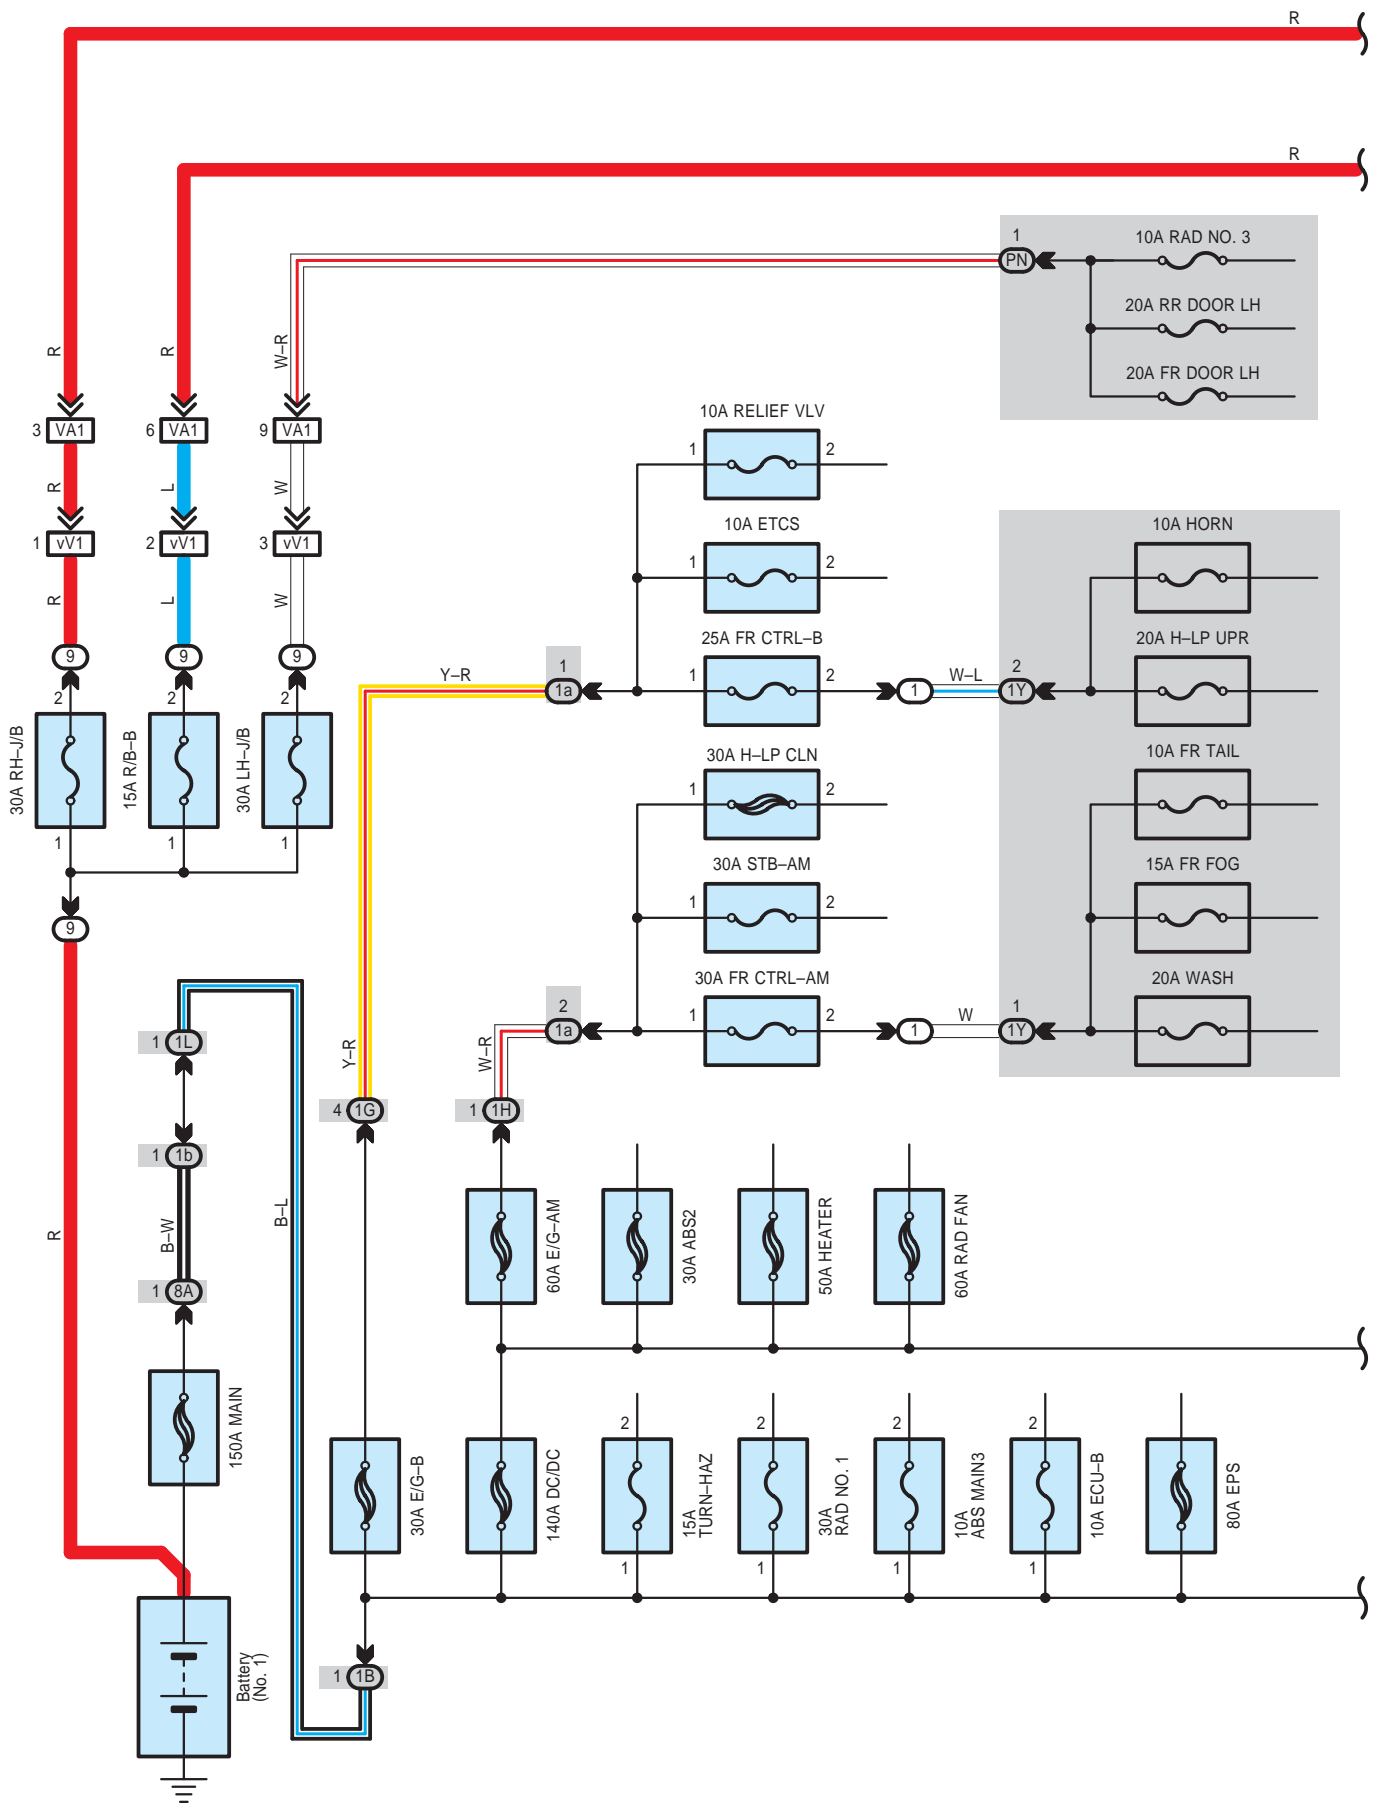
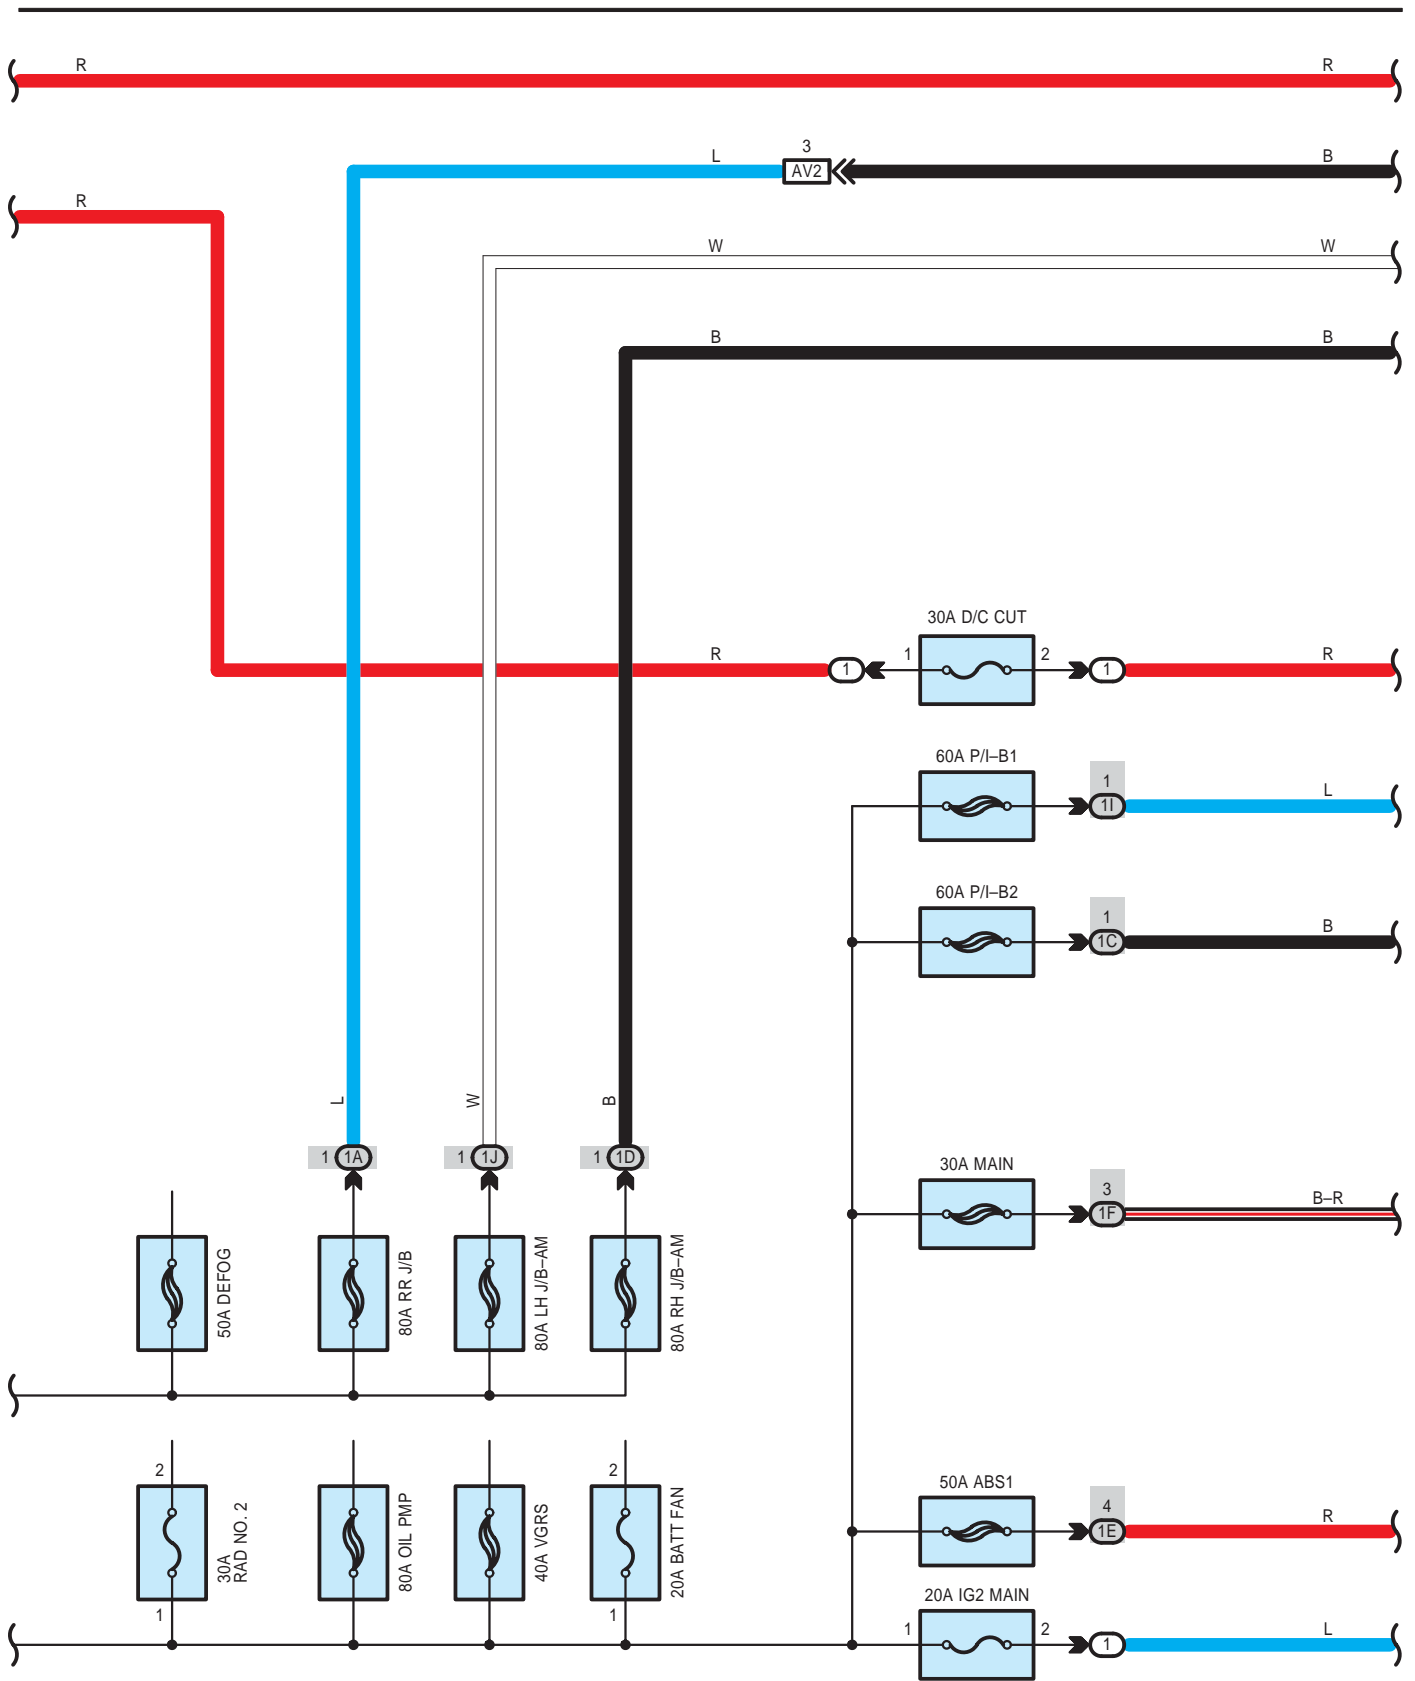
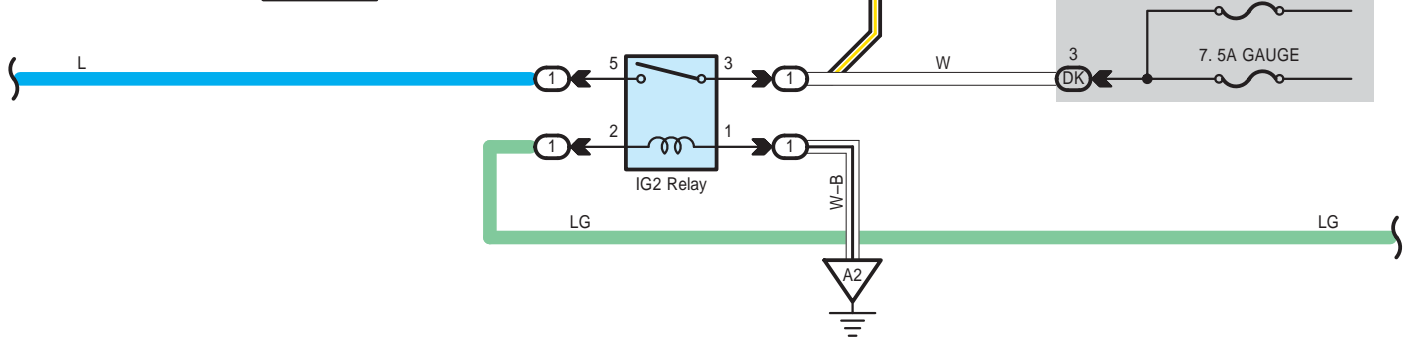



Power Source

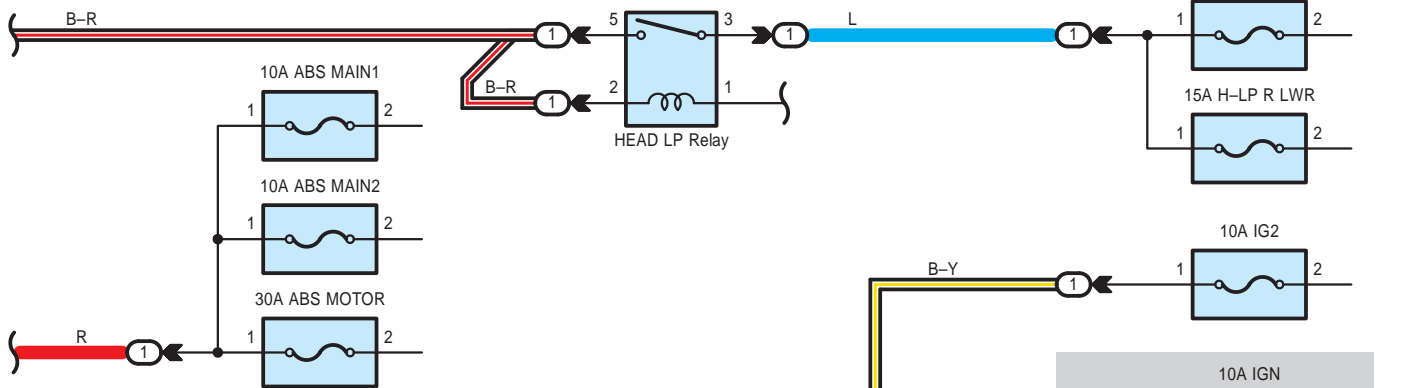

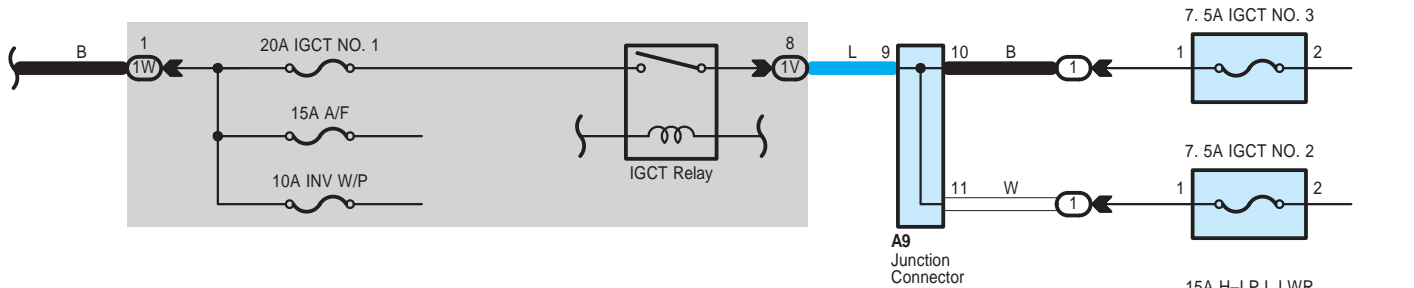


Power Source

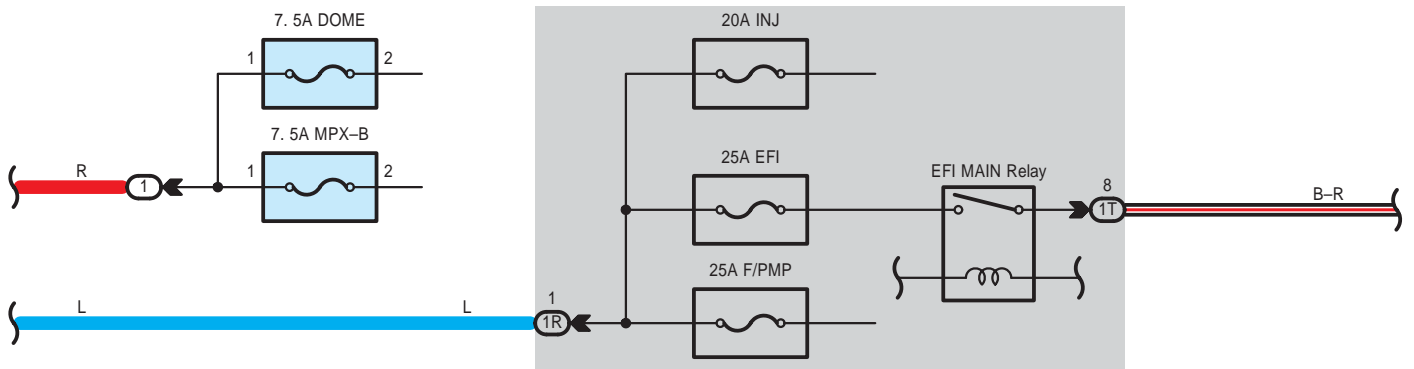


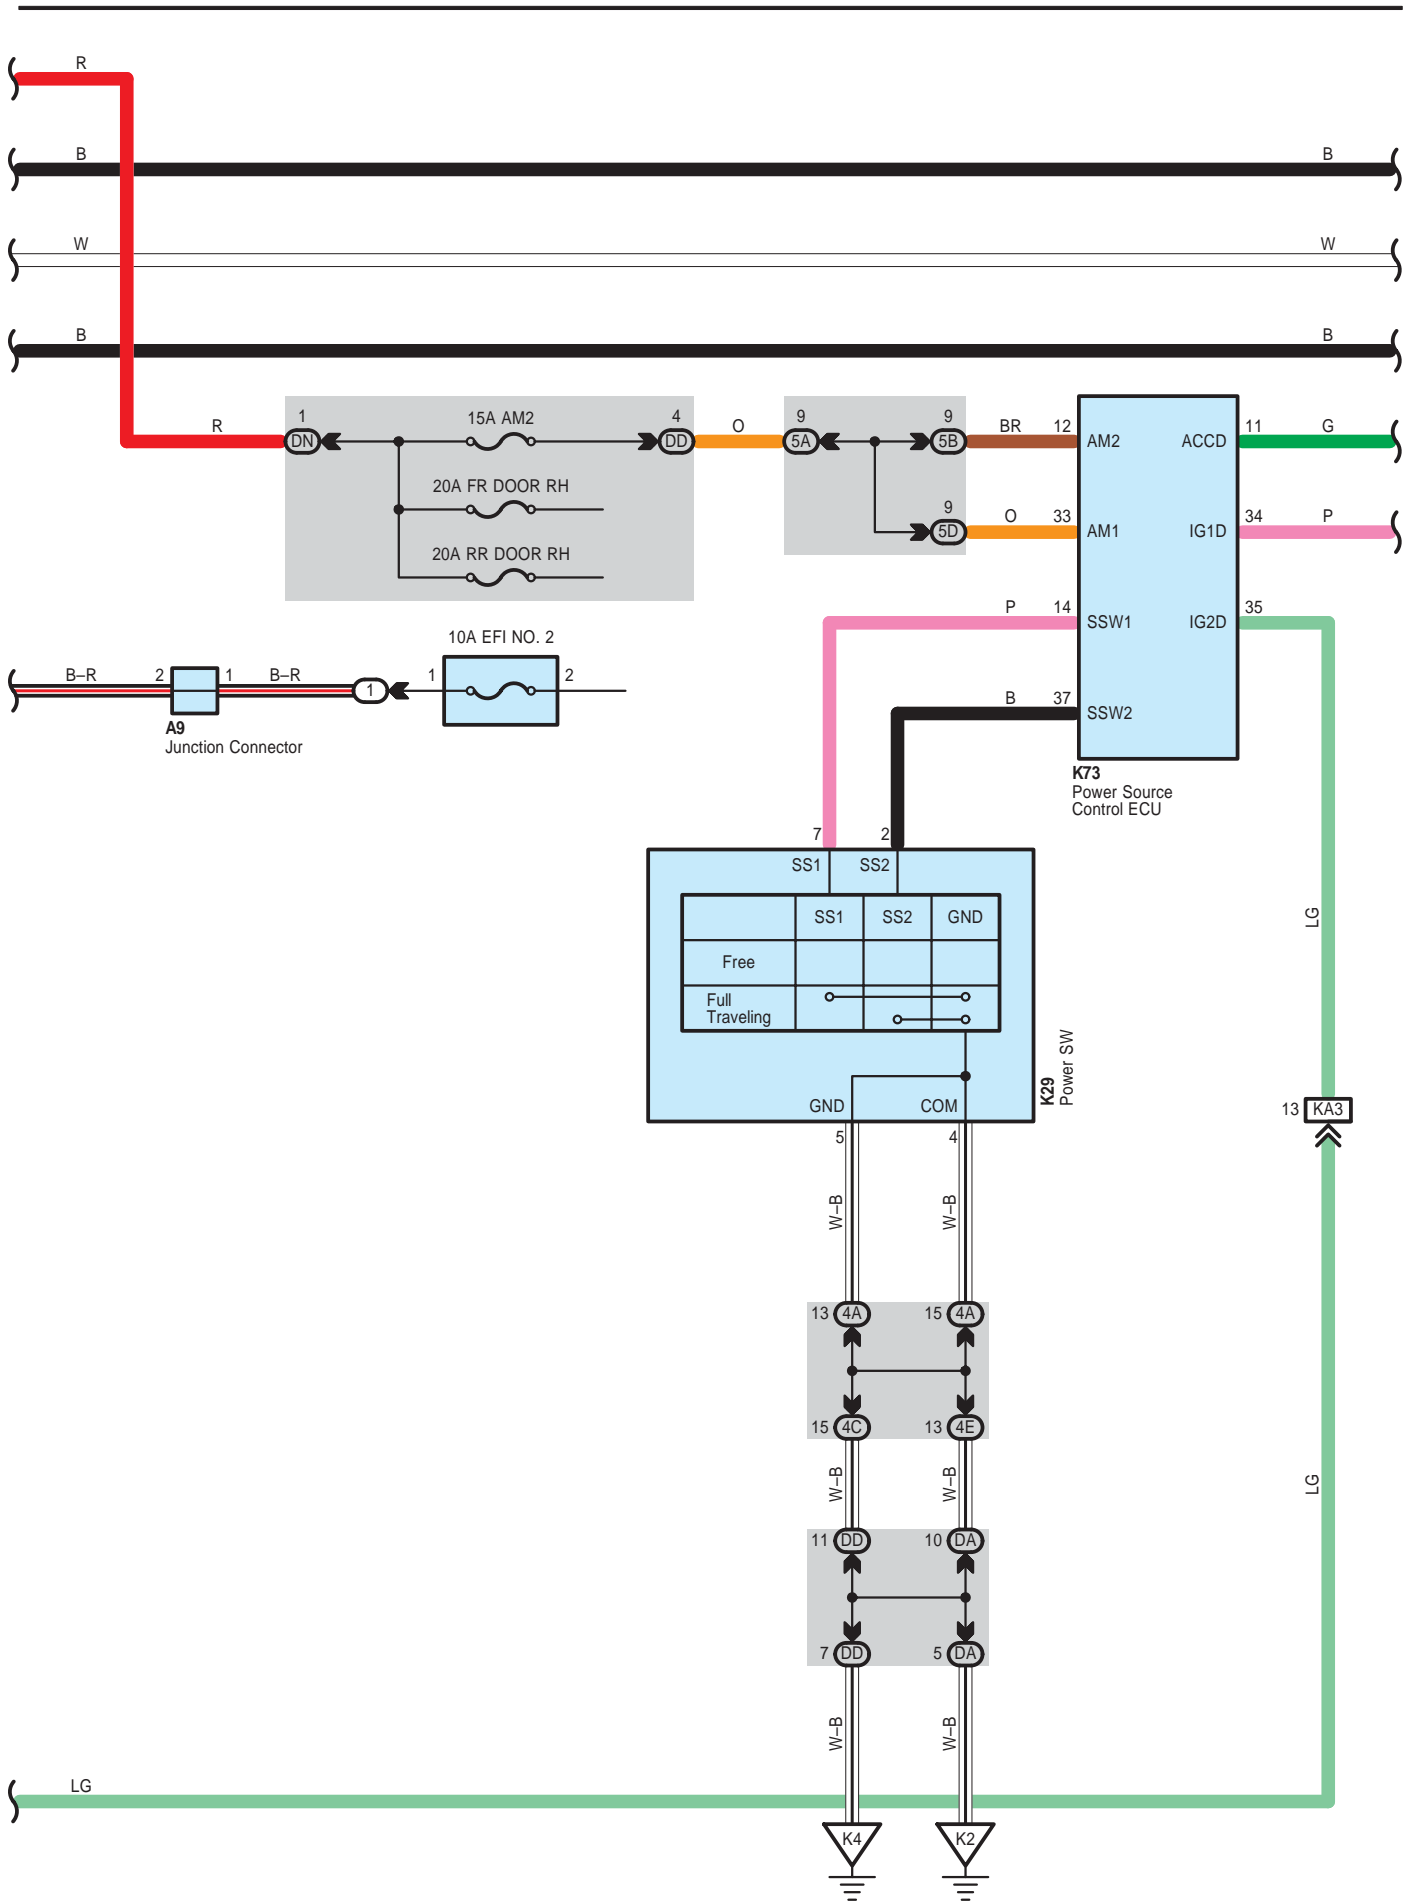

LEXUS GS 450h (EM02D0U)


Power Source

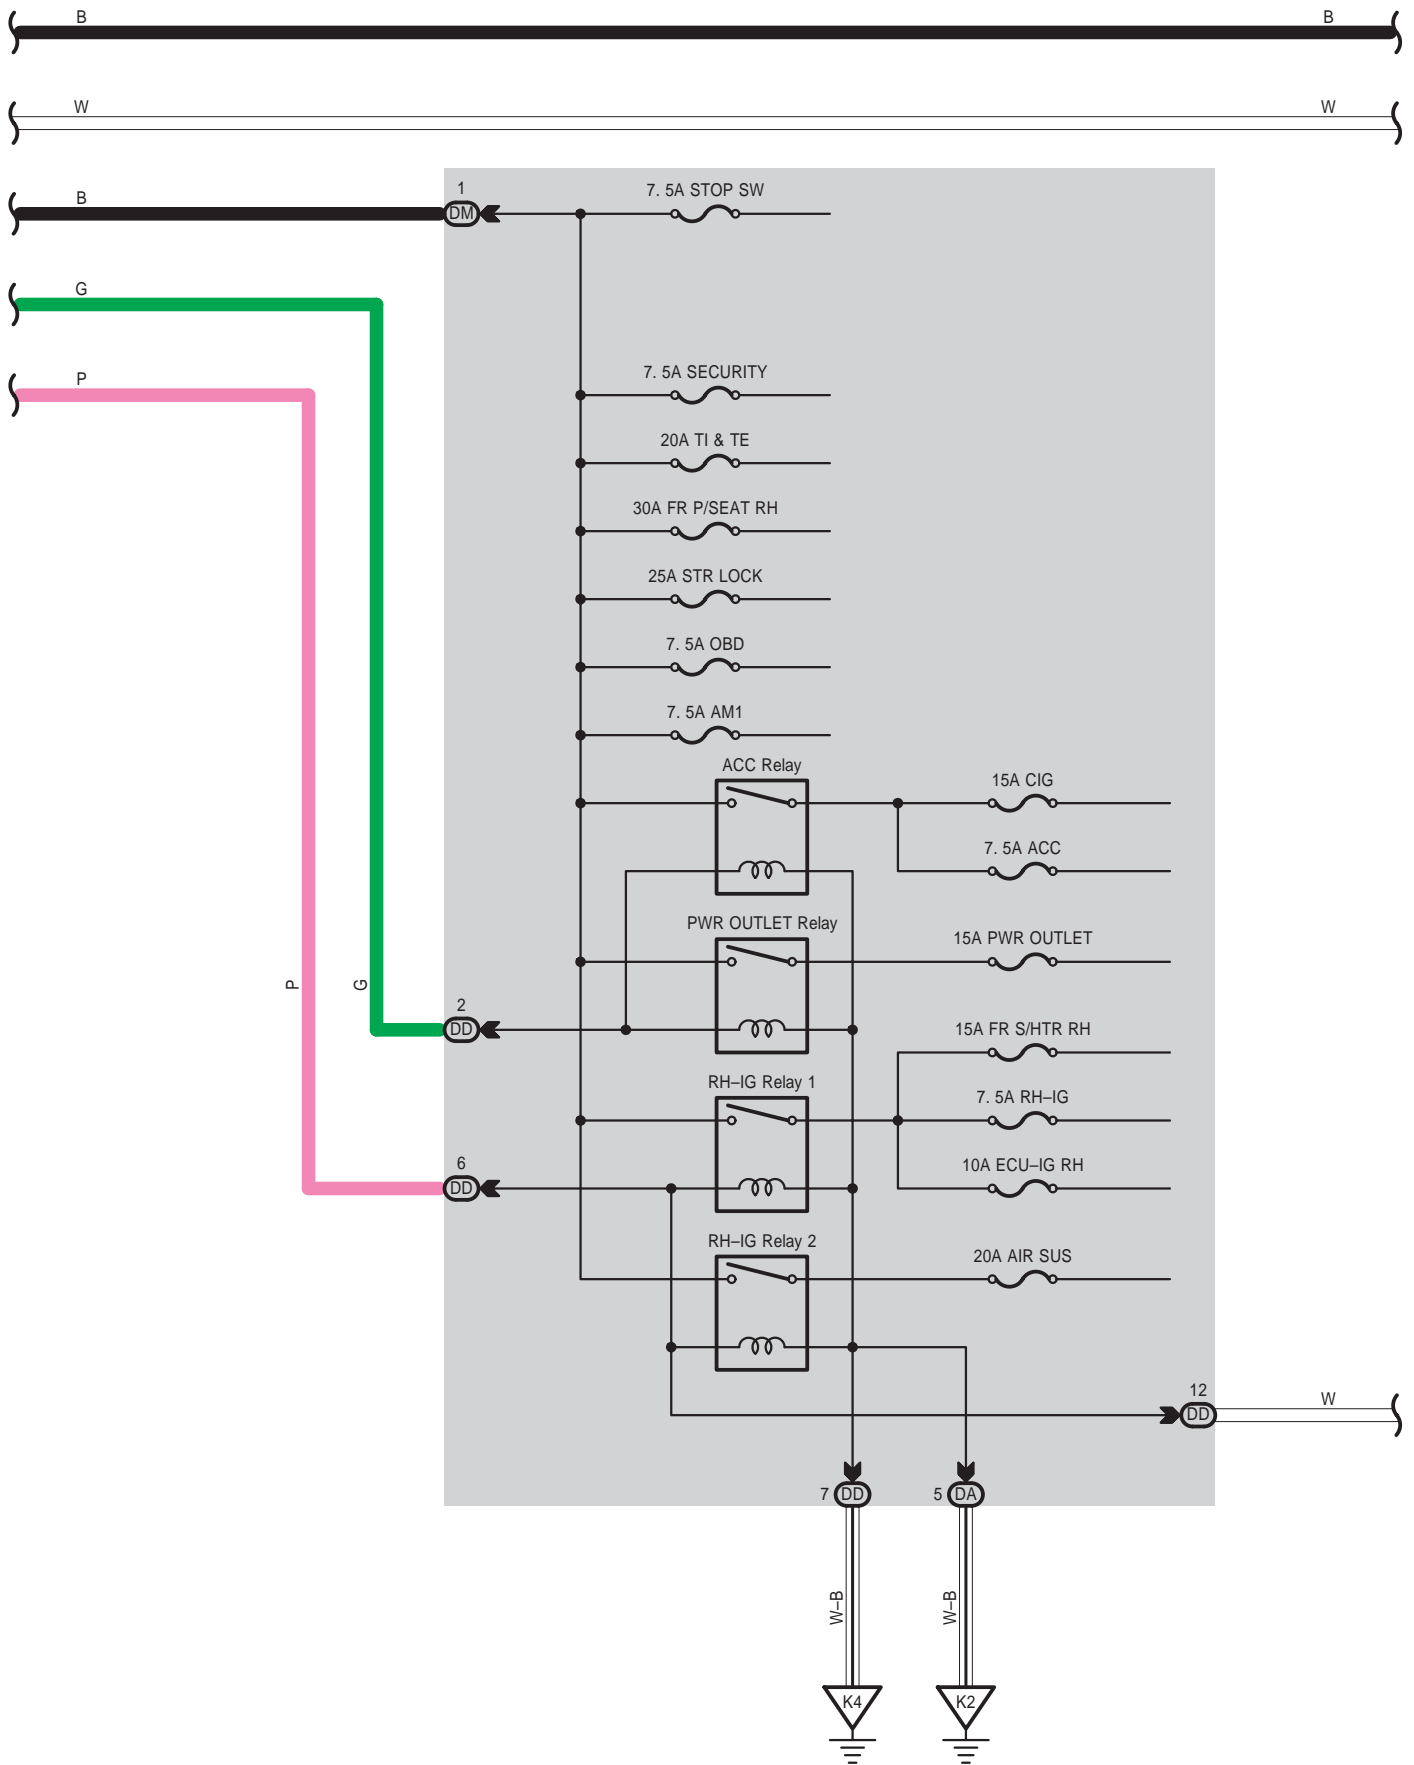

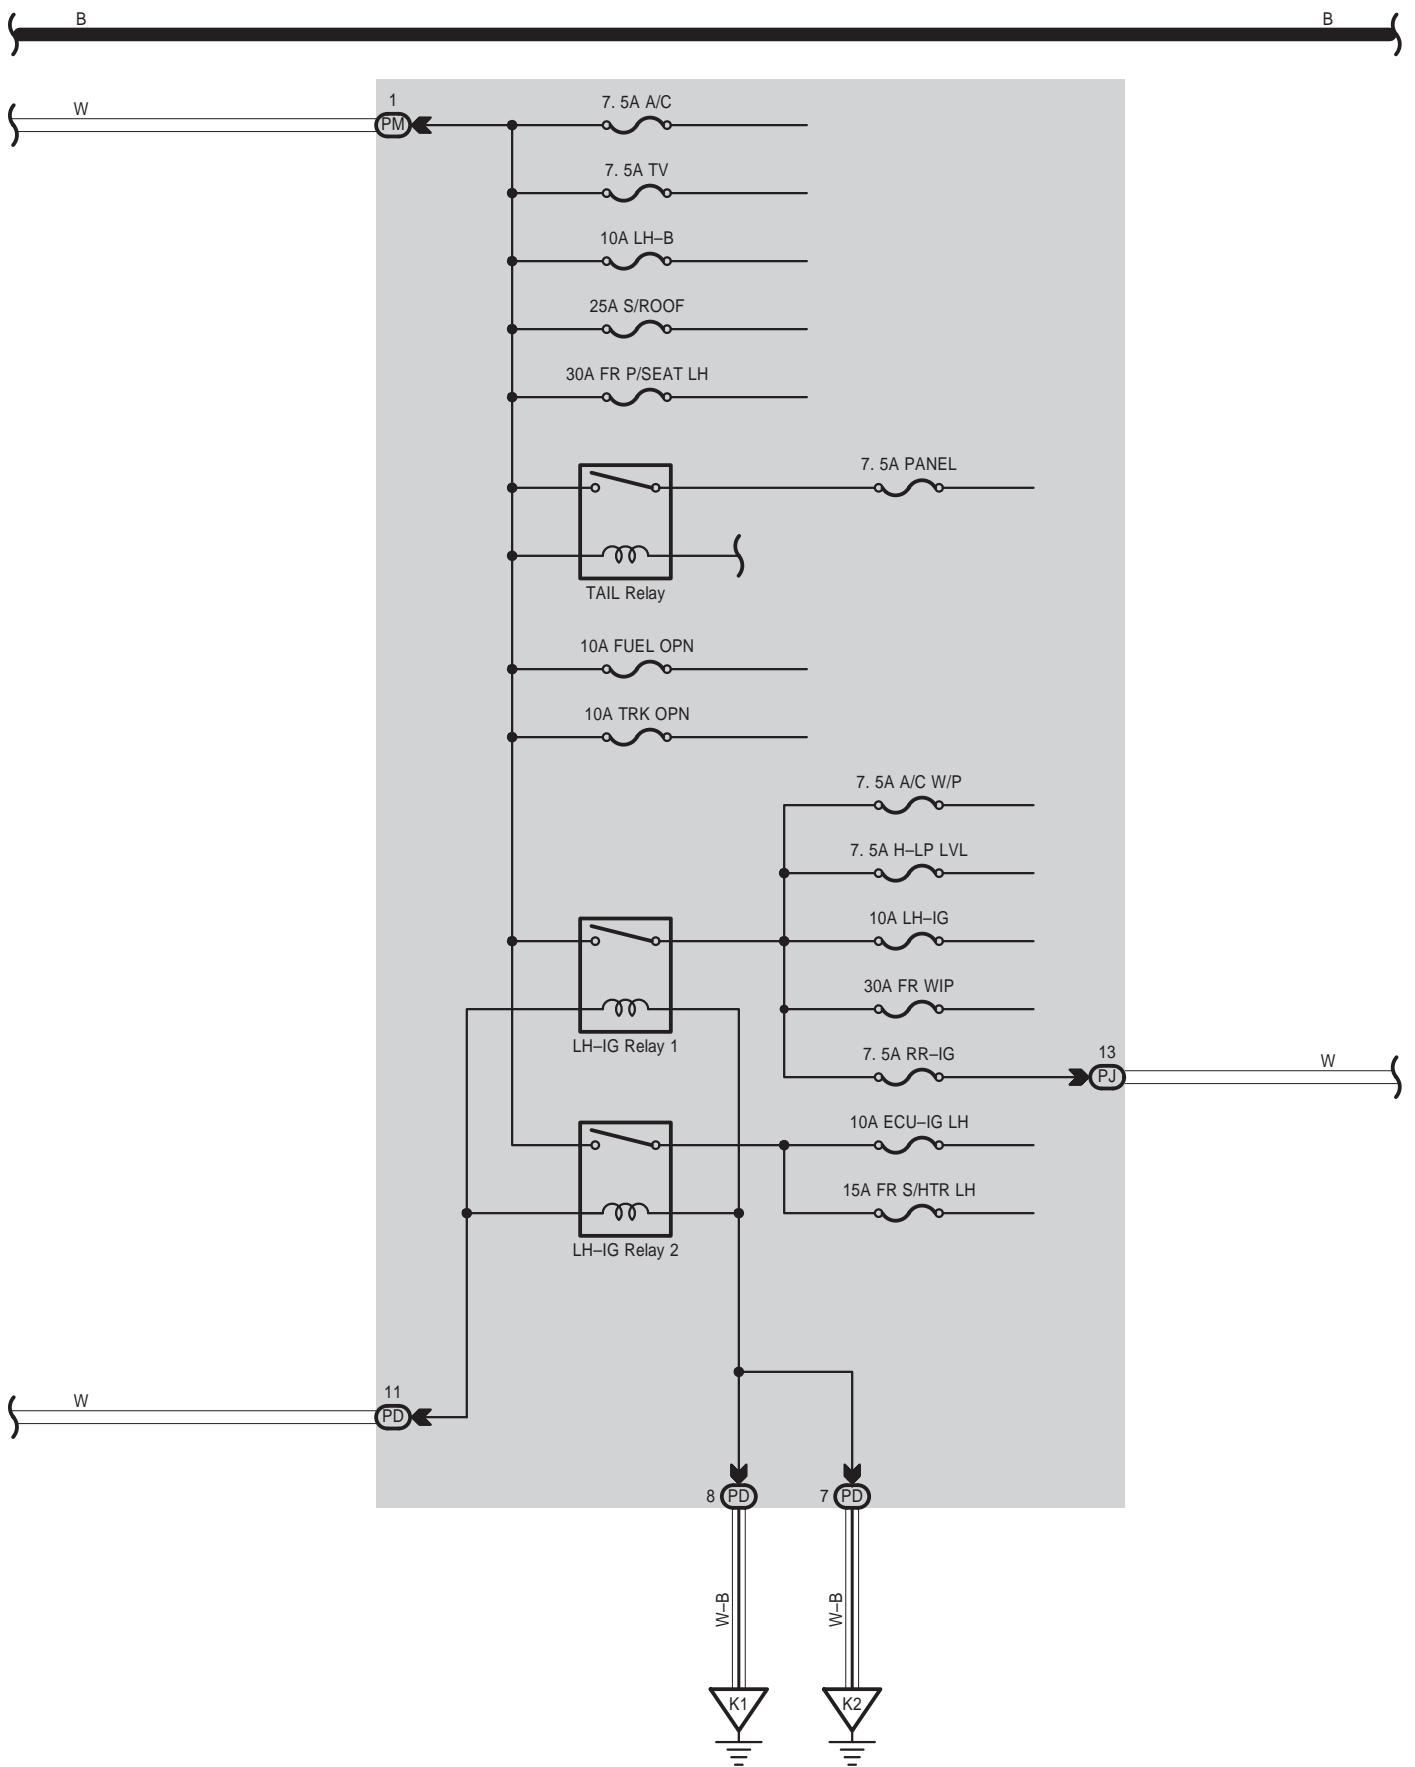

LEXUS GS 450h (EM02D0U)

Power Source

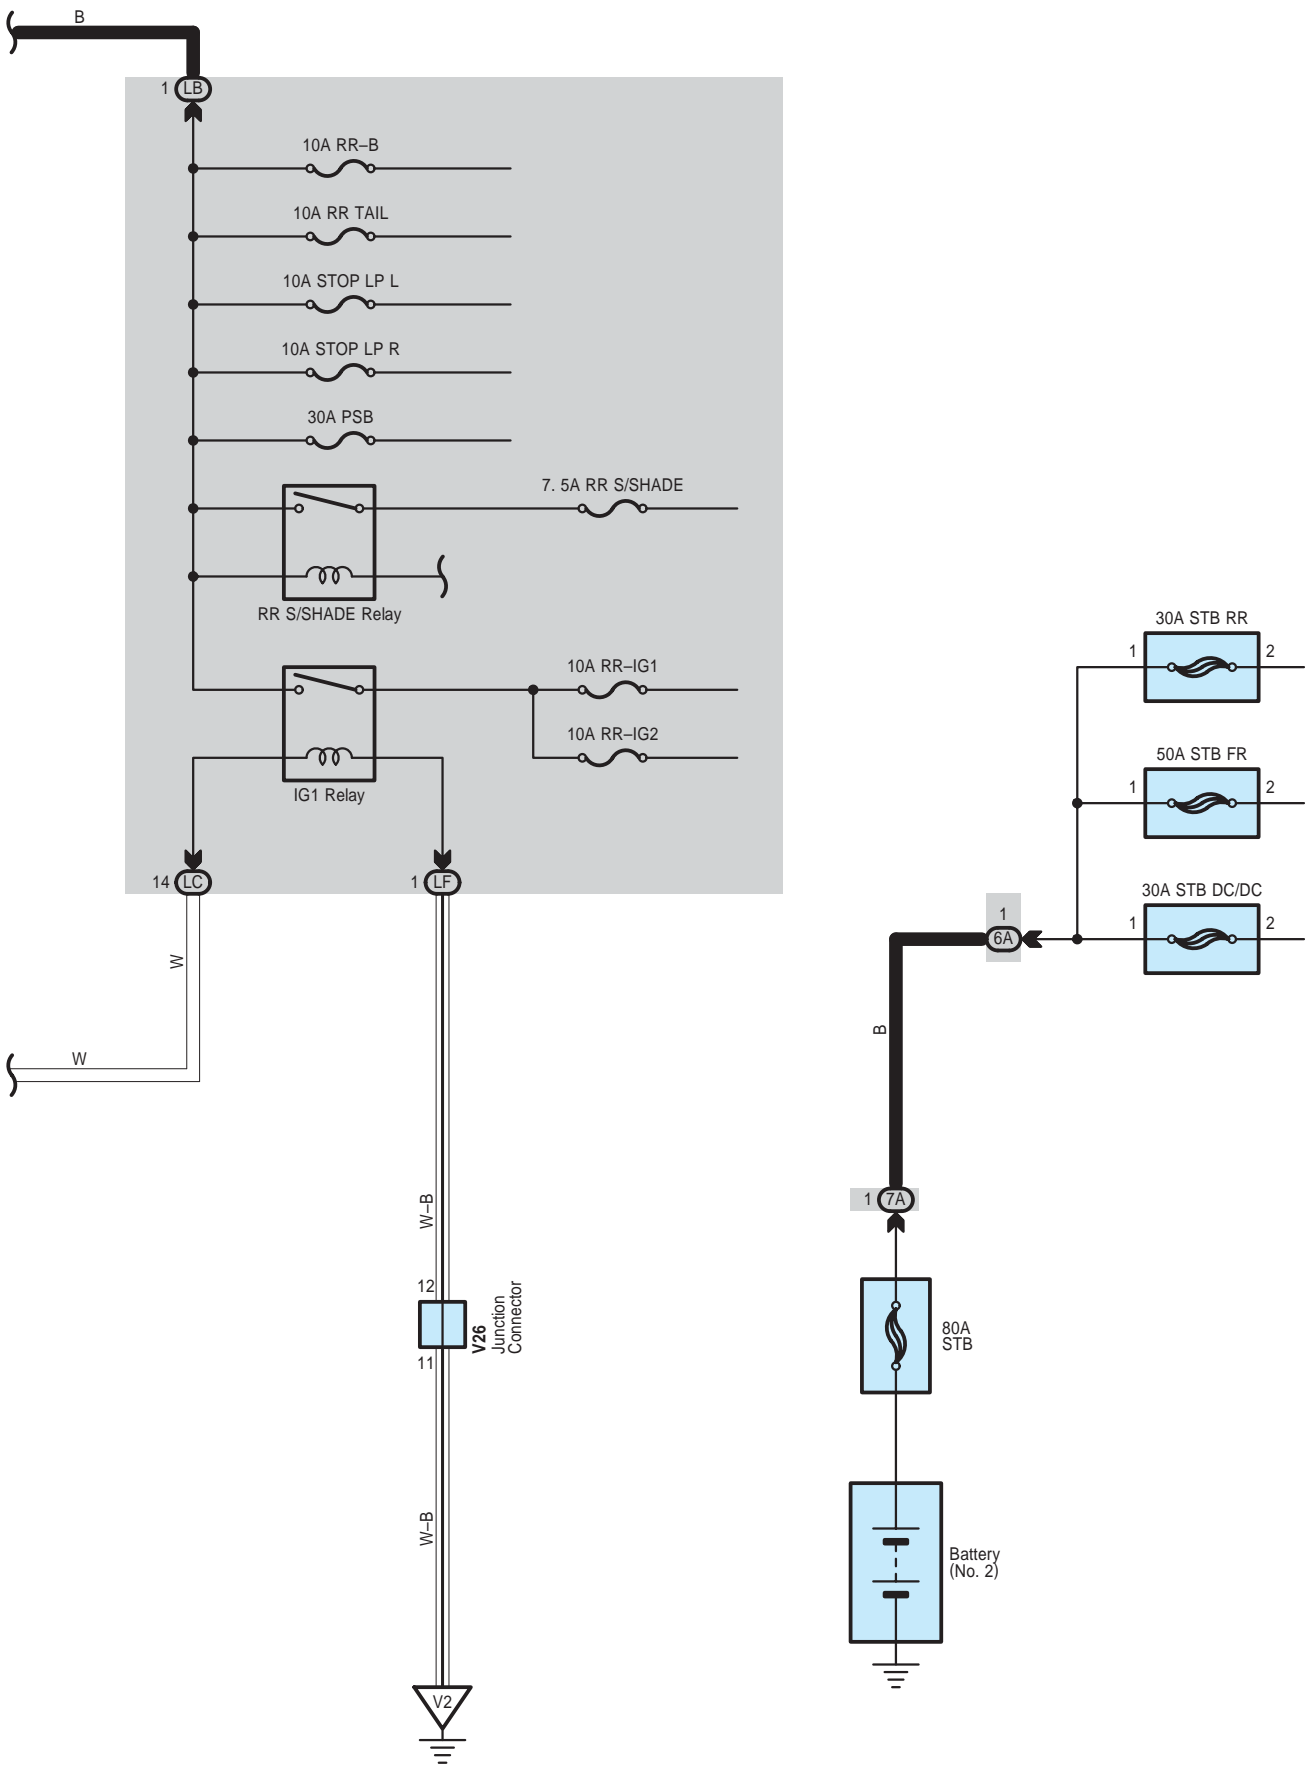

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	80	K73	86		
K29	85	V26	91		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)
9	44	Fuse Block (Luggage Room Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	27	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
1B		
1C		
1D		
1E		
1F		
1G		
1H		
1I		
1J		
1L		
1R	25	
1T		
1V	28	
1W		
1Y	29	
1a	32	
1b	33	Floor No.4 Wire and Engine Room J/B No.1 (Engine Compartment left)
4A	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4C		
4E		
5A	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5B		
5D		
6A	43	Luggage Room No.4 Wire and Luggage Room R/B No.6 (Luggage Room Center)
7A	45	Luggage Room No.4 Wire and Fusible Link Block (No.1) (Luggage Room Center)
8A	46	Floor No.4 Wire and Fusible Link Block (No.2) (Luggage Room Left)
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
DK	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
DM		
DN		
LB	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel)
LC		
LF		
PD	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PM	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)
PN		

Power Source

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AV2	97	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)
KA3	97	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
VA1	97	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)
vV1	98	Floor No.3 Wire and Floor No.2 Wire (Left Side Of the Luggage Room)

 : Ground Points

Code	See Page	Ground Points Location
A2	96	Front Left Fender Apron
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
V2	98	Roof Side Inner Panel LH

