


E83(B)
Engine Control Module

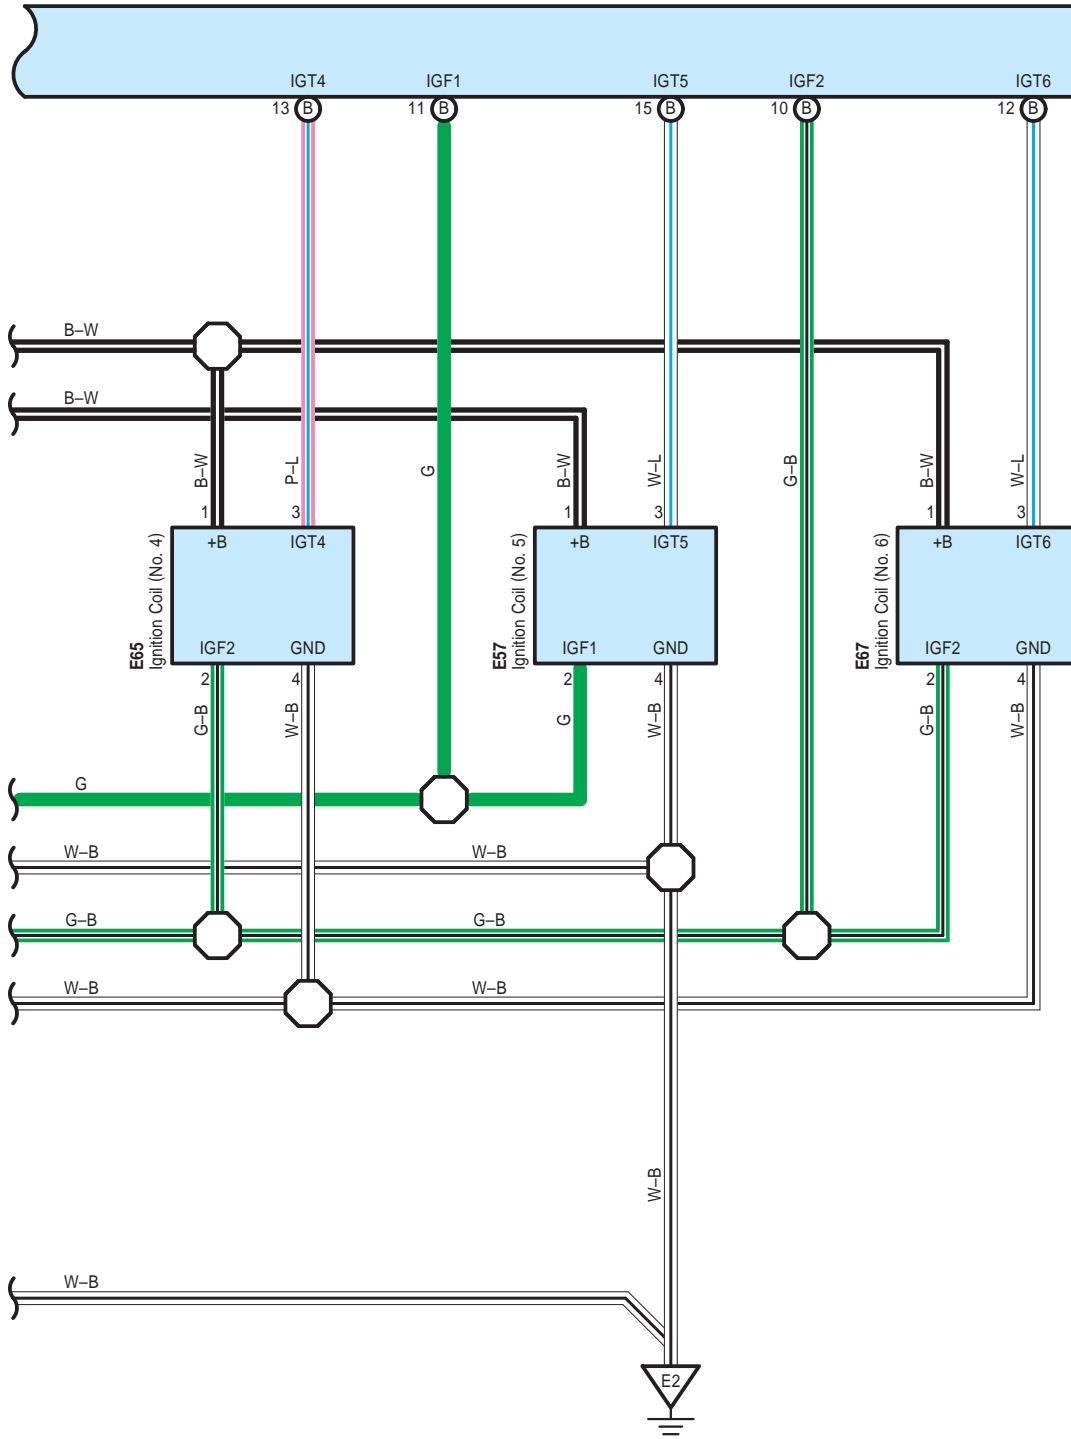

Ignition

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A8	A	80	E33	81	E63	81		
E9		81	E55	81	E65	81		
E10	B	81	E56	81	E67	81		
E19		81	E57	81	E83	B	81	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AE1	96	Engine Room Main Wire and Engine Wire (Inside of the ECU Box)

▽ : Ground Points

Code	See Page	Ground Points Location
E1	96	Rear Side of the Left Cylinder Head
E2	96	Rear Side of the Right Cylinder Head

