



# Data Link Connector 3

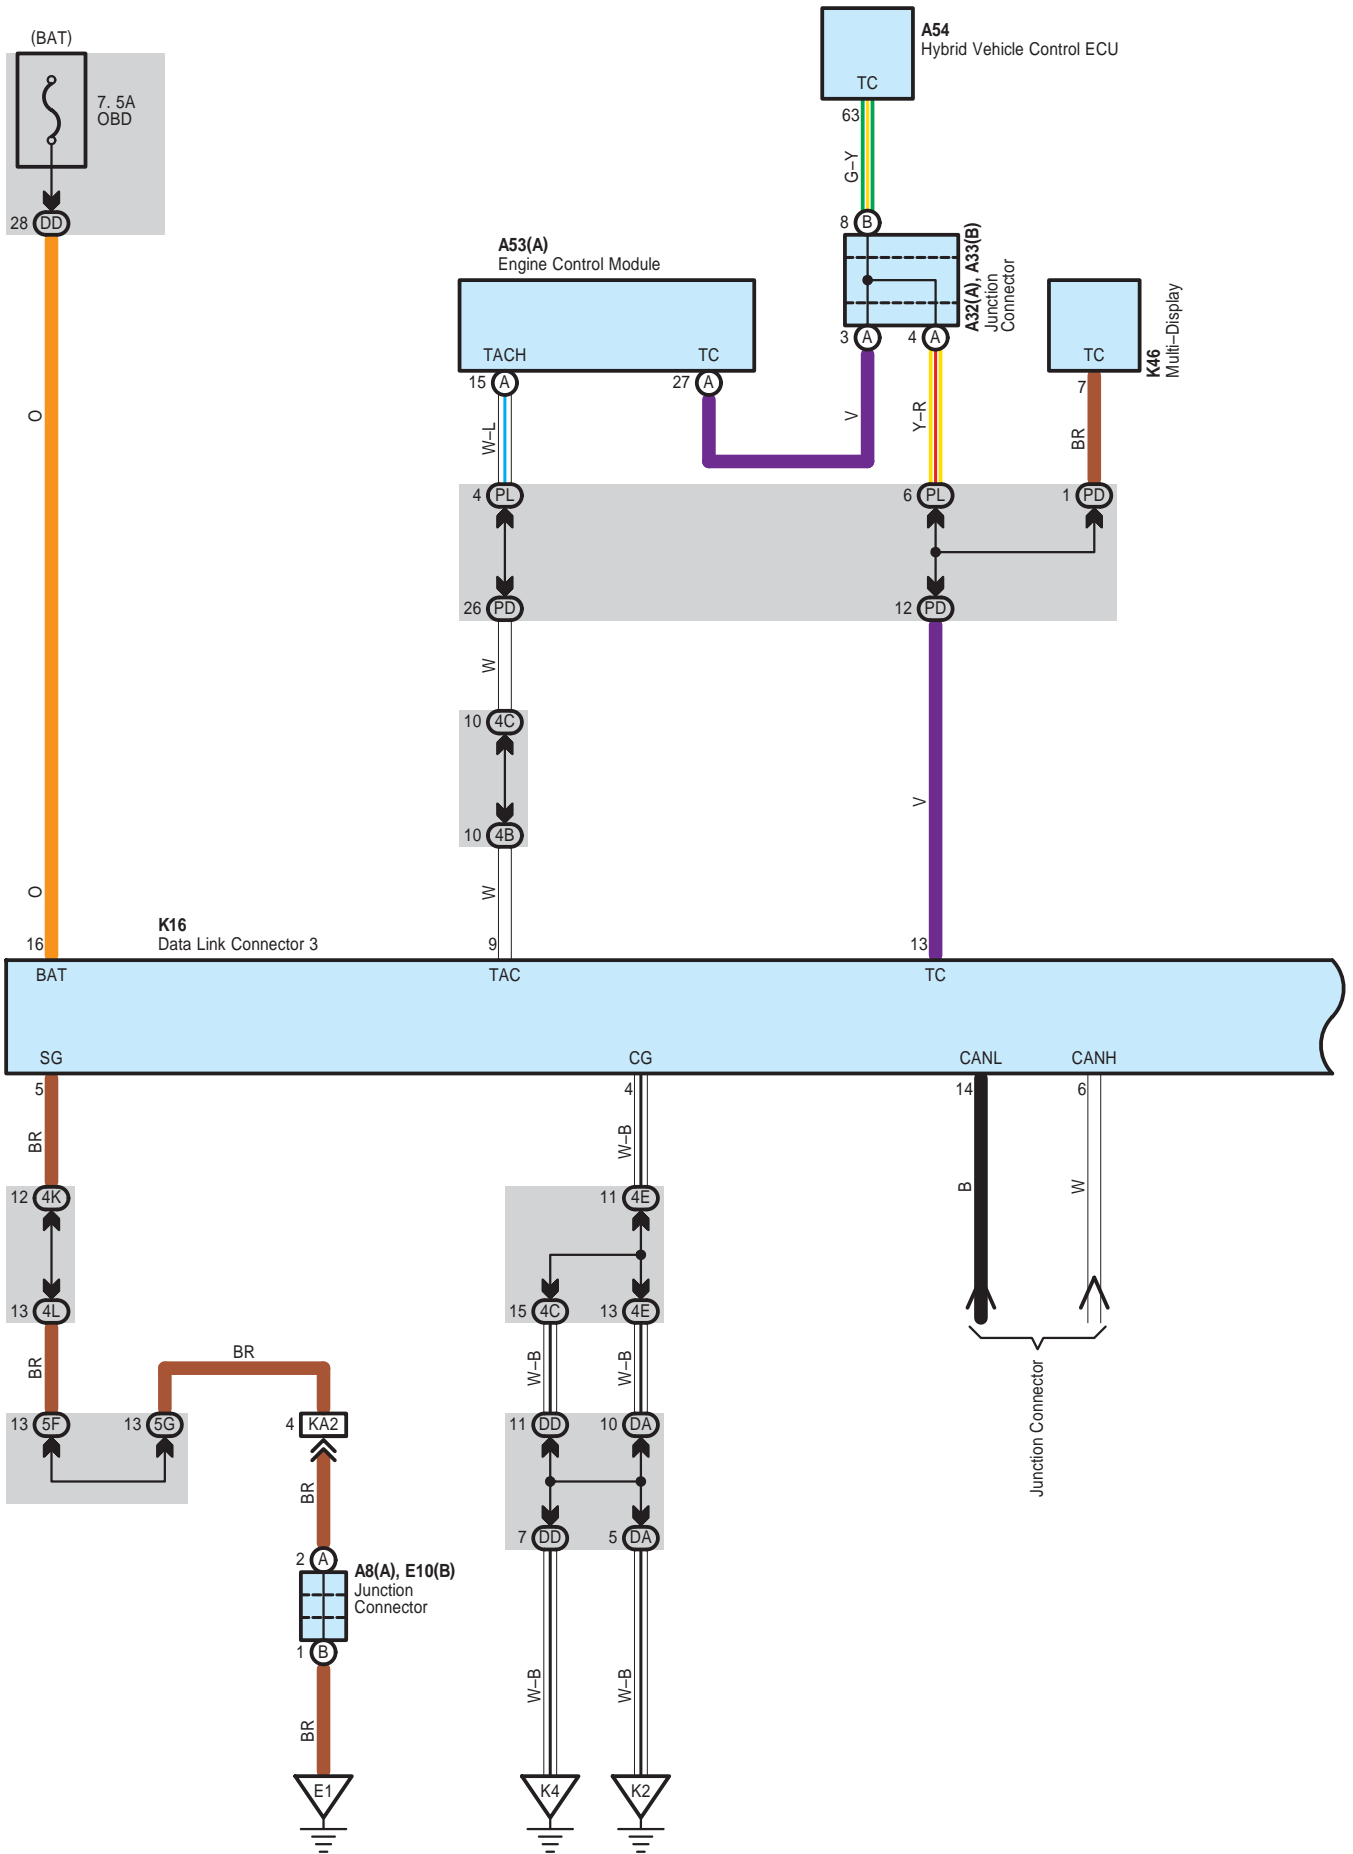

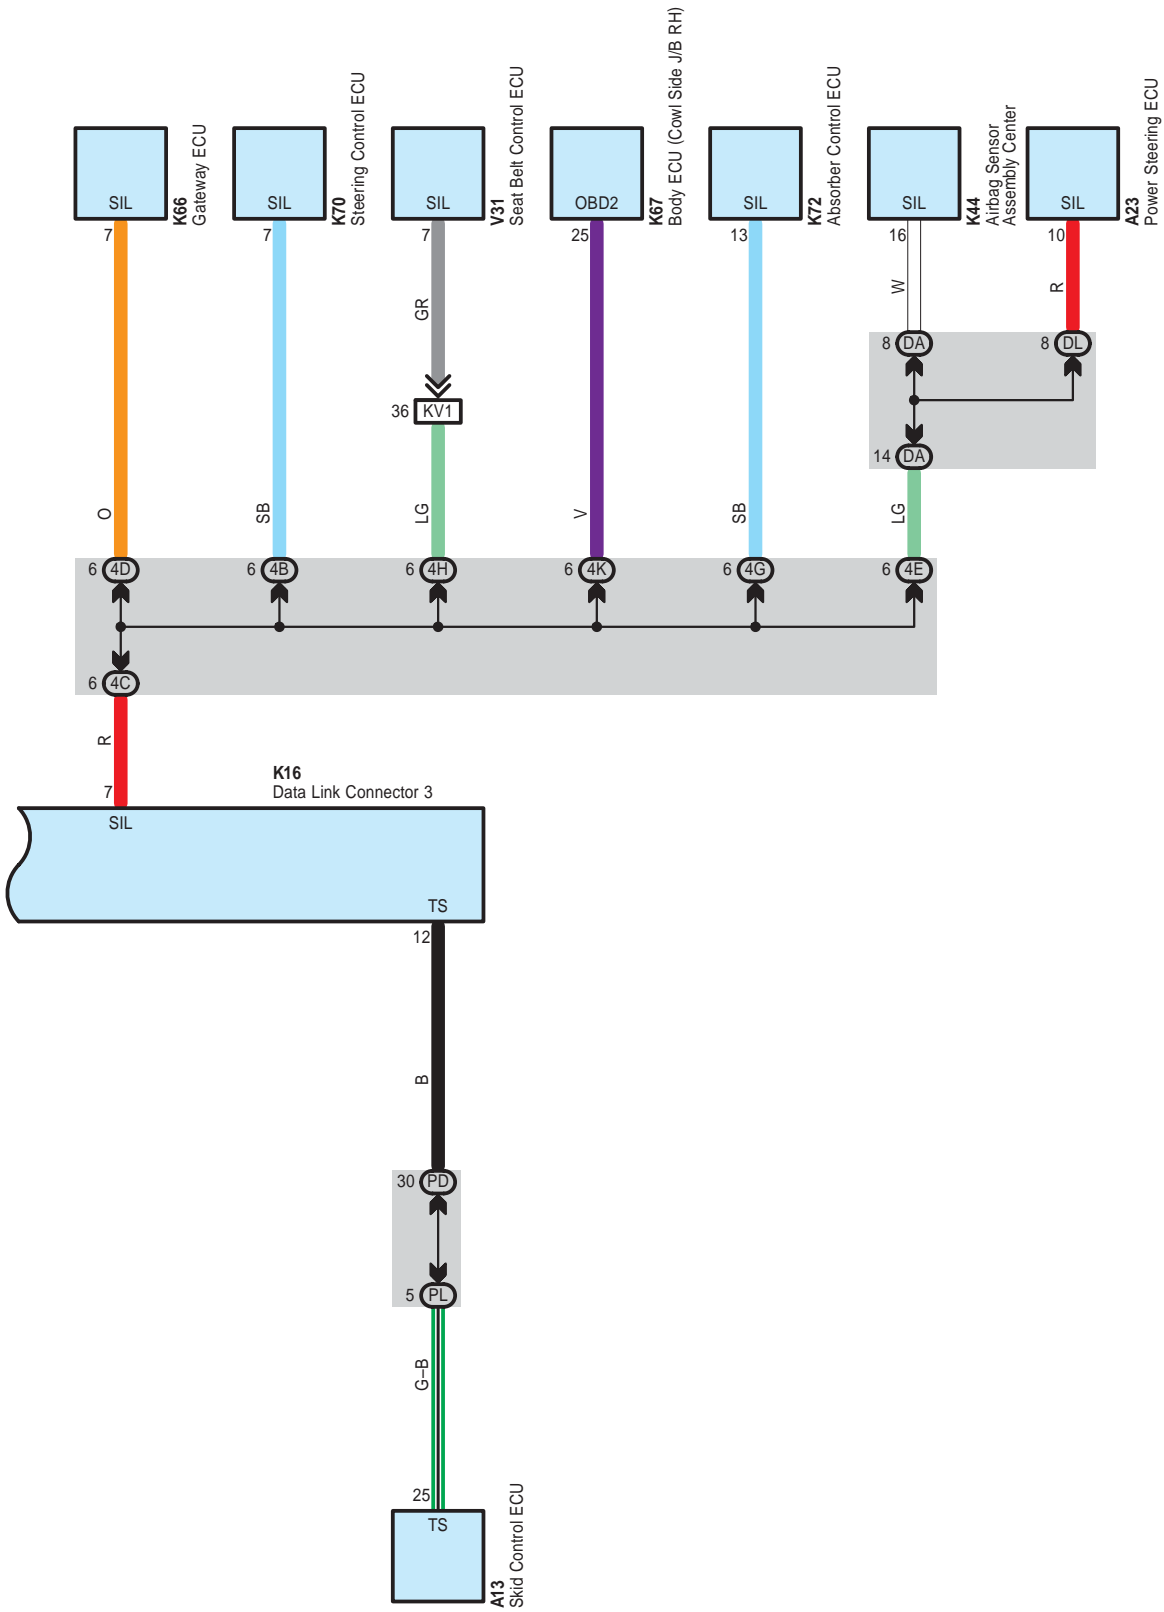

## Data Link Connector 3

### : Parts Location

Code		See Page	Code		See Page	Code		See Page
A8	A	80	A54	80	K67	86		
A13		80	E10	B	K70	86		
A23		80	K16	85	K72	86		
A32	A	84	K44	86	V31	91		
A33	B	84	K46	86				
A53	A	80	K66	86				

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4B	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4C		
4D		
4E		
4G		
4H		
4K		
4L		
5F	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5G		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
DL	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
PD	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PL	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)

### : Ground Points

Code	See Page	Ground Points Location
E1	96	Rear Side of the Left Cylinder Head
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel

