


Turn Signal and Hazard Warning Light

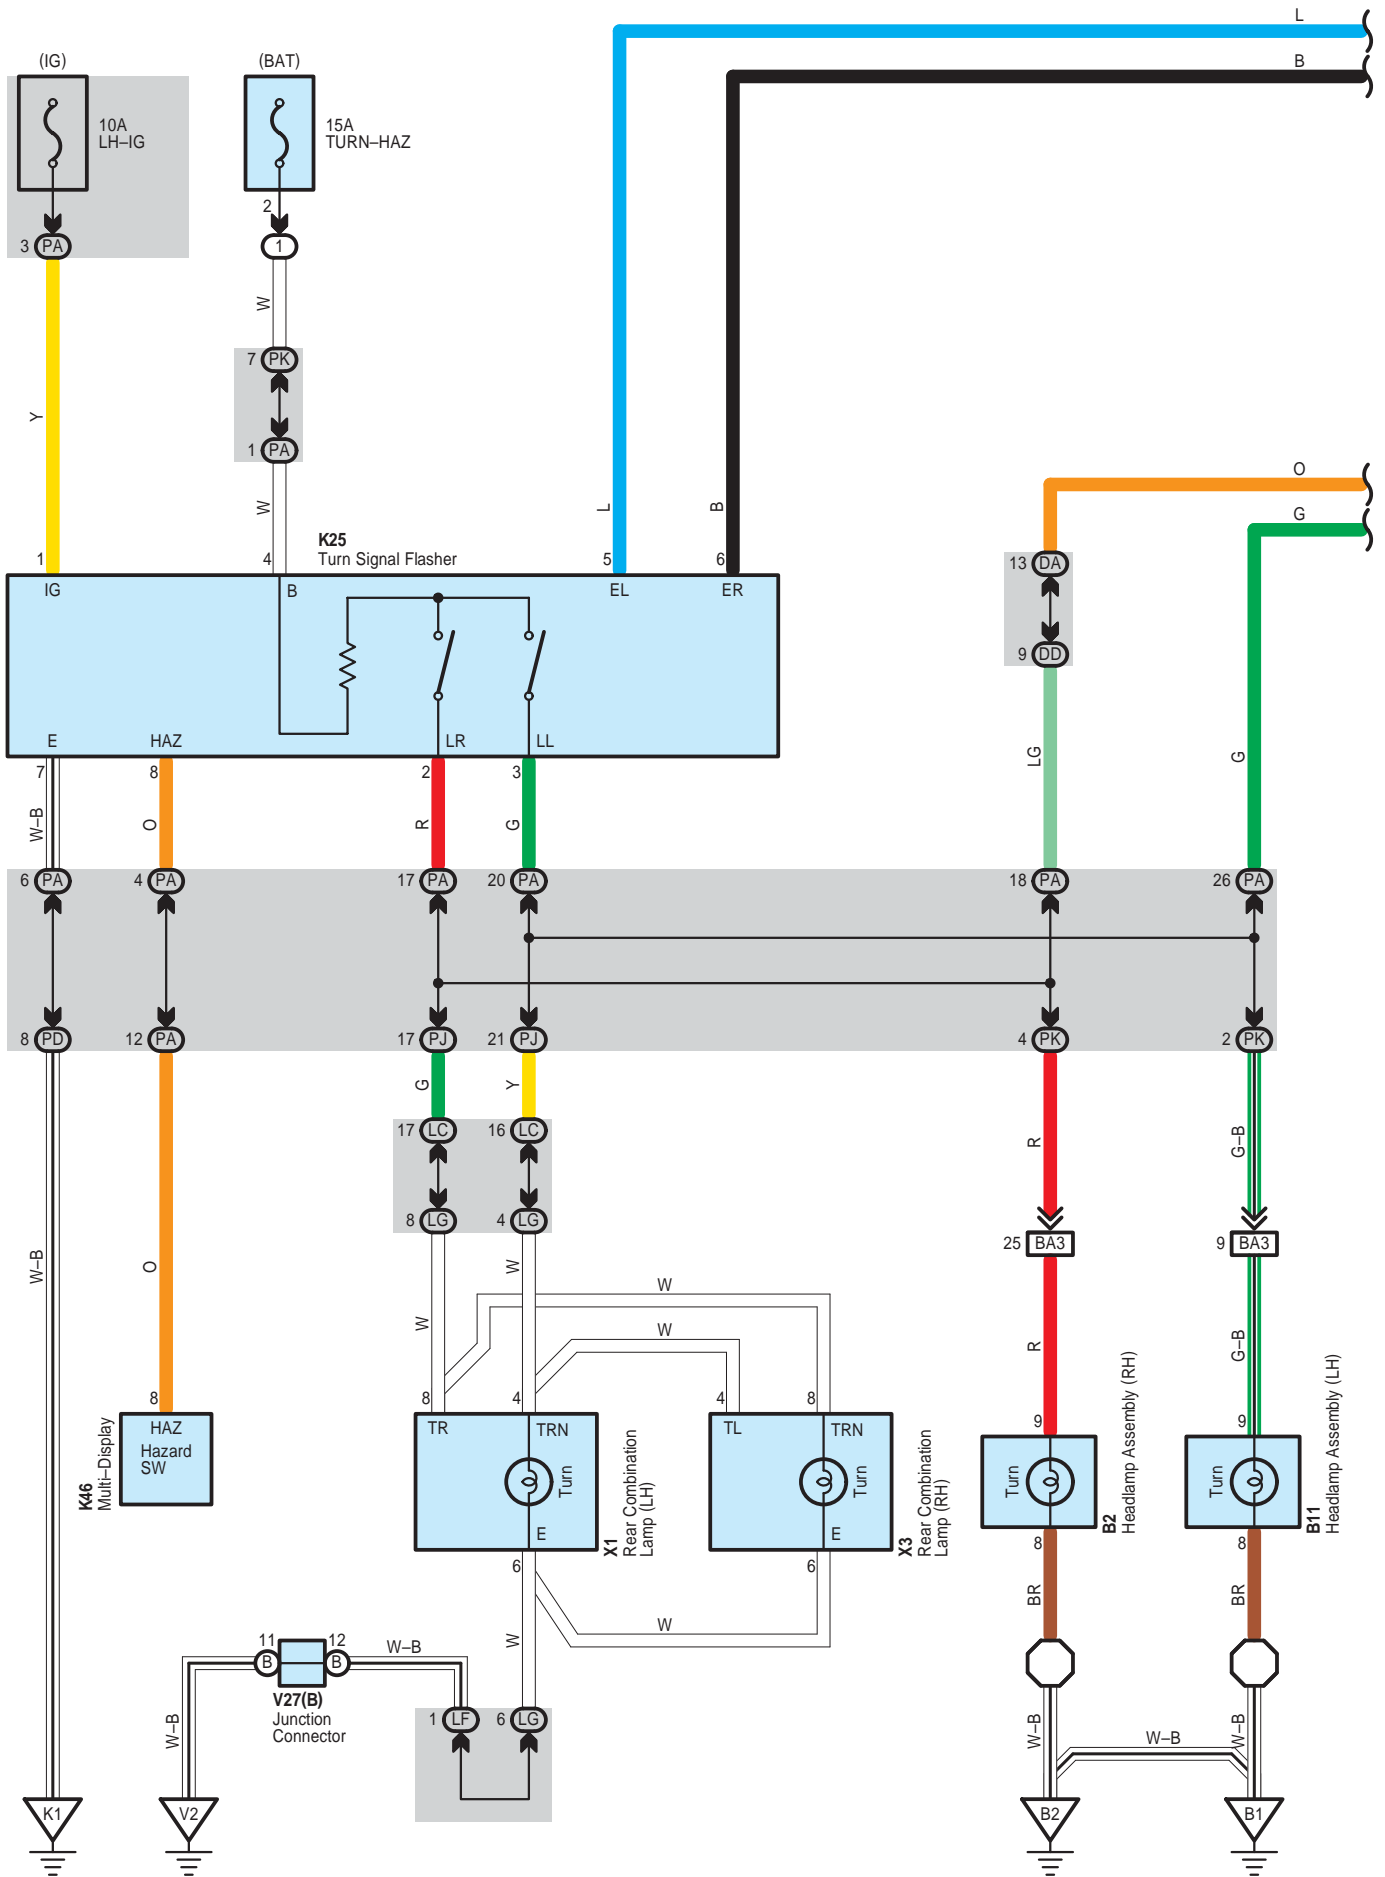

Turn Signal and Hazard Warning Light

: Parts Location

Code	See Page	Code	See Page	Code	See Page			
A29	84	K31	A	85	V27	B	91	
A30	A	84	K46	86	X1	92		
B2	82	K66	86	X3	92			
B11	82	K68	B	86	z2	B	87	
K22	A	85	V3	D	87	z3	B	87
K25	85	V26	A	91				

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1X	29	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4E		
4J		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
LC	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel)
LF		
LG	62	Luggage Room Wire and Luggage Room J/B (Left Side of the Quarter Panel)
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PK	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BA3	96	Engine Room No.2 Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.2)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

: Ground Points

Code	See Page	Ground Points Location
B1	96	Near the Headlamp RH
B2	96	Near the Headlamp LH
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
V2	98	Roof Side Inner Panel LH

