

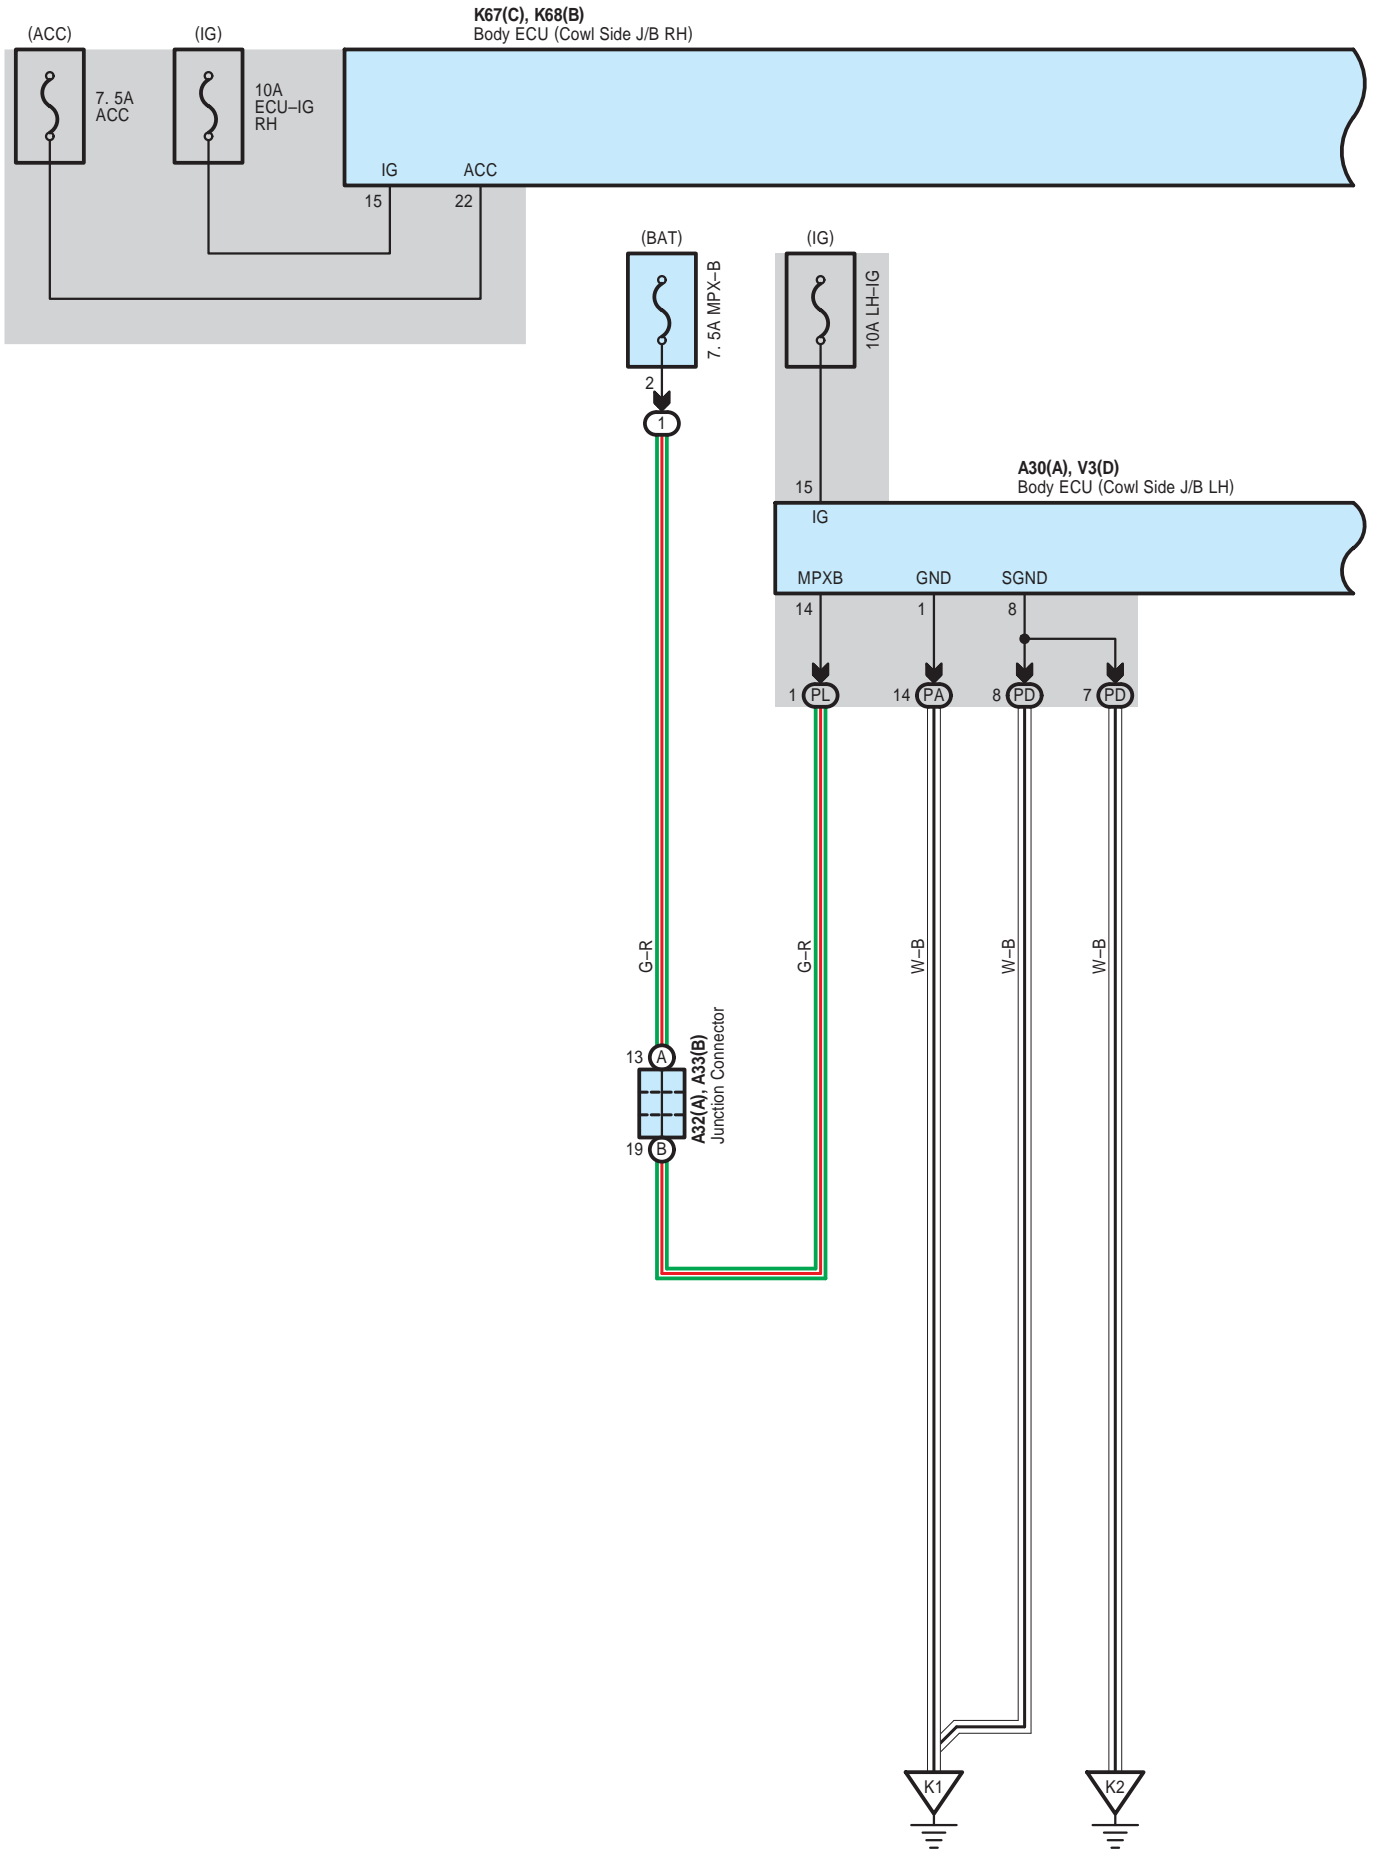


Illumination

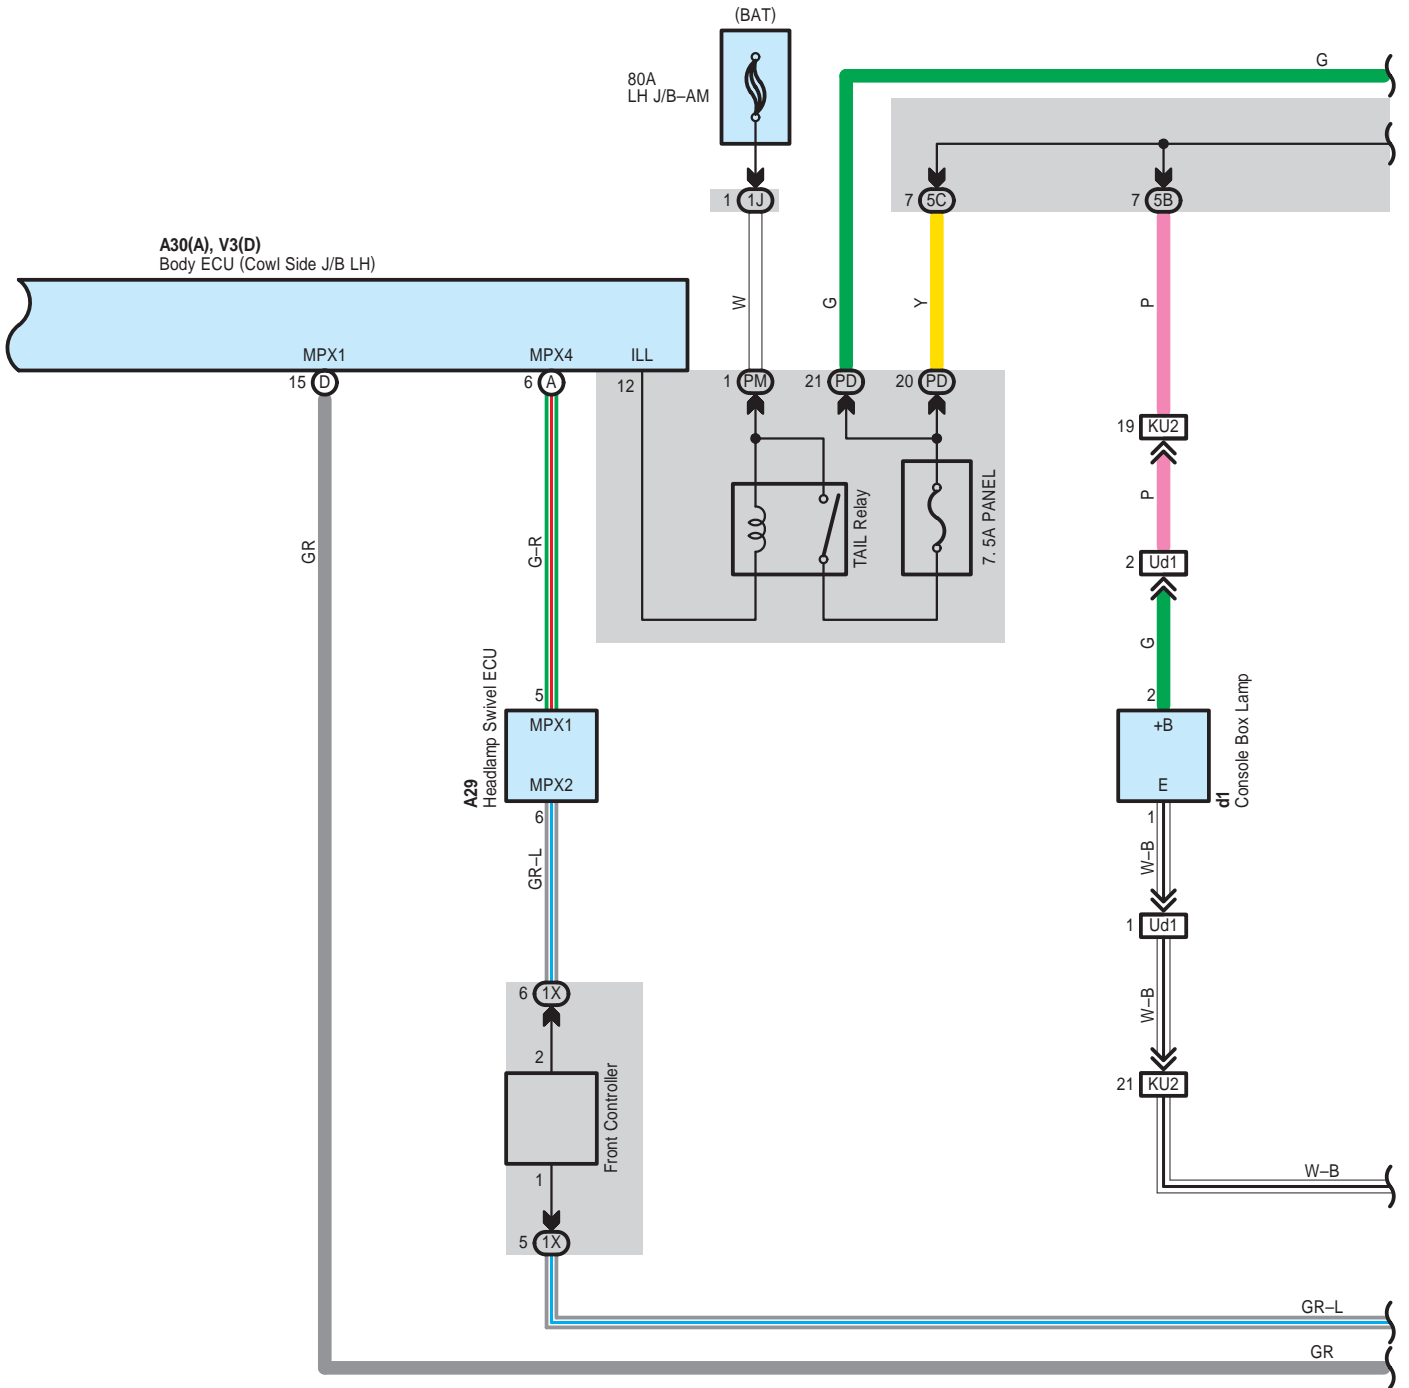


K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

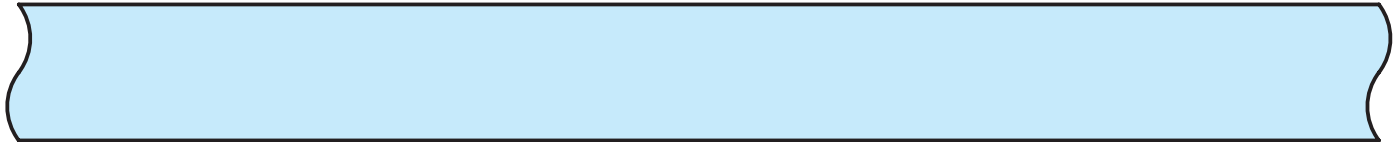


Illumination

K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

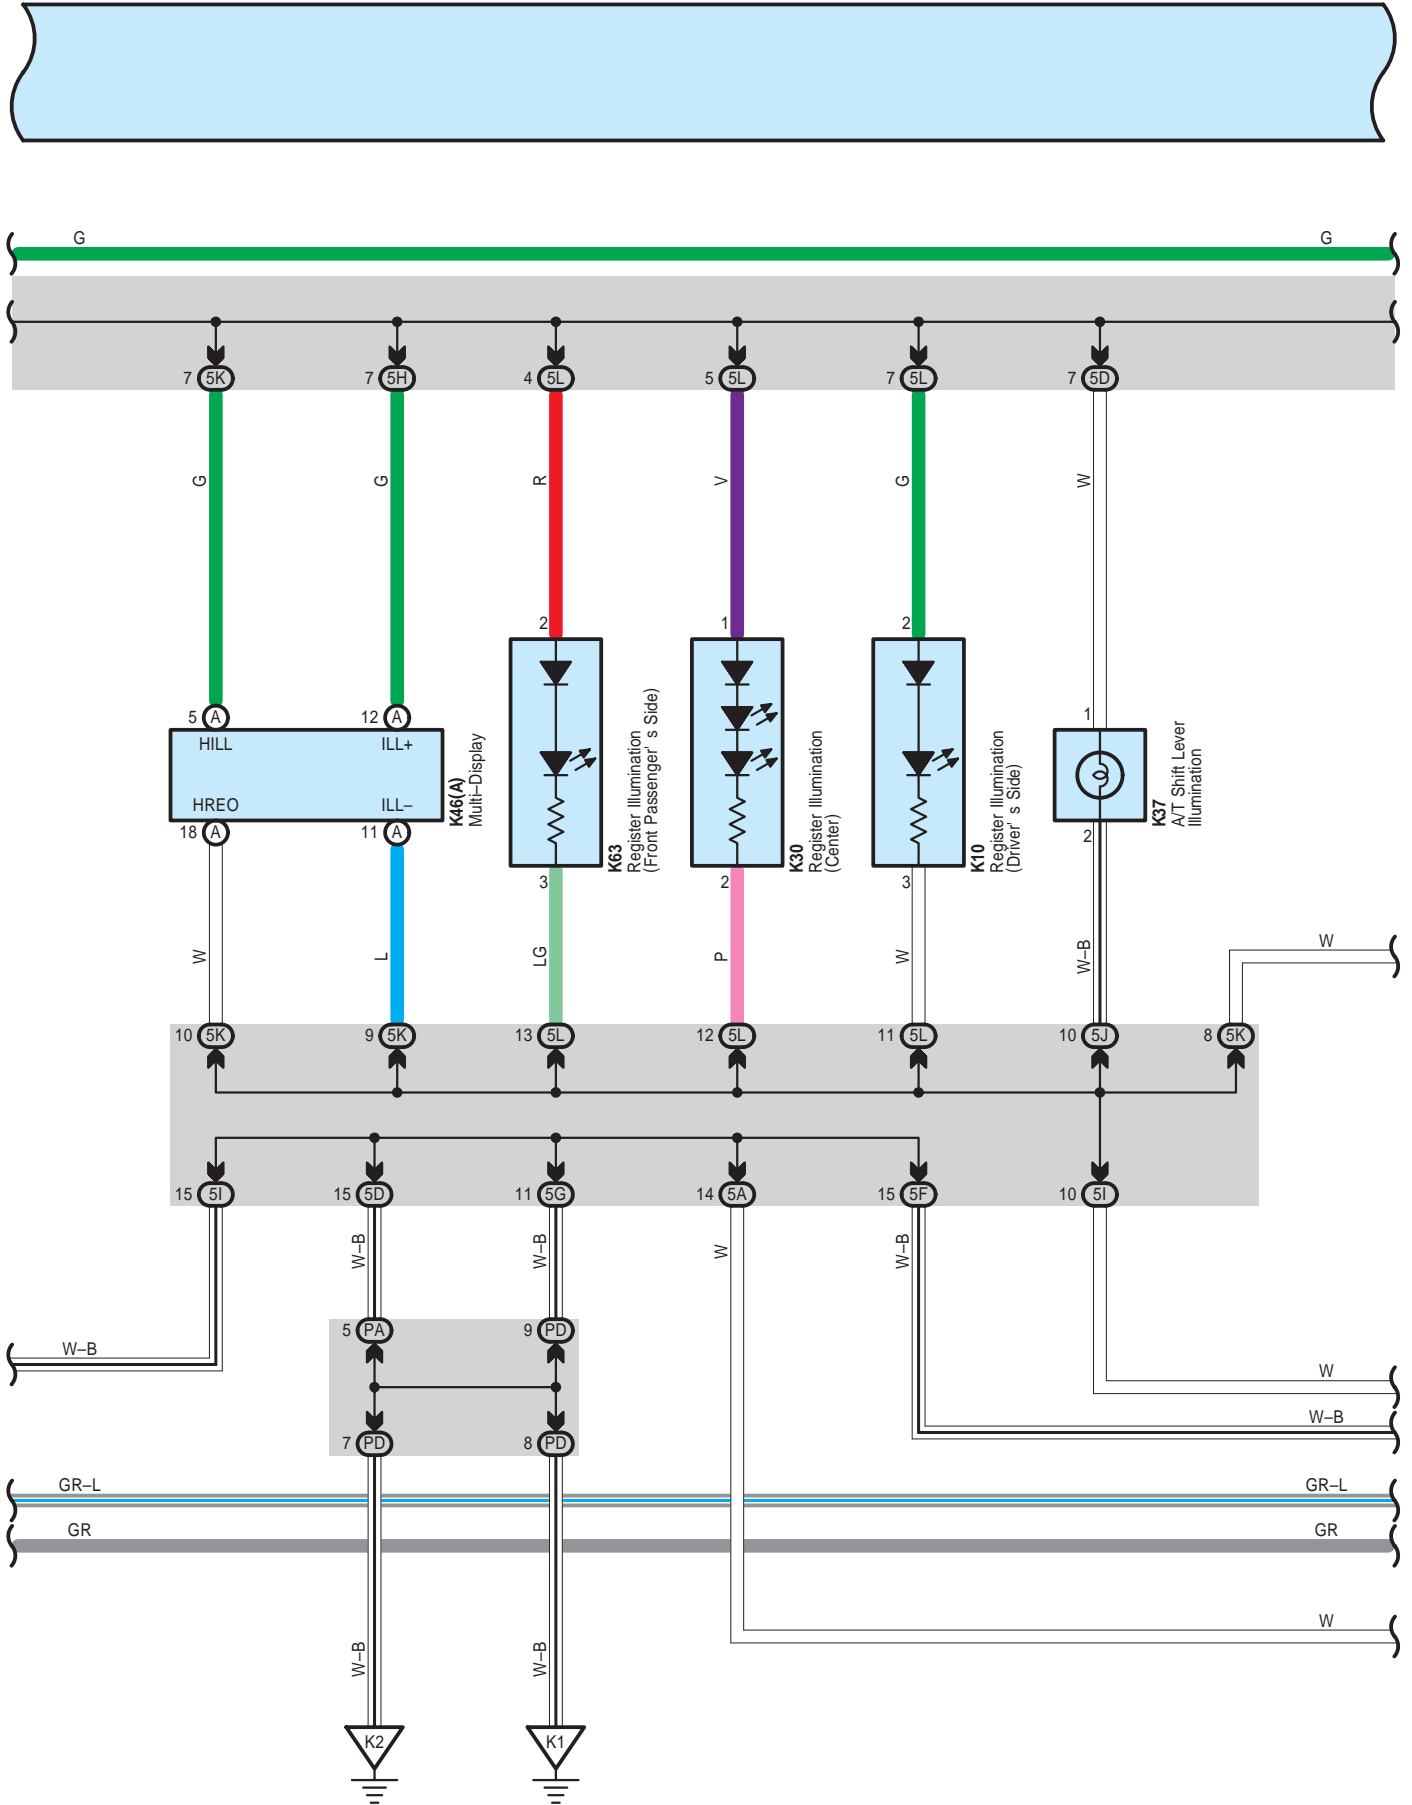


K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

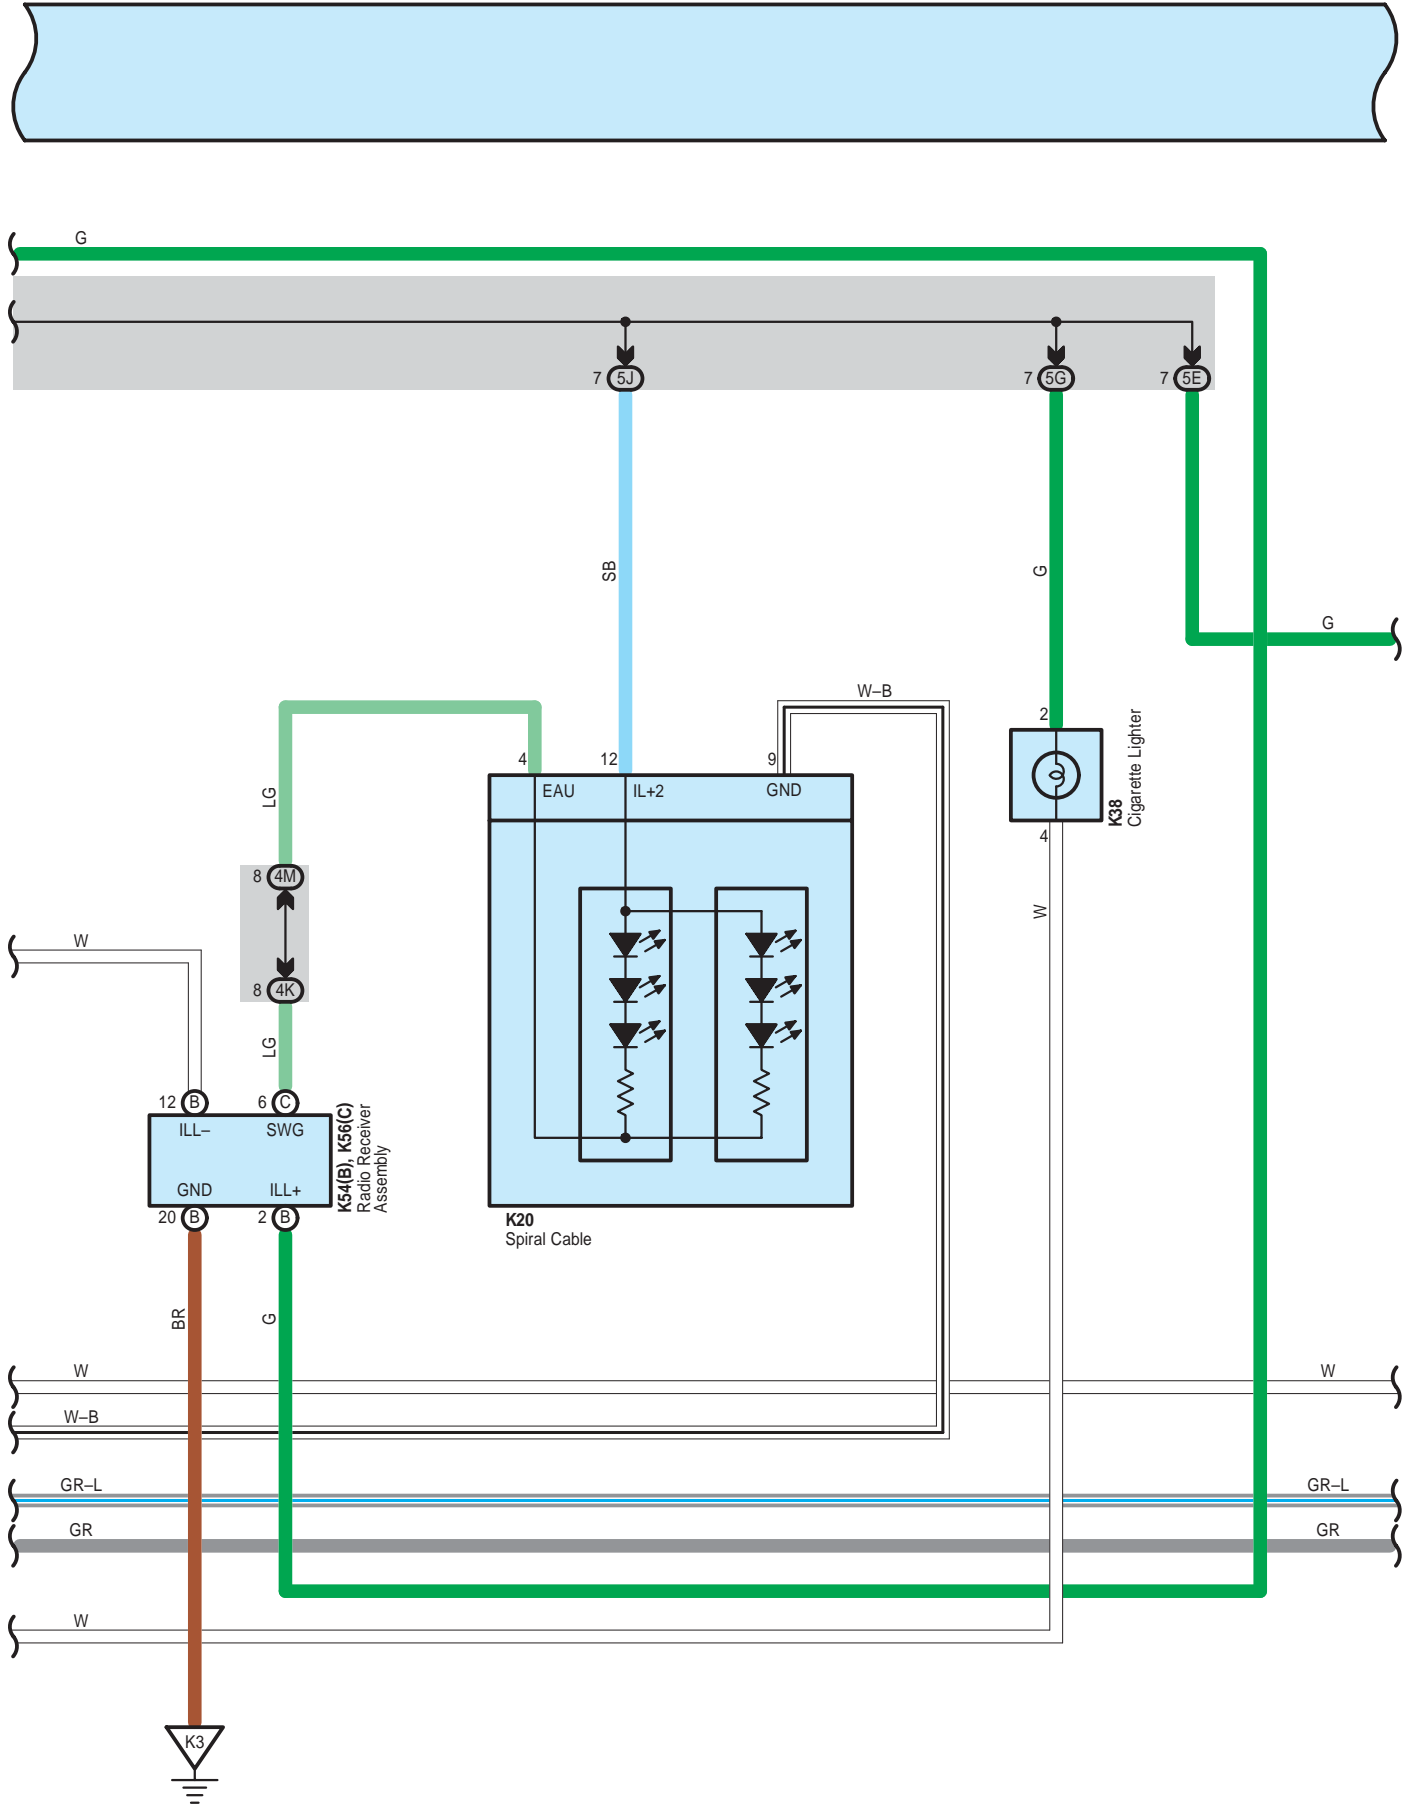


Illumination

K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

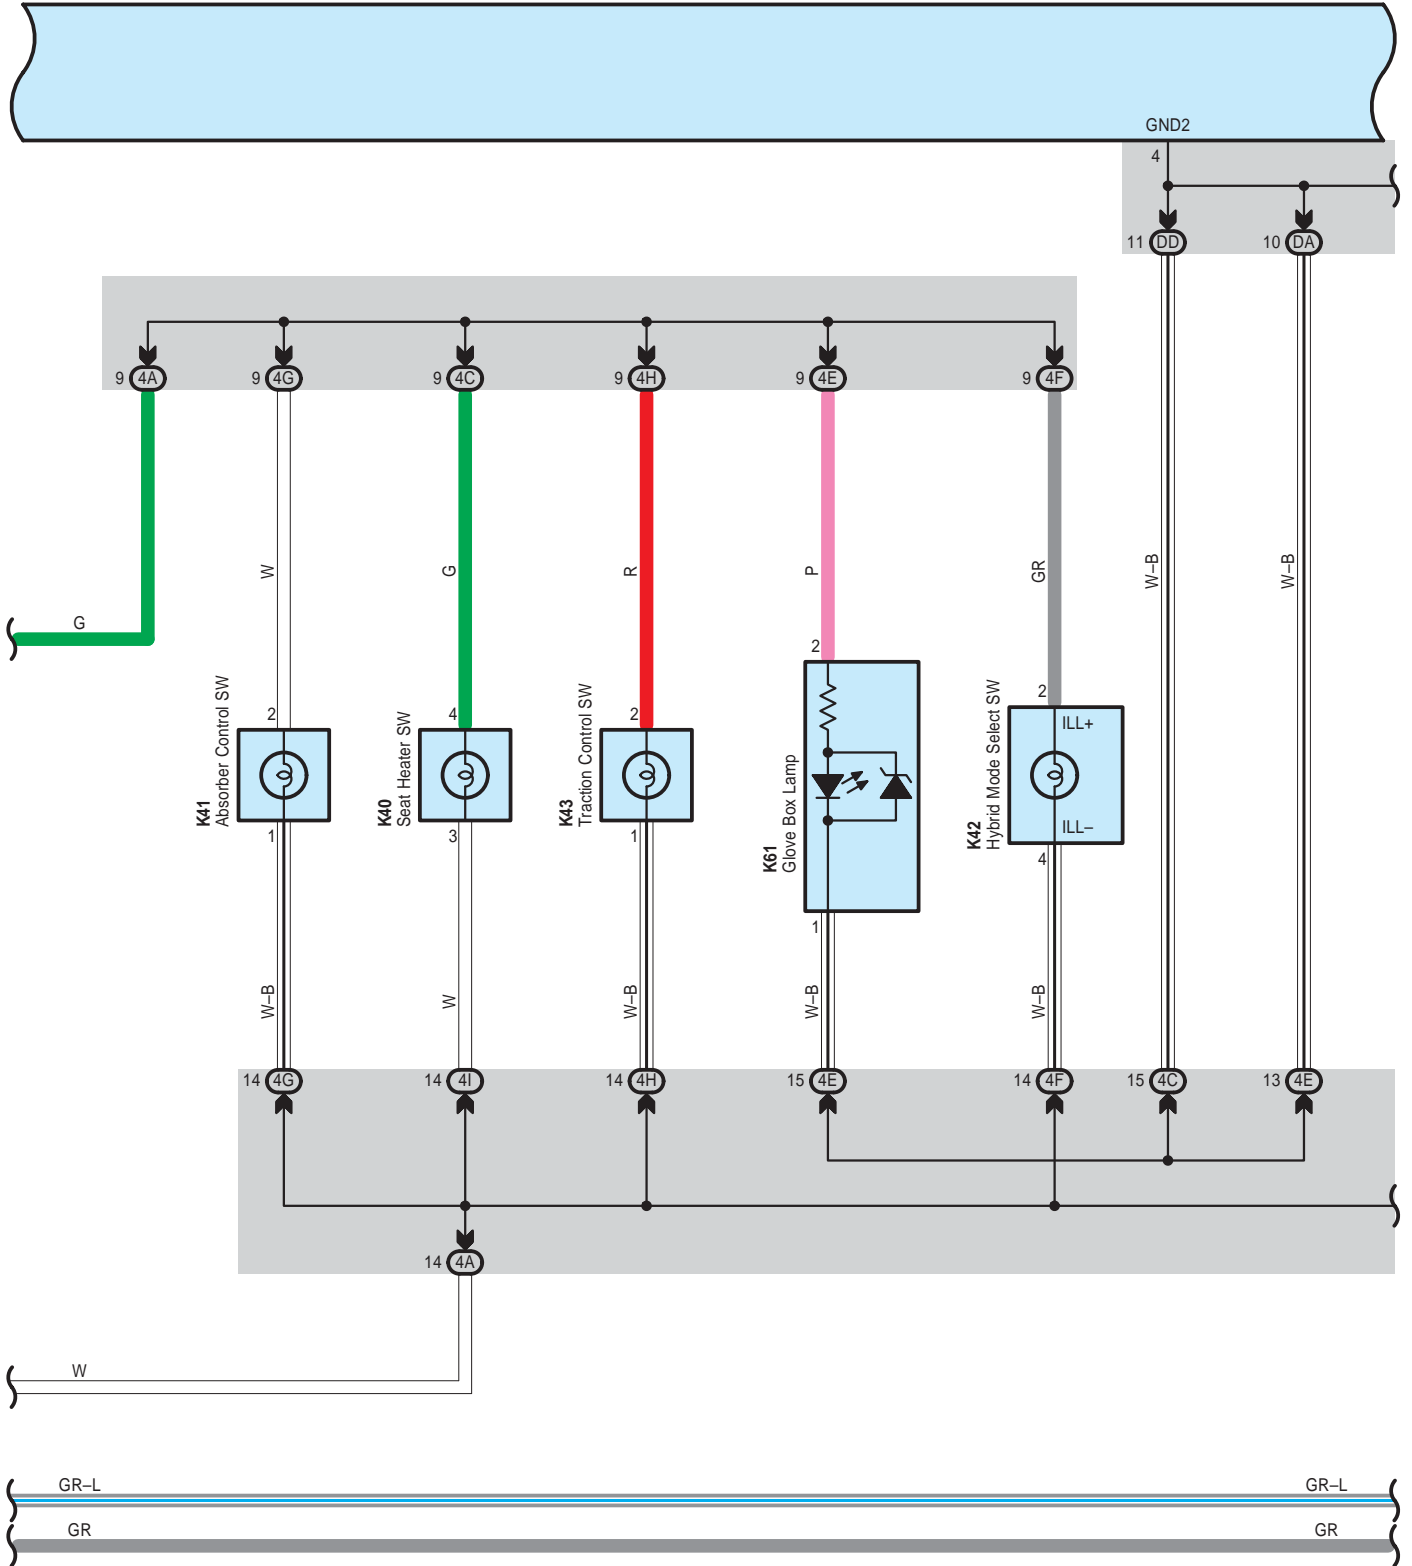


K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

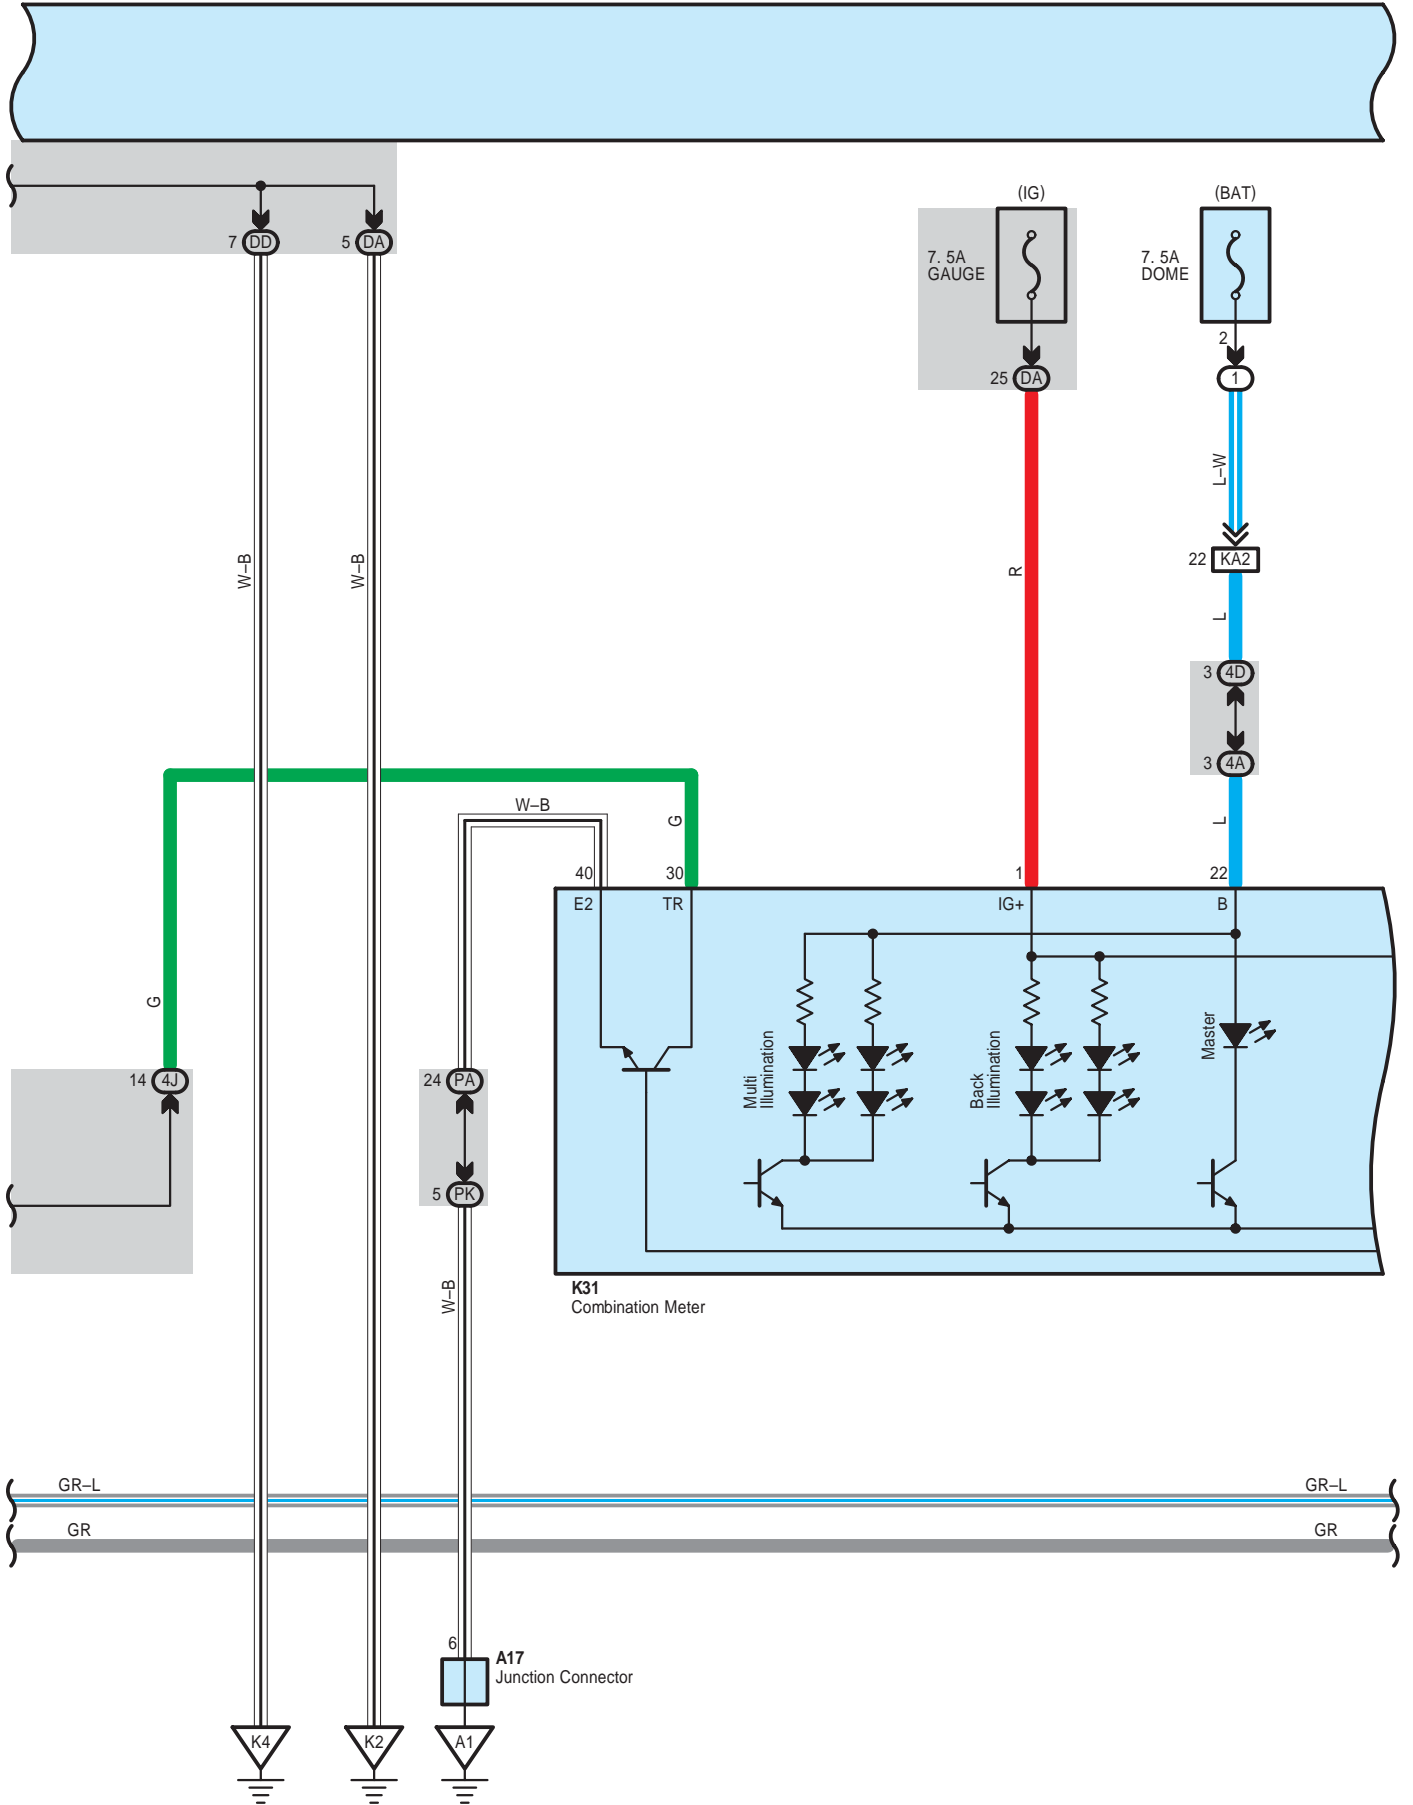


Illumination

K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

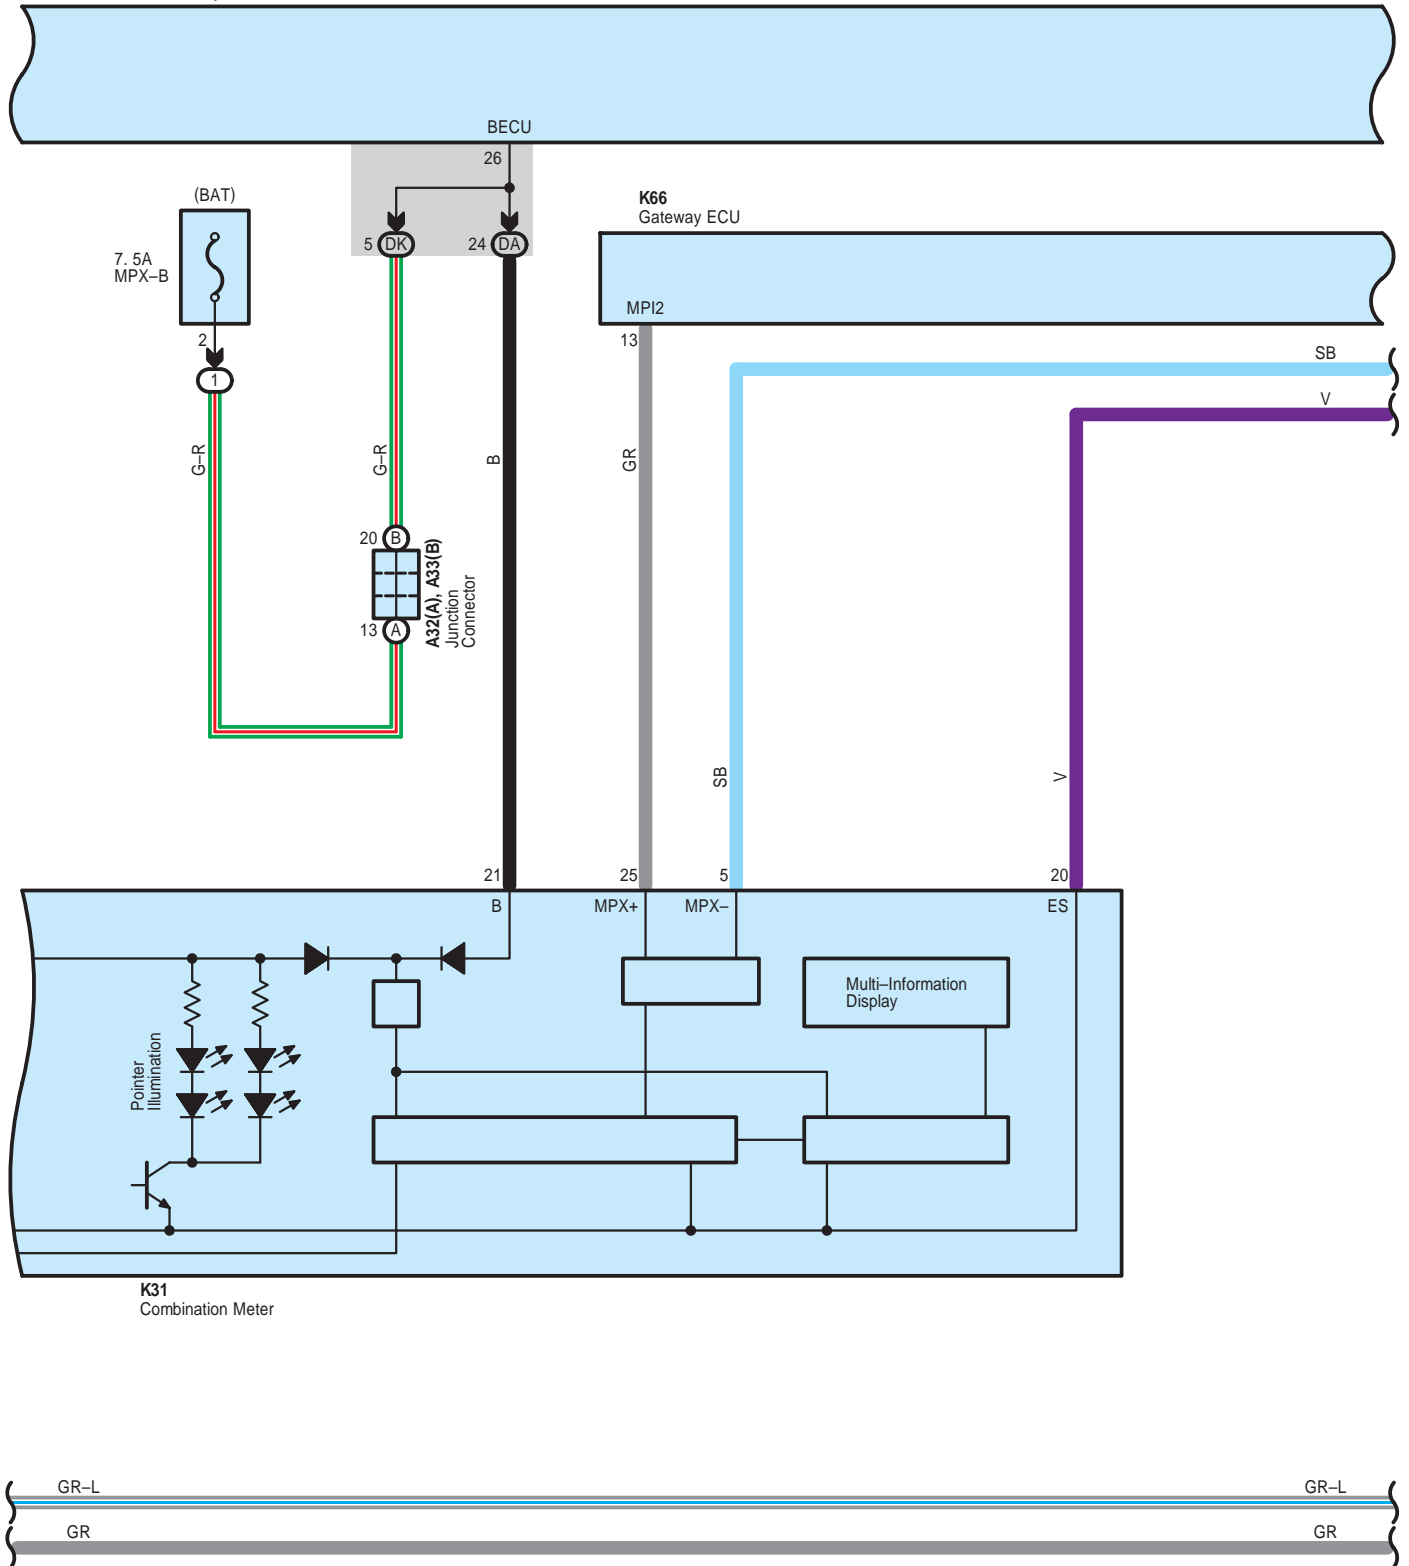



K67(C), K68(B)
Body ECU (Cowl Side J/B RH)

K66
Gateway ECU

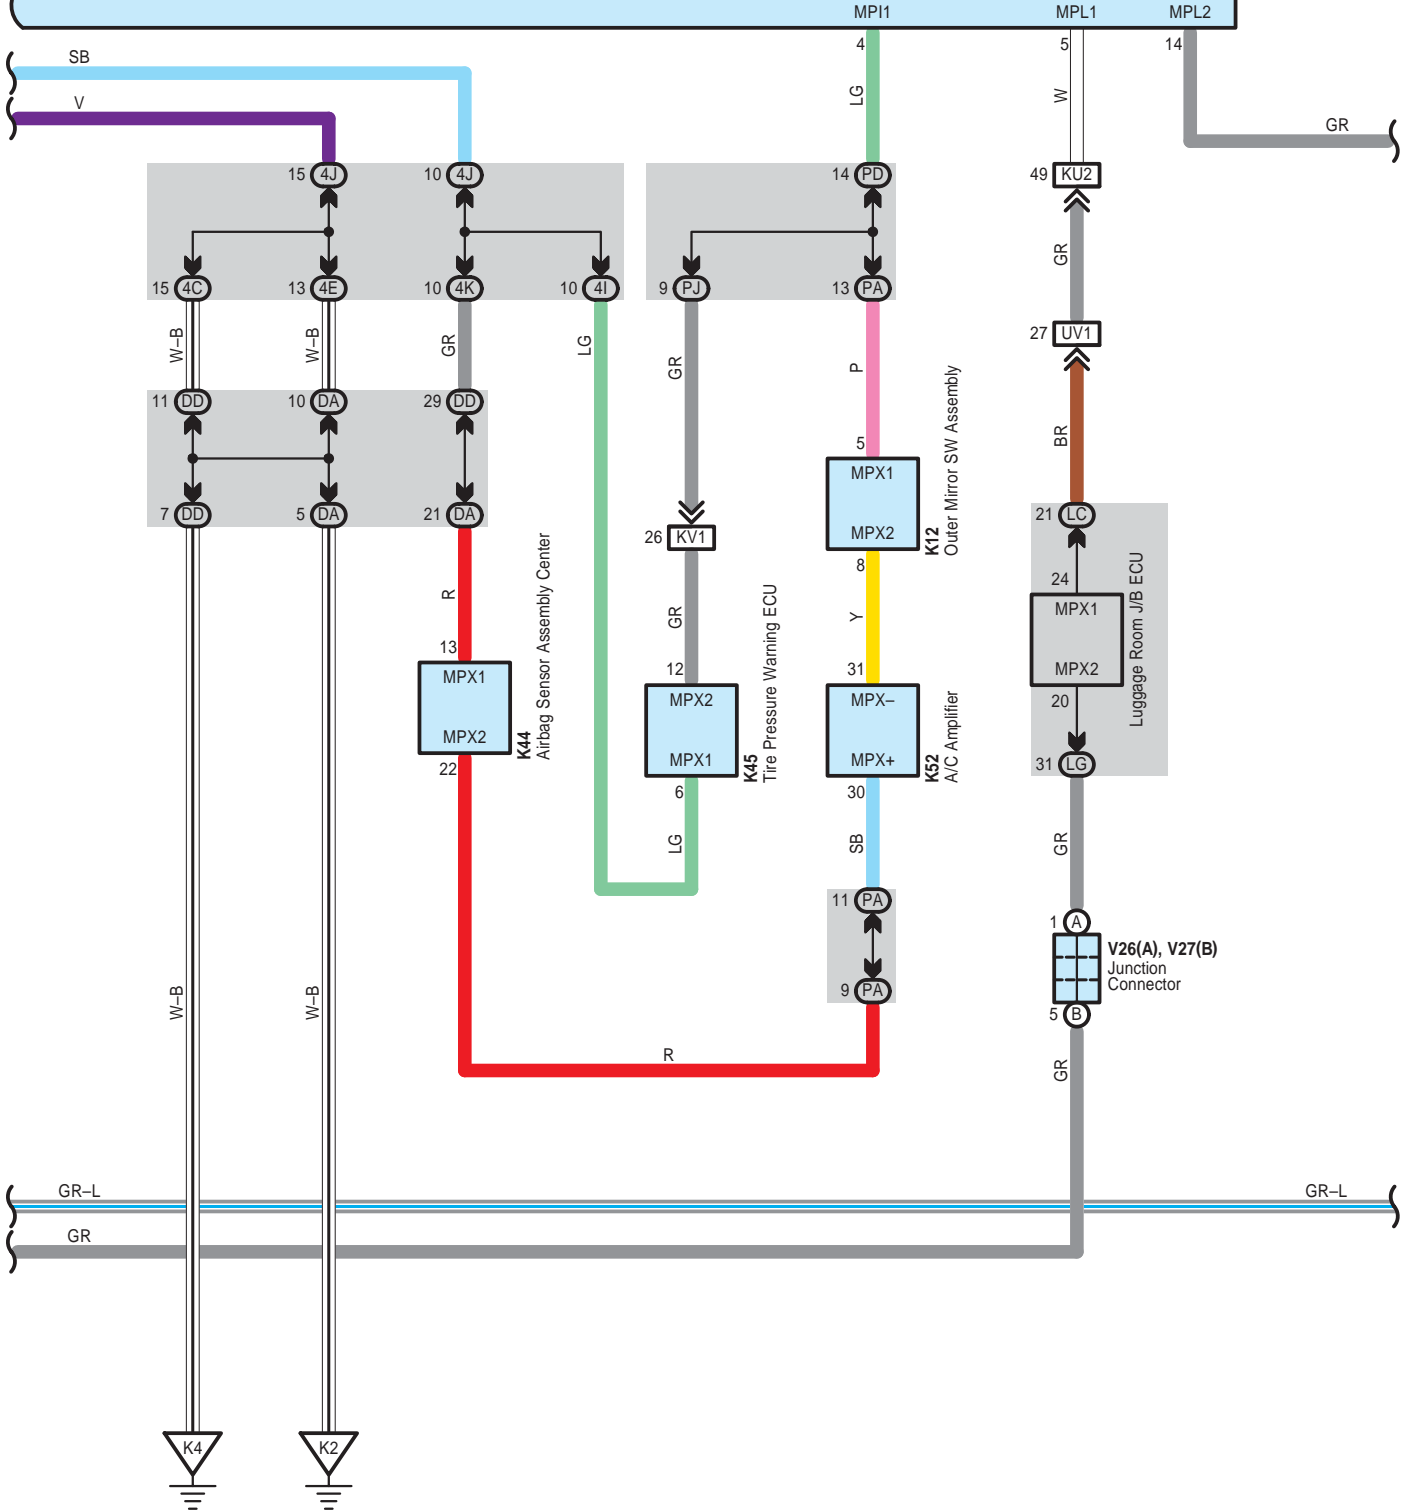

Illumination

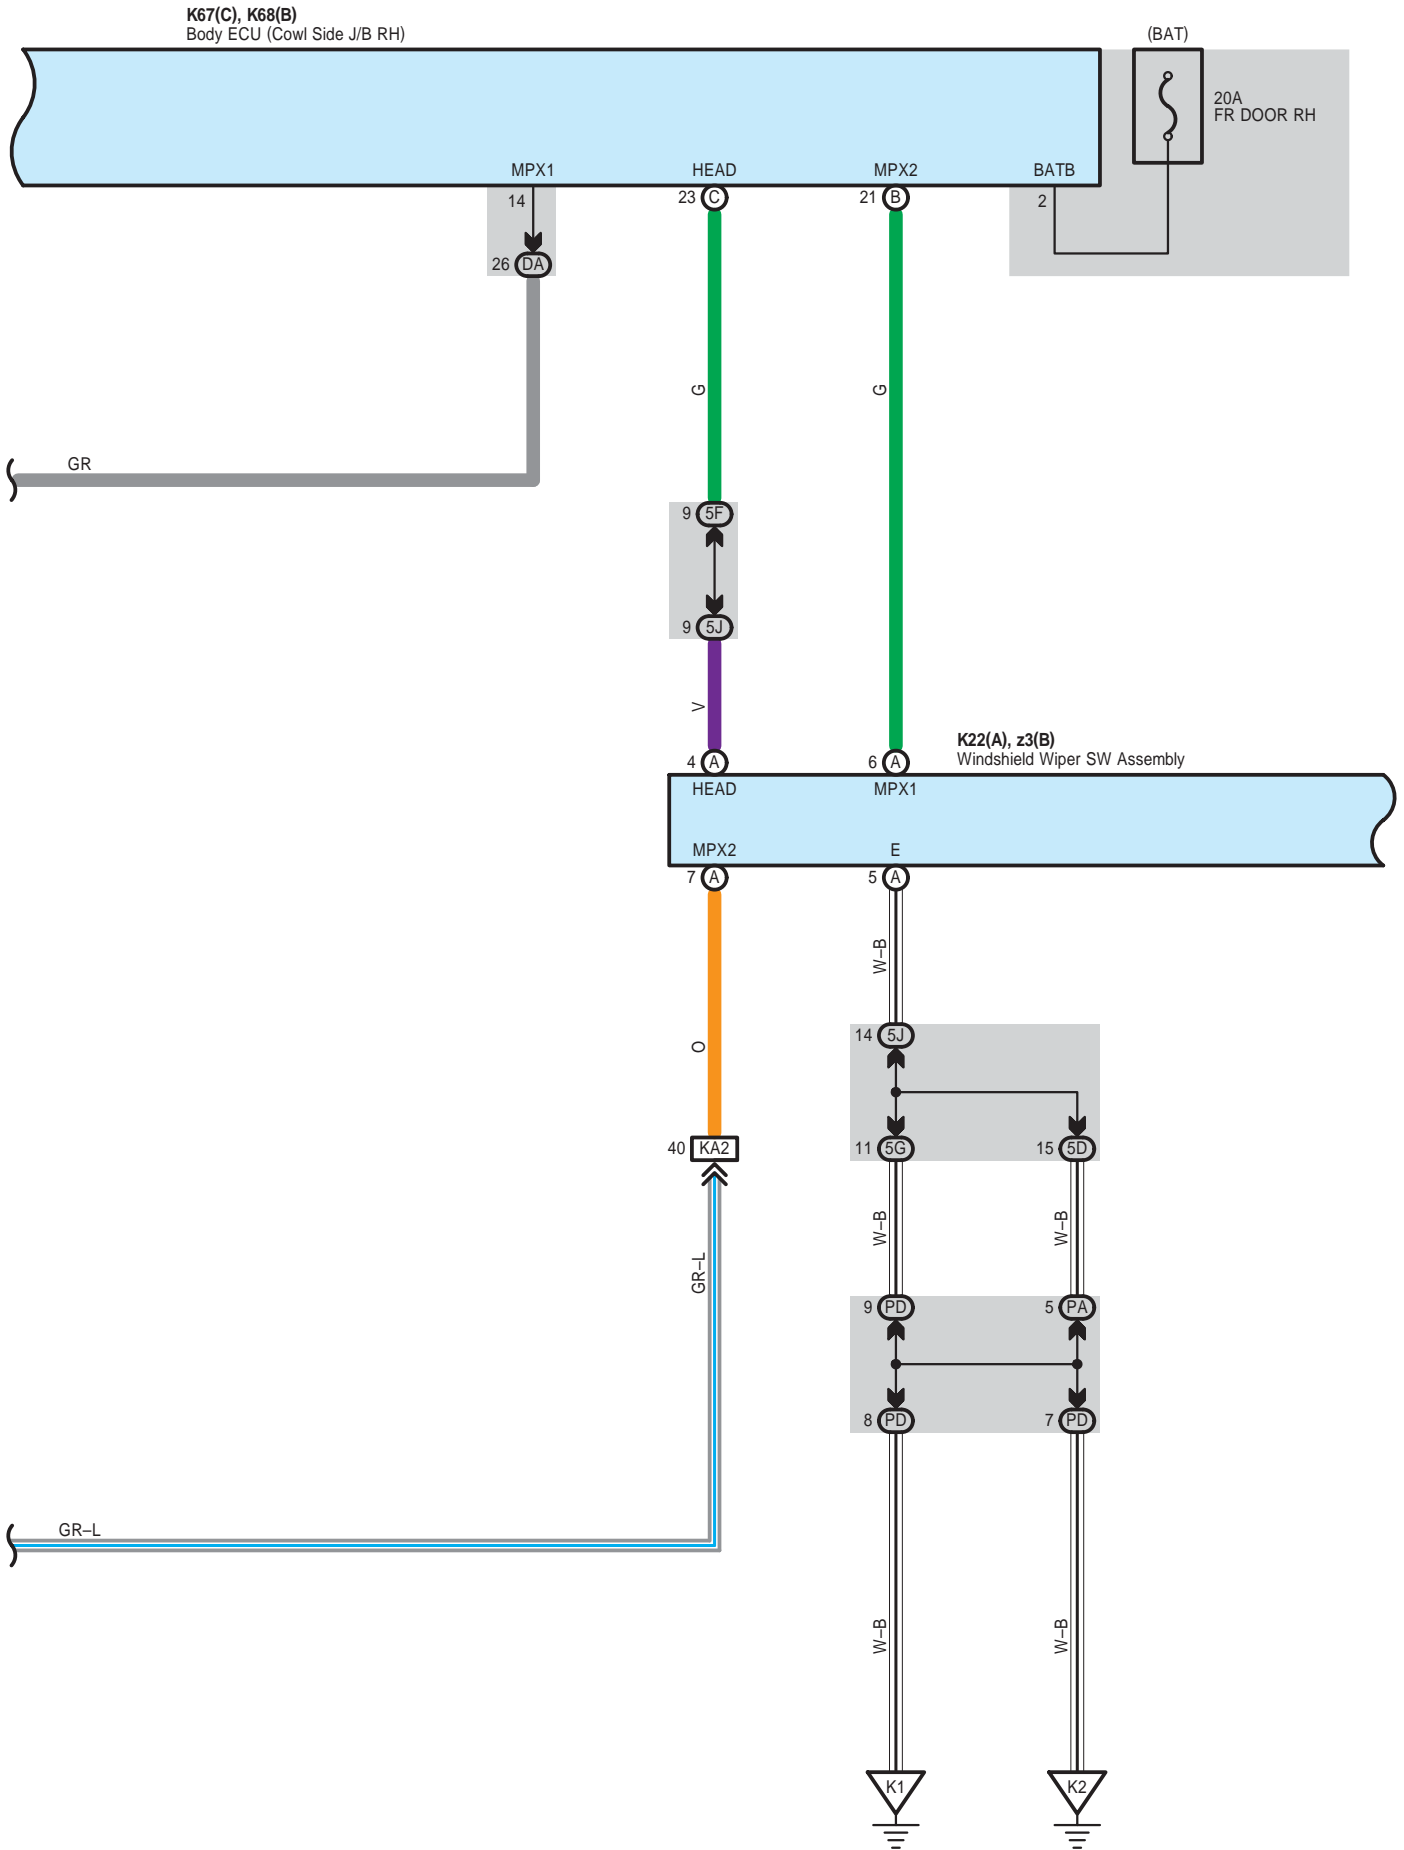

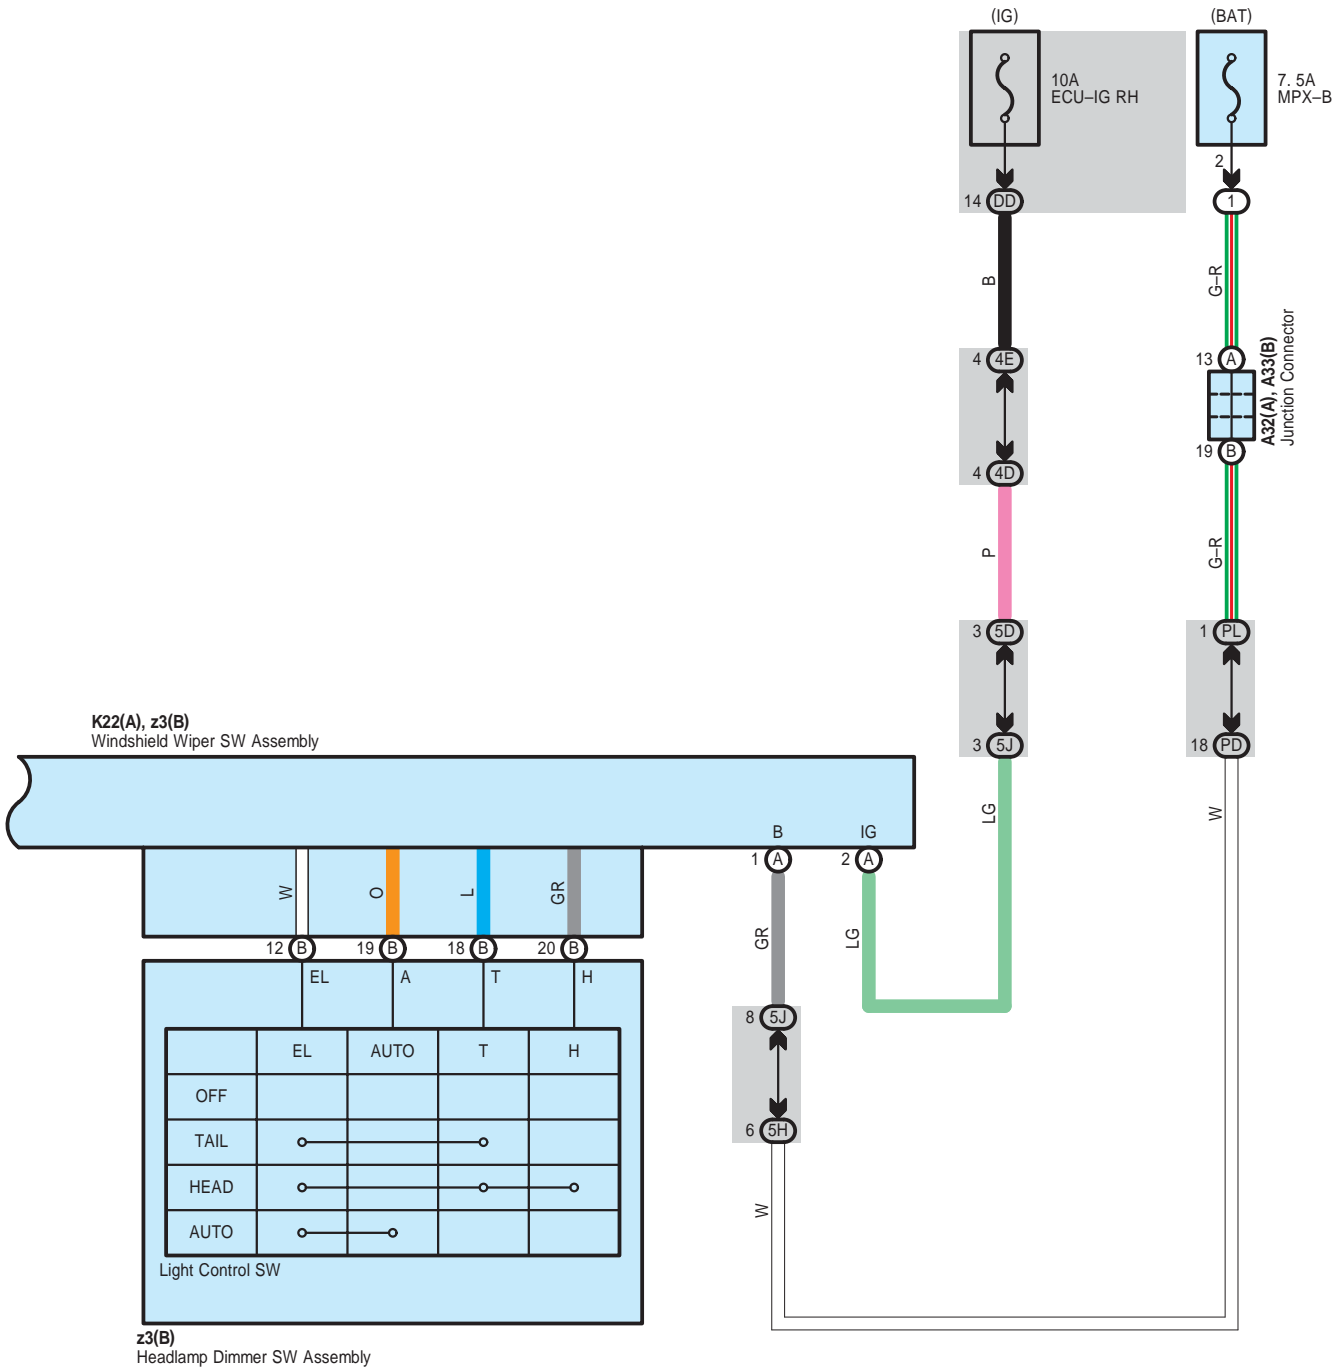

Illumination

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A17	80	K37	85	K56 C	86
A29	84	K38	85	K61	86
A30 A	84	K40	86	K63	86
A32 A	84	K41	86	K66	86
A33 B	84	K42	86	K67 C	86
K10	85	K43	86	K68 B	86
K12	85	K44	86	V3 D	87
K20	85	K45	86	V26 A	91
K22 A	85	K46 A	86	V27 B	91
K30	85	K52	86	d1	87
K31	85	K54 B	86	z3 B	87

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1J	27	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
1X	29	
4A	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4C		
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4K		
4M		
5A	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5B		
5C		
5D		
5E		
5F		
5G		
5H		
5I		
5J		
5K		
5L		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
DK	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
LC	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel)
LG	62	Luggage Room Wire and Luggage Room J/B (Left Side of the Quarter Panel)
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PK	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)
PL		
PM		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)
Ud1	97	Floor No.1 Wire and Console Box Wire (Under the Console Box)

 : Ground Points

Code	See Page	Ground Points Location
A1	96	Left Side of the Dash Panel
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K3	97	Right Side of the Shift Lever
K4	97	Right Kick Panel