


Stop Light

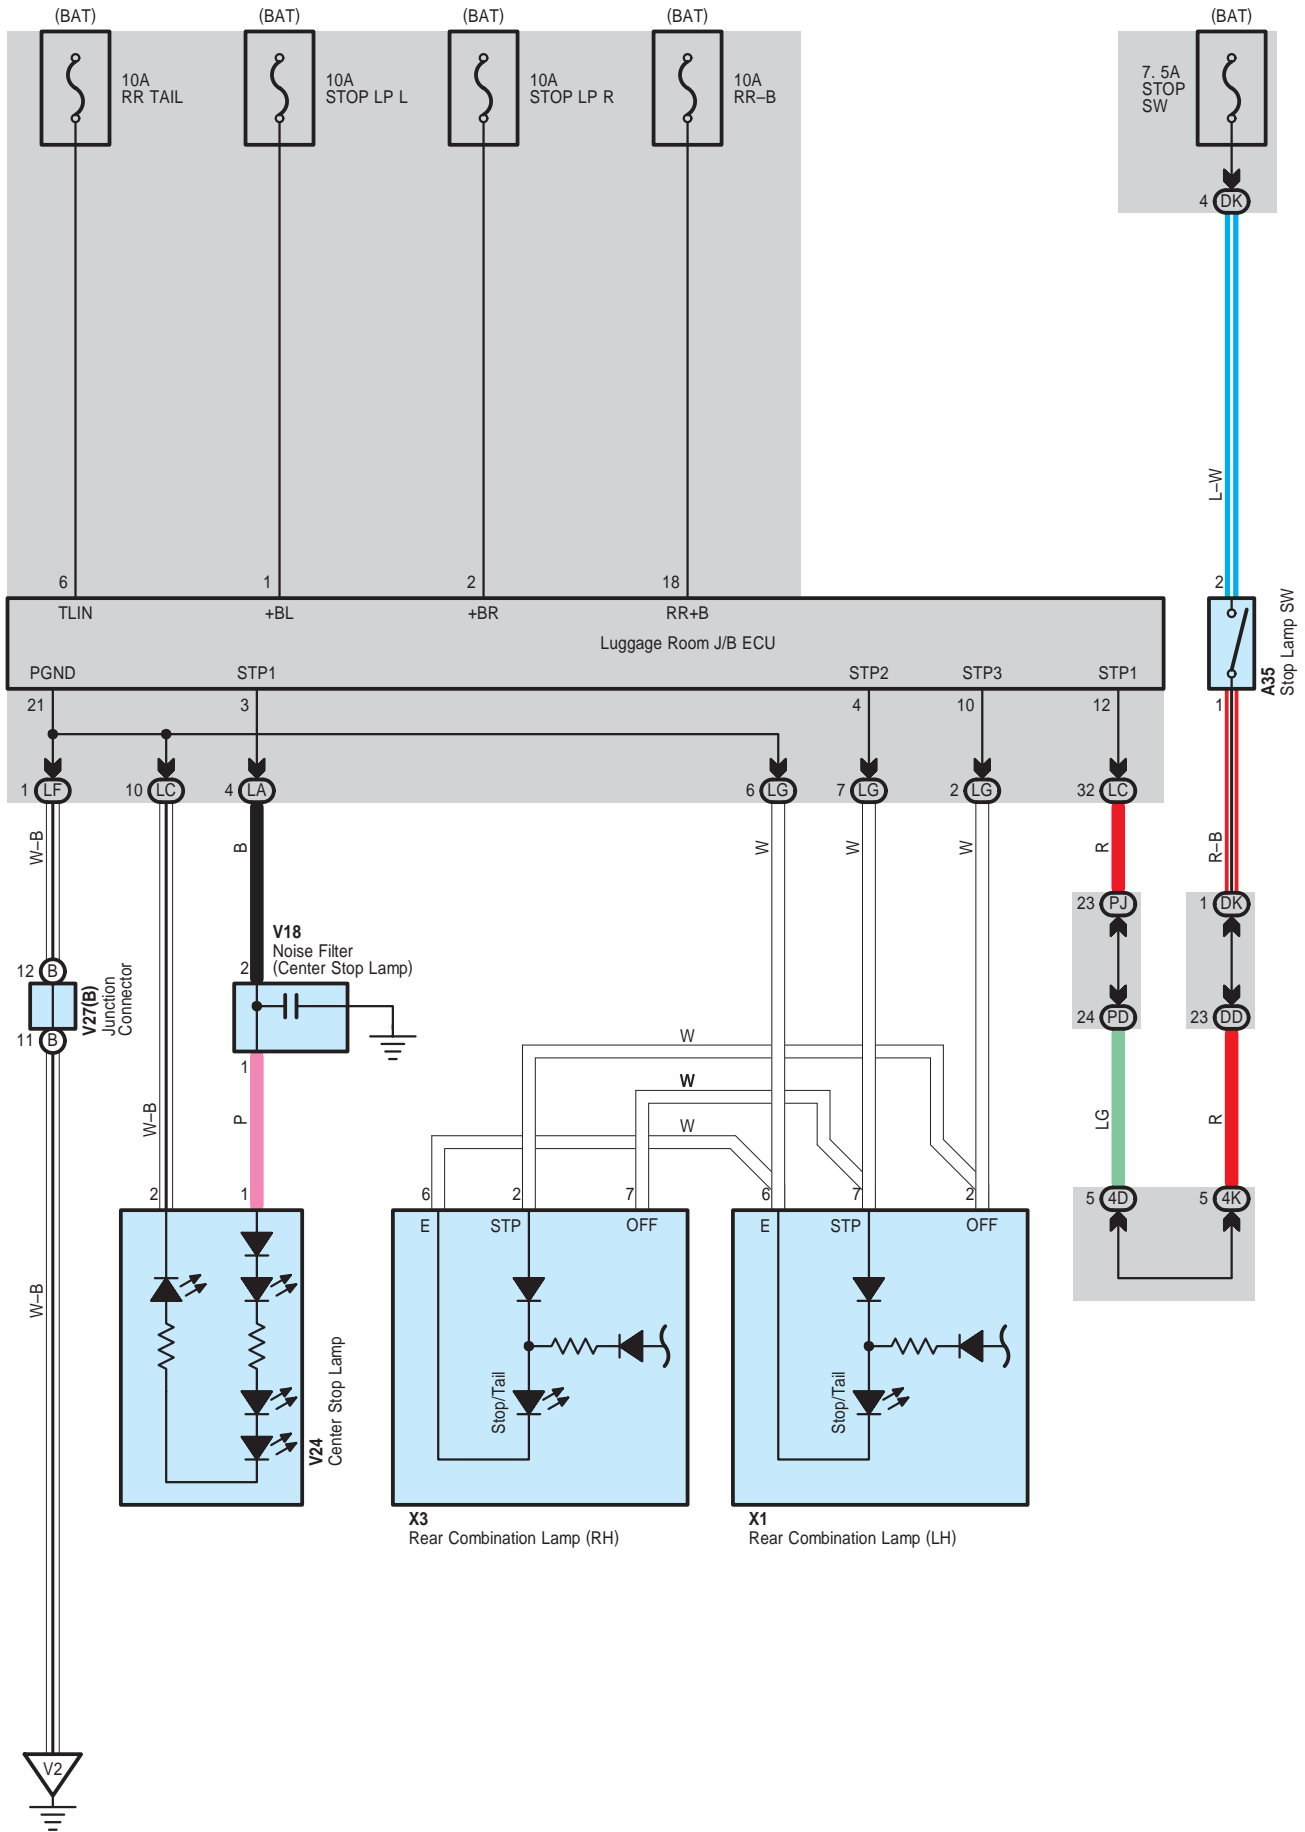

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
A35	84	V24	91	X1	92
V18	91	V27	B 91	X3	92

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
4D	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4K		
DD	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DK	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
LA	62	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel)
LC	63	
LF		
LG	62	Luggage Room Wire and Luggage Room J/B (Left Side of the Quarter Panel)
PD	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
V2	98	Roof Side Inner Panel LH