



# Headlight Cleaner

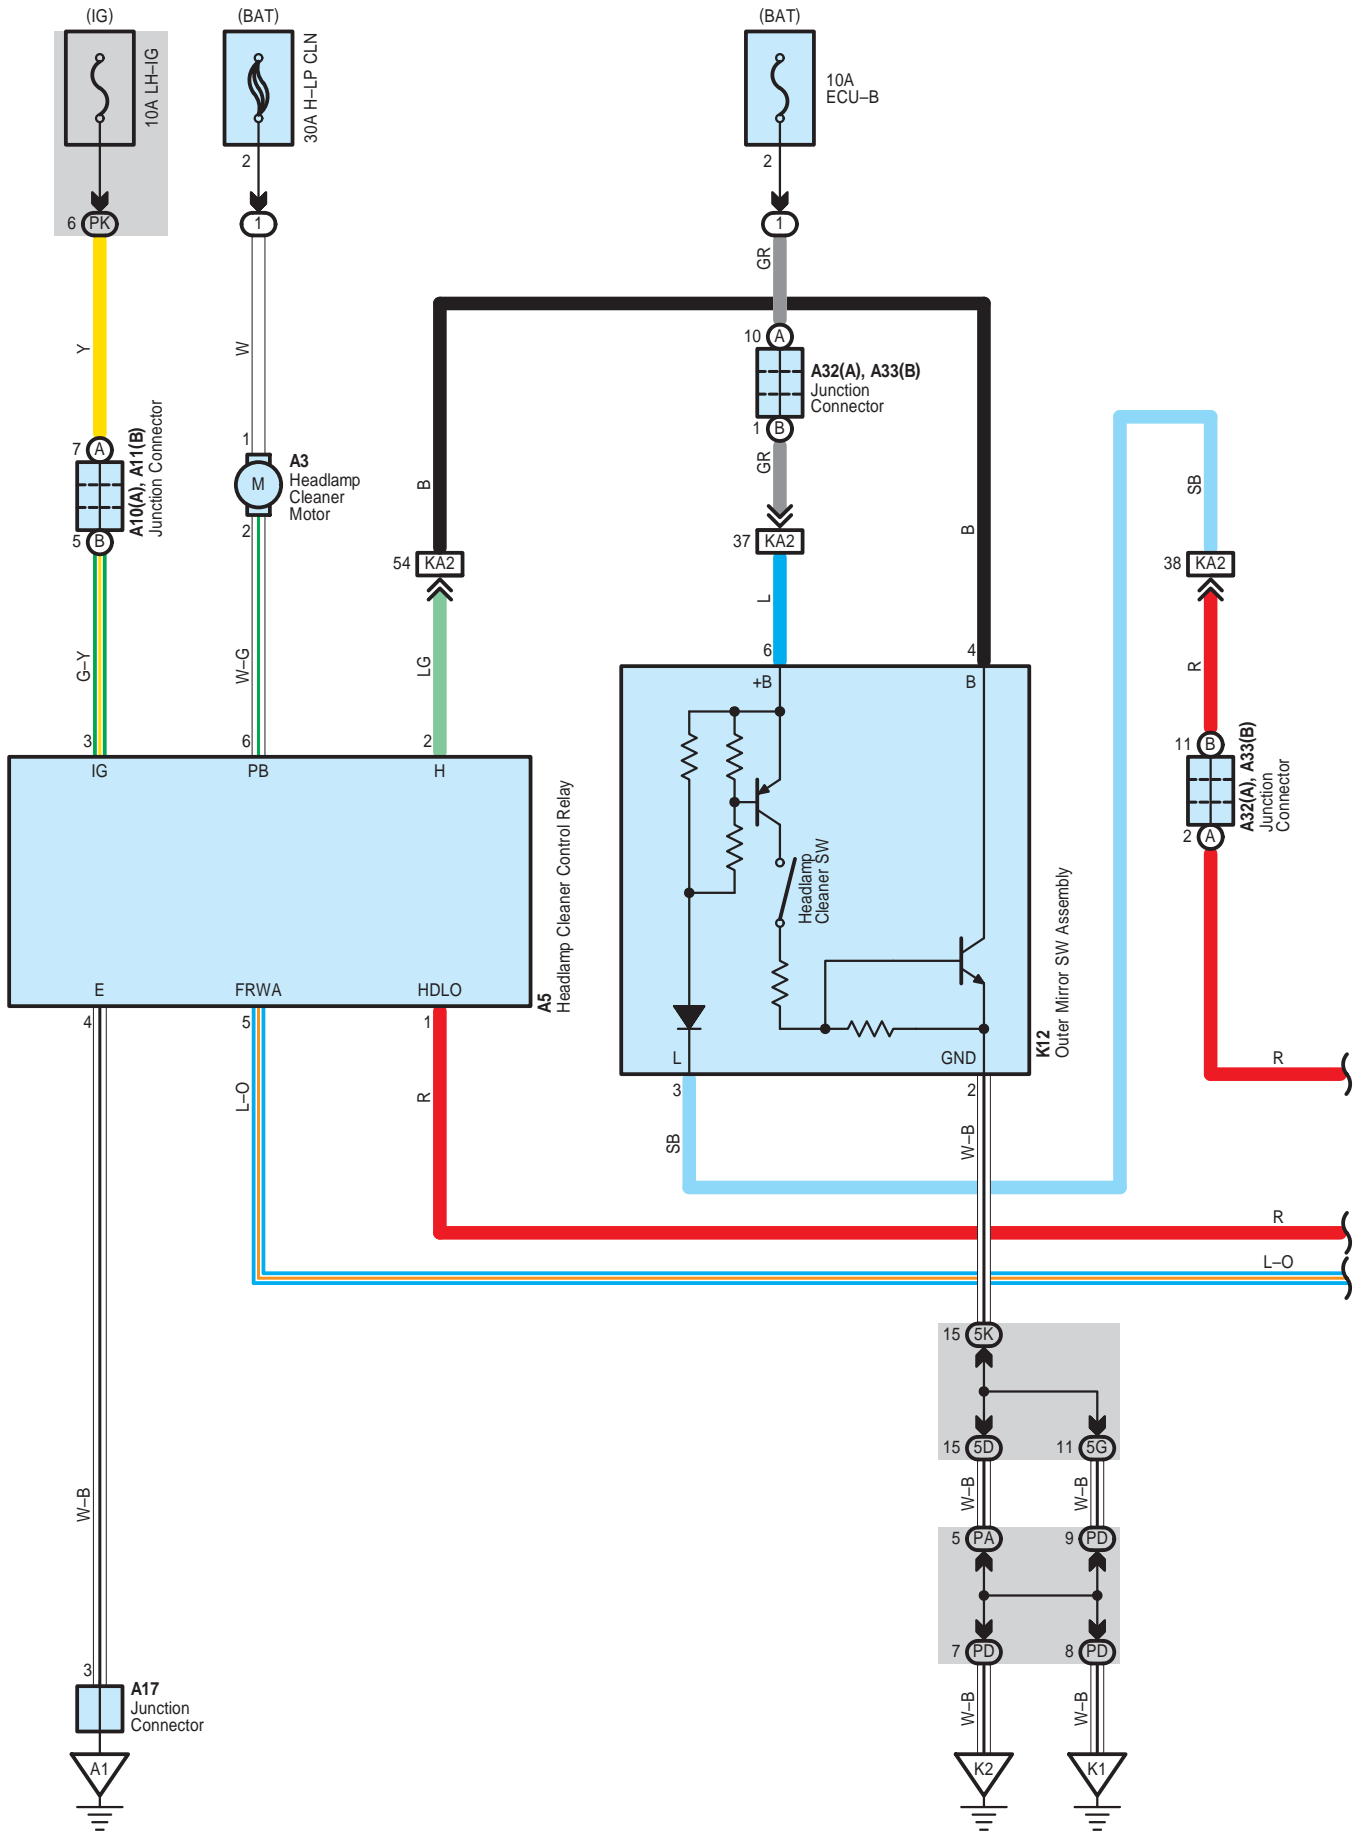

A39(A), K67(C), K68(B)  
Body ECU (Cowl Side J/B RH)

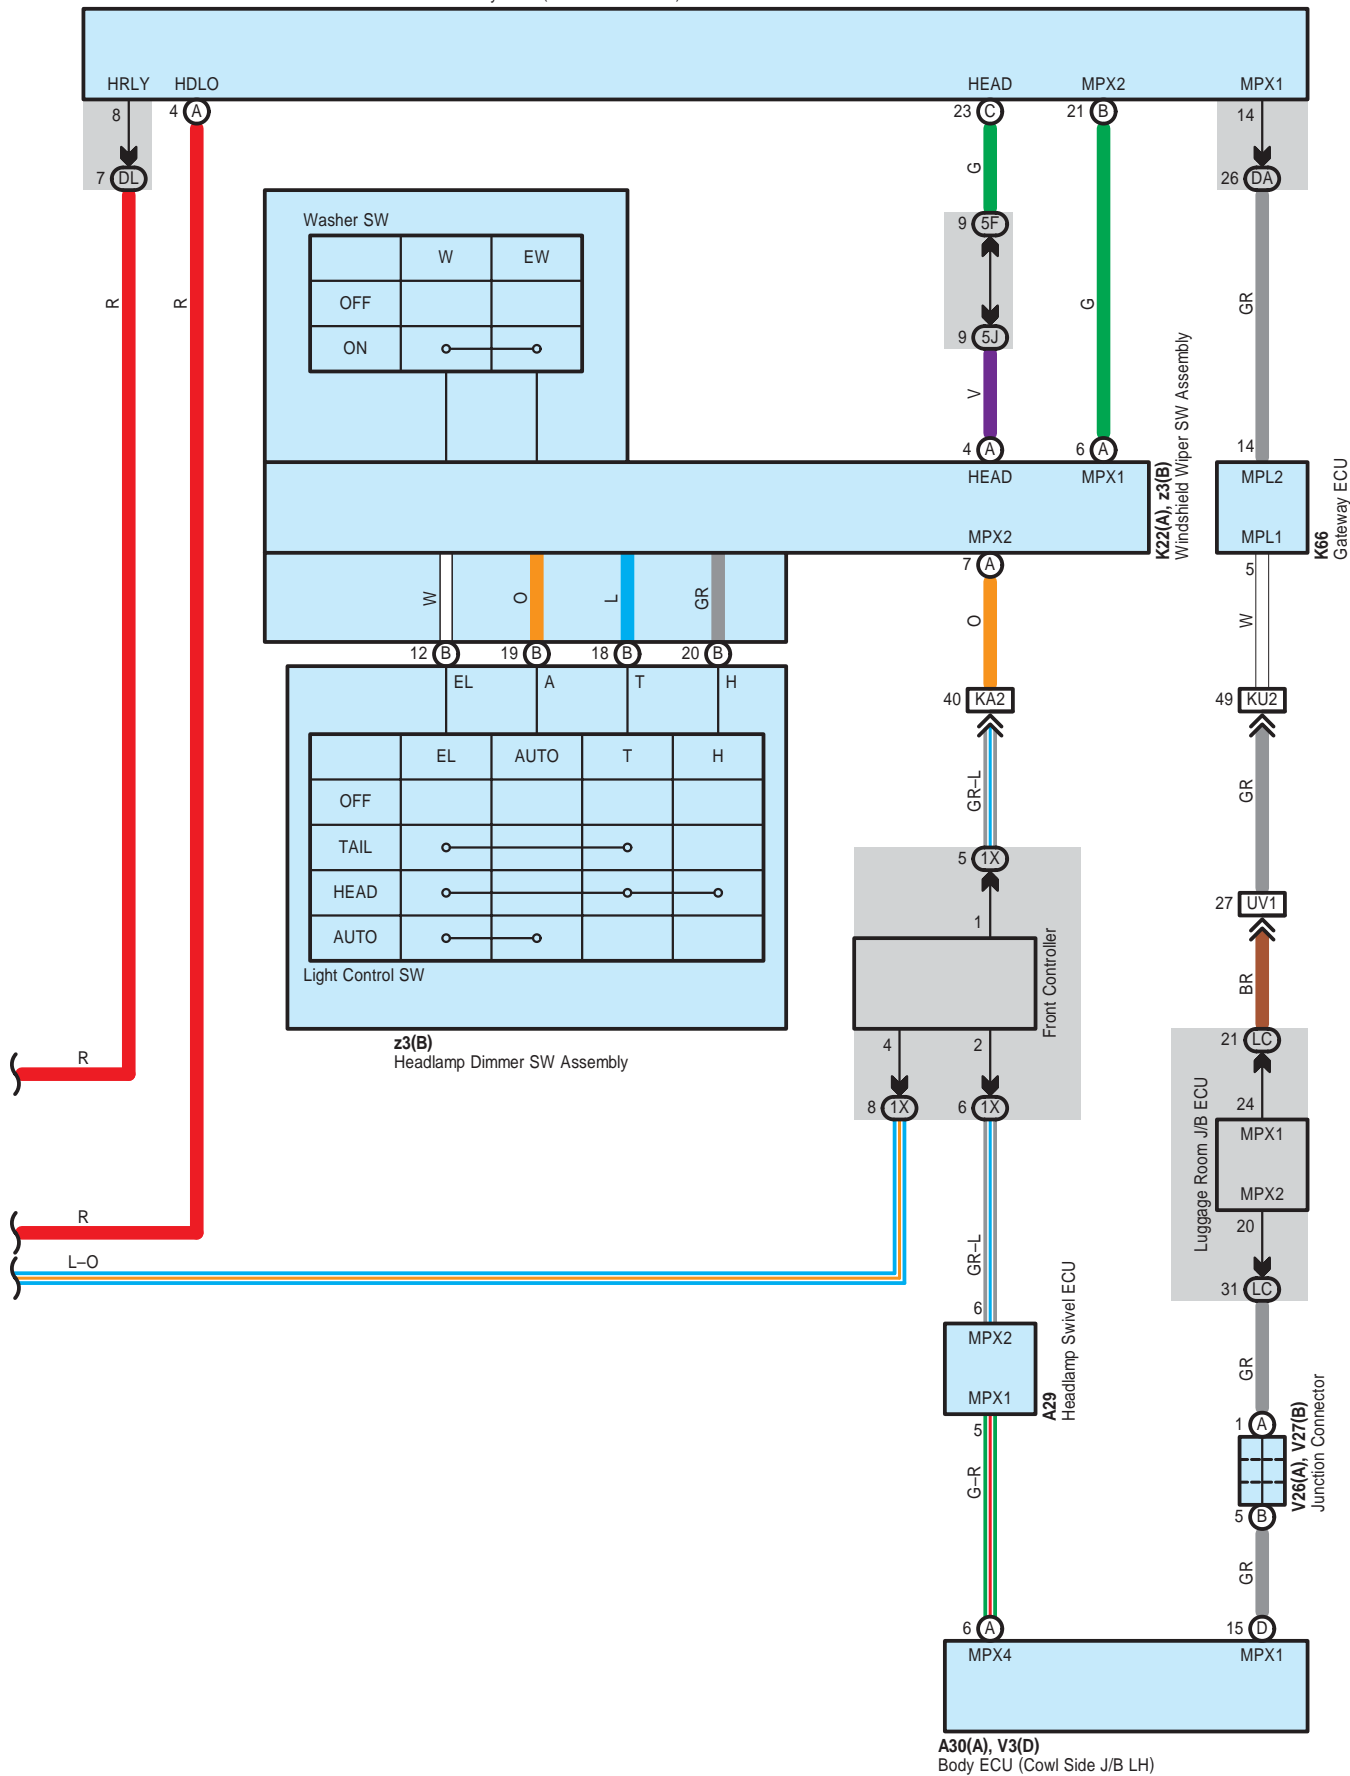

# Headlight Cleaner

## : Parts Location

Code		See Page	Code		See Page	Code		See Page
A3		80	A32	A	84	K68	B	86
A5		80	A33	B	84	V3	D	87
A10	A	80	A39	A	84	V26	A	91
A11	B	80	K12		85	V27	B	91
A17		80	K22	A	85	z3	B	87
A29		84	K66		86			
A30	A	84	K67	C	86			

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1X	29	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
5D	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5F		
5G		
5J		
5K		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DL	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
LC	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel )
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PK	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

## : Ground Points

Code	See Page	Ground Points Location
A1	96	Left Side of the Dash Panel
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever

