





Electronic Modulated Suspension

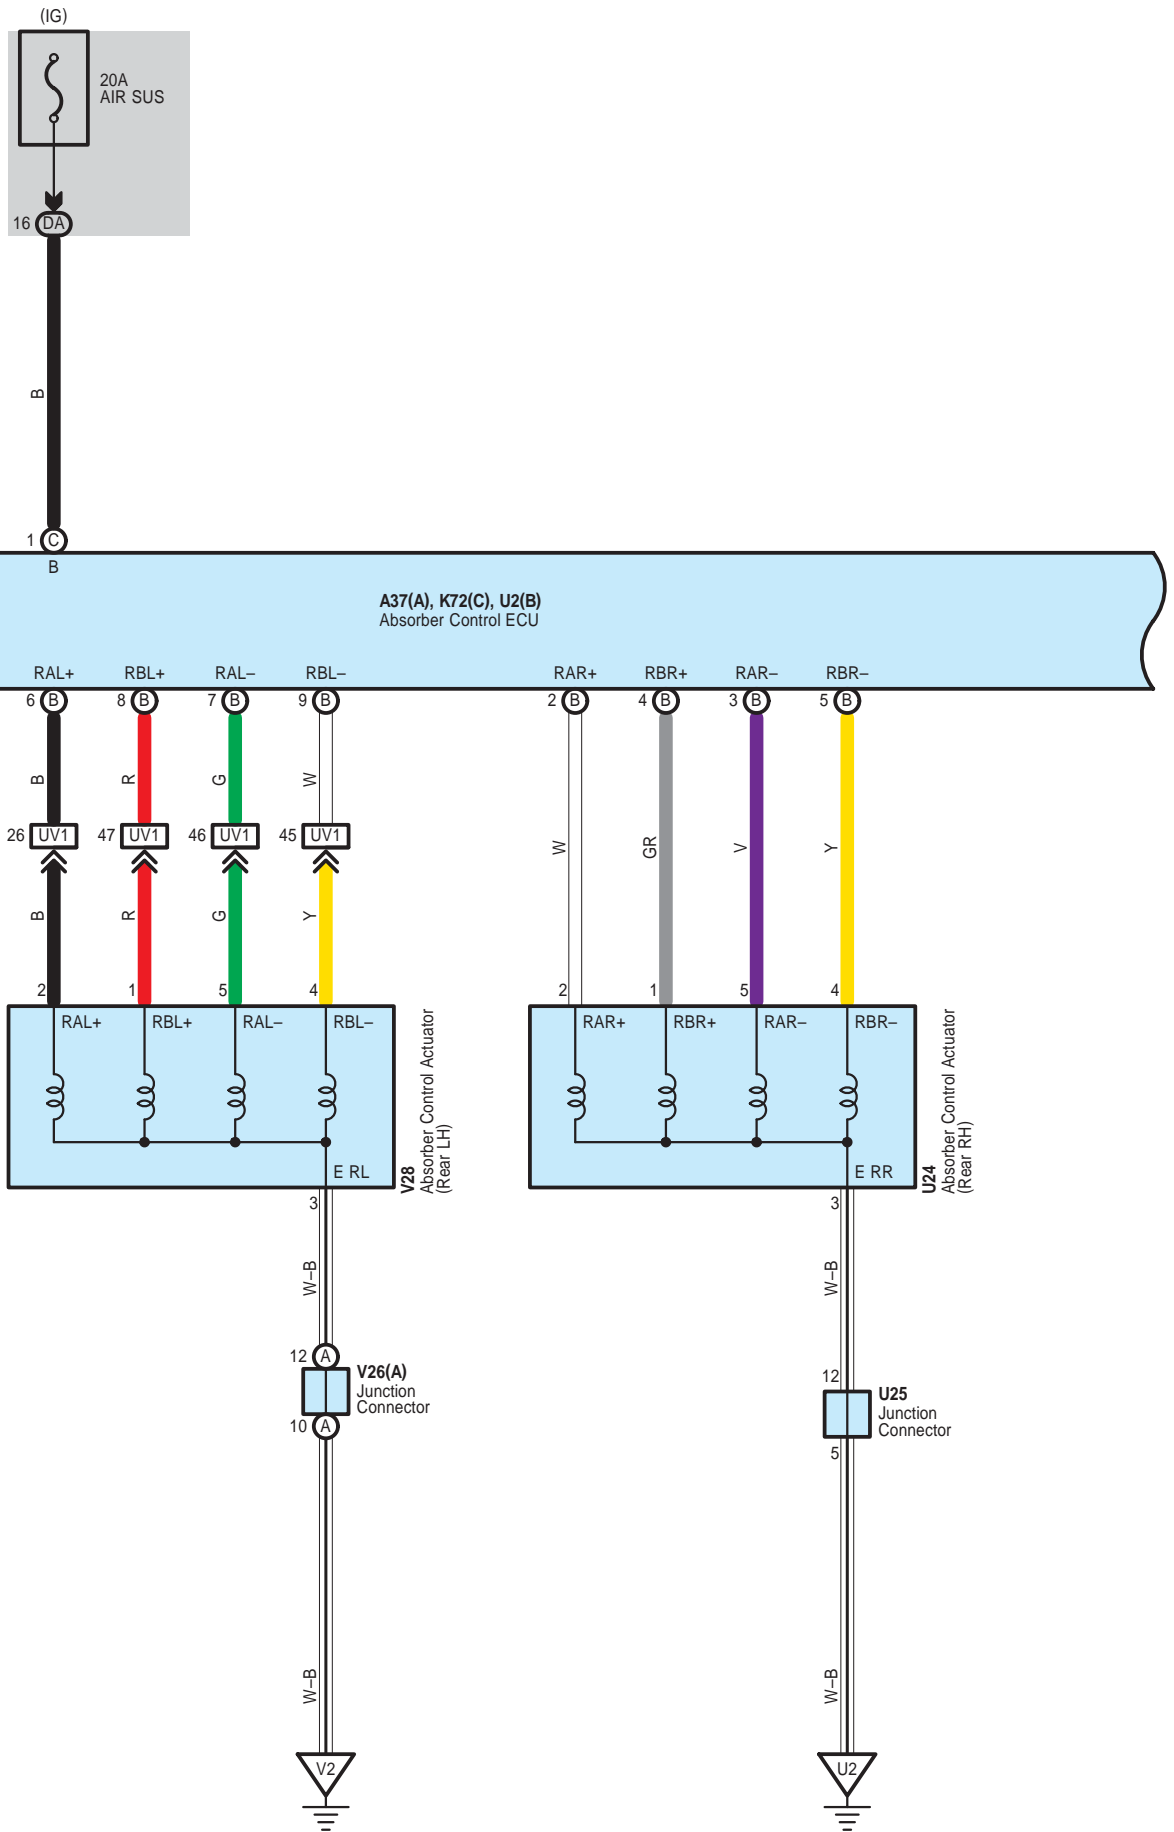

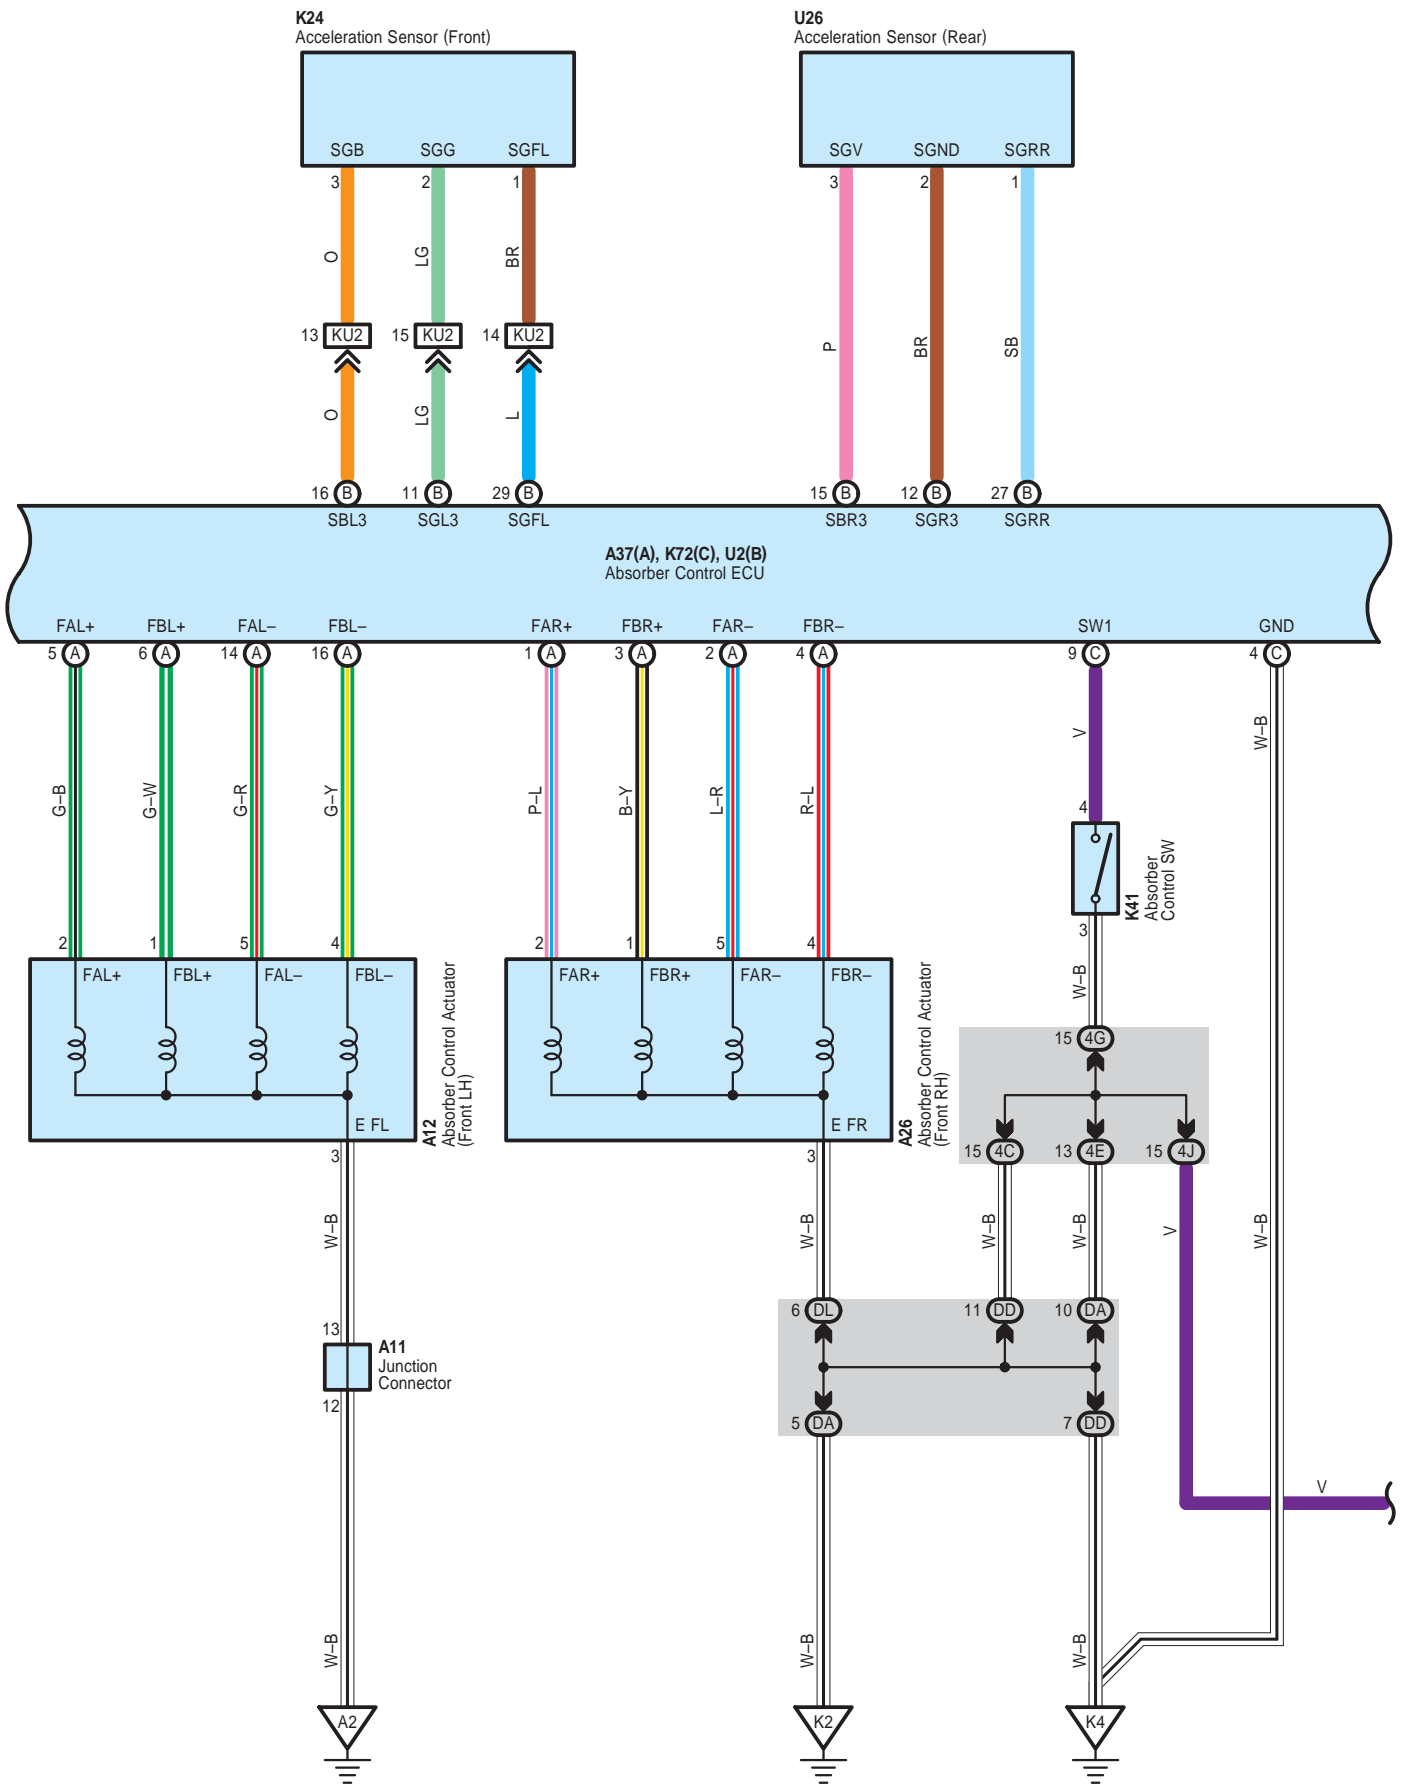



Electronic Modulated Suspension

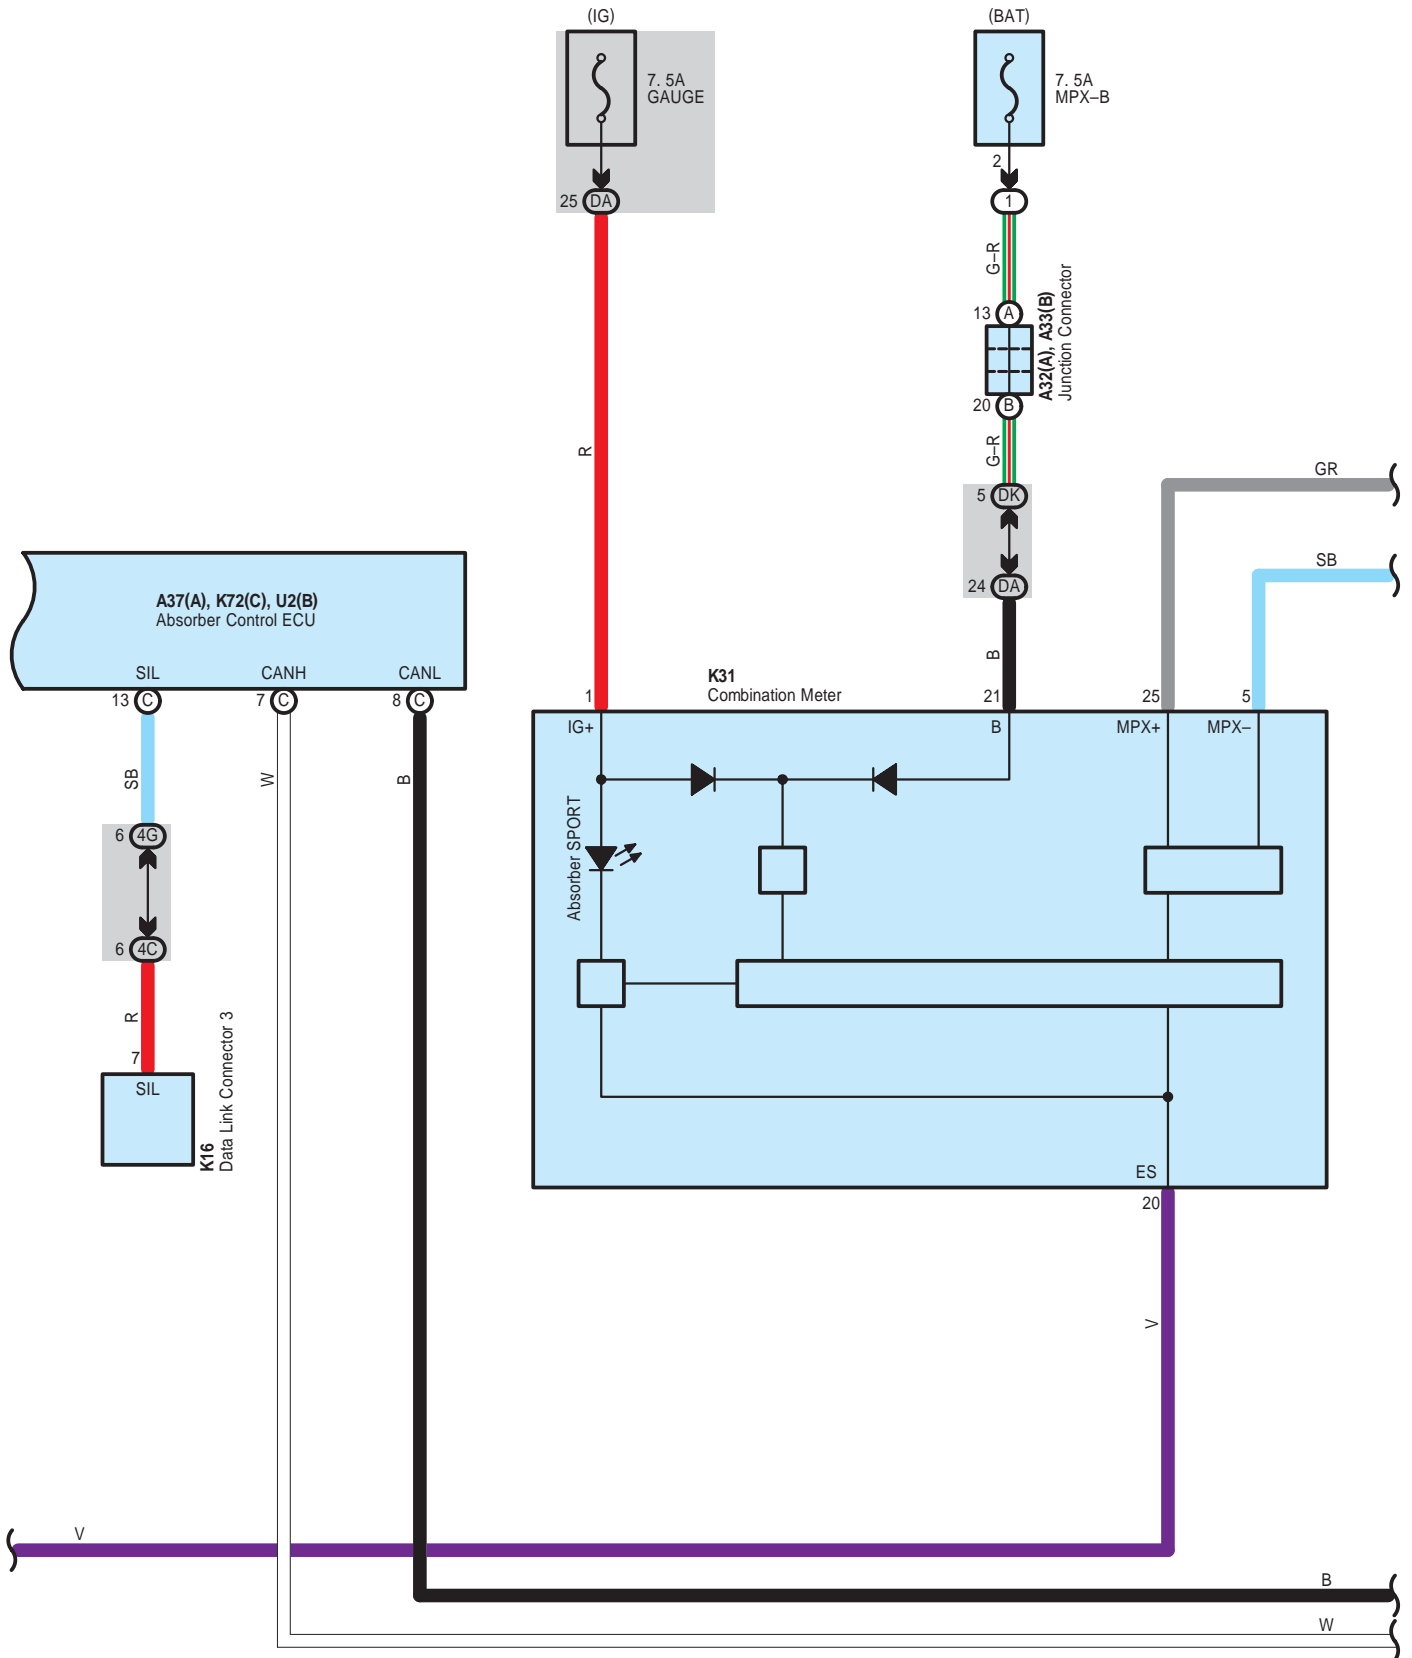

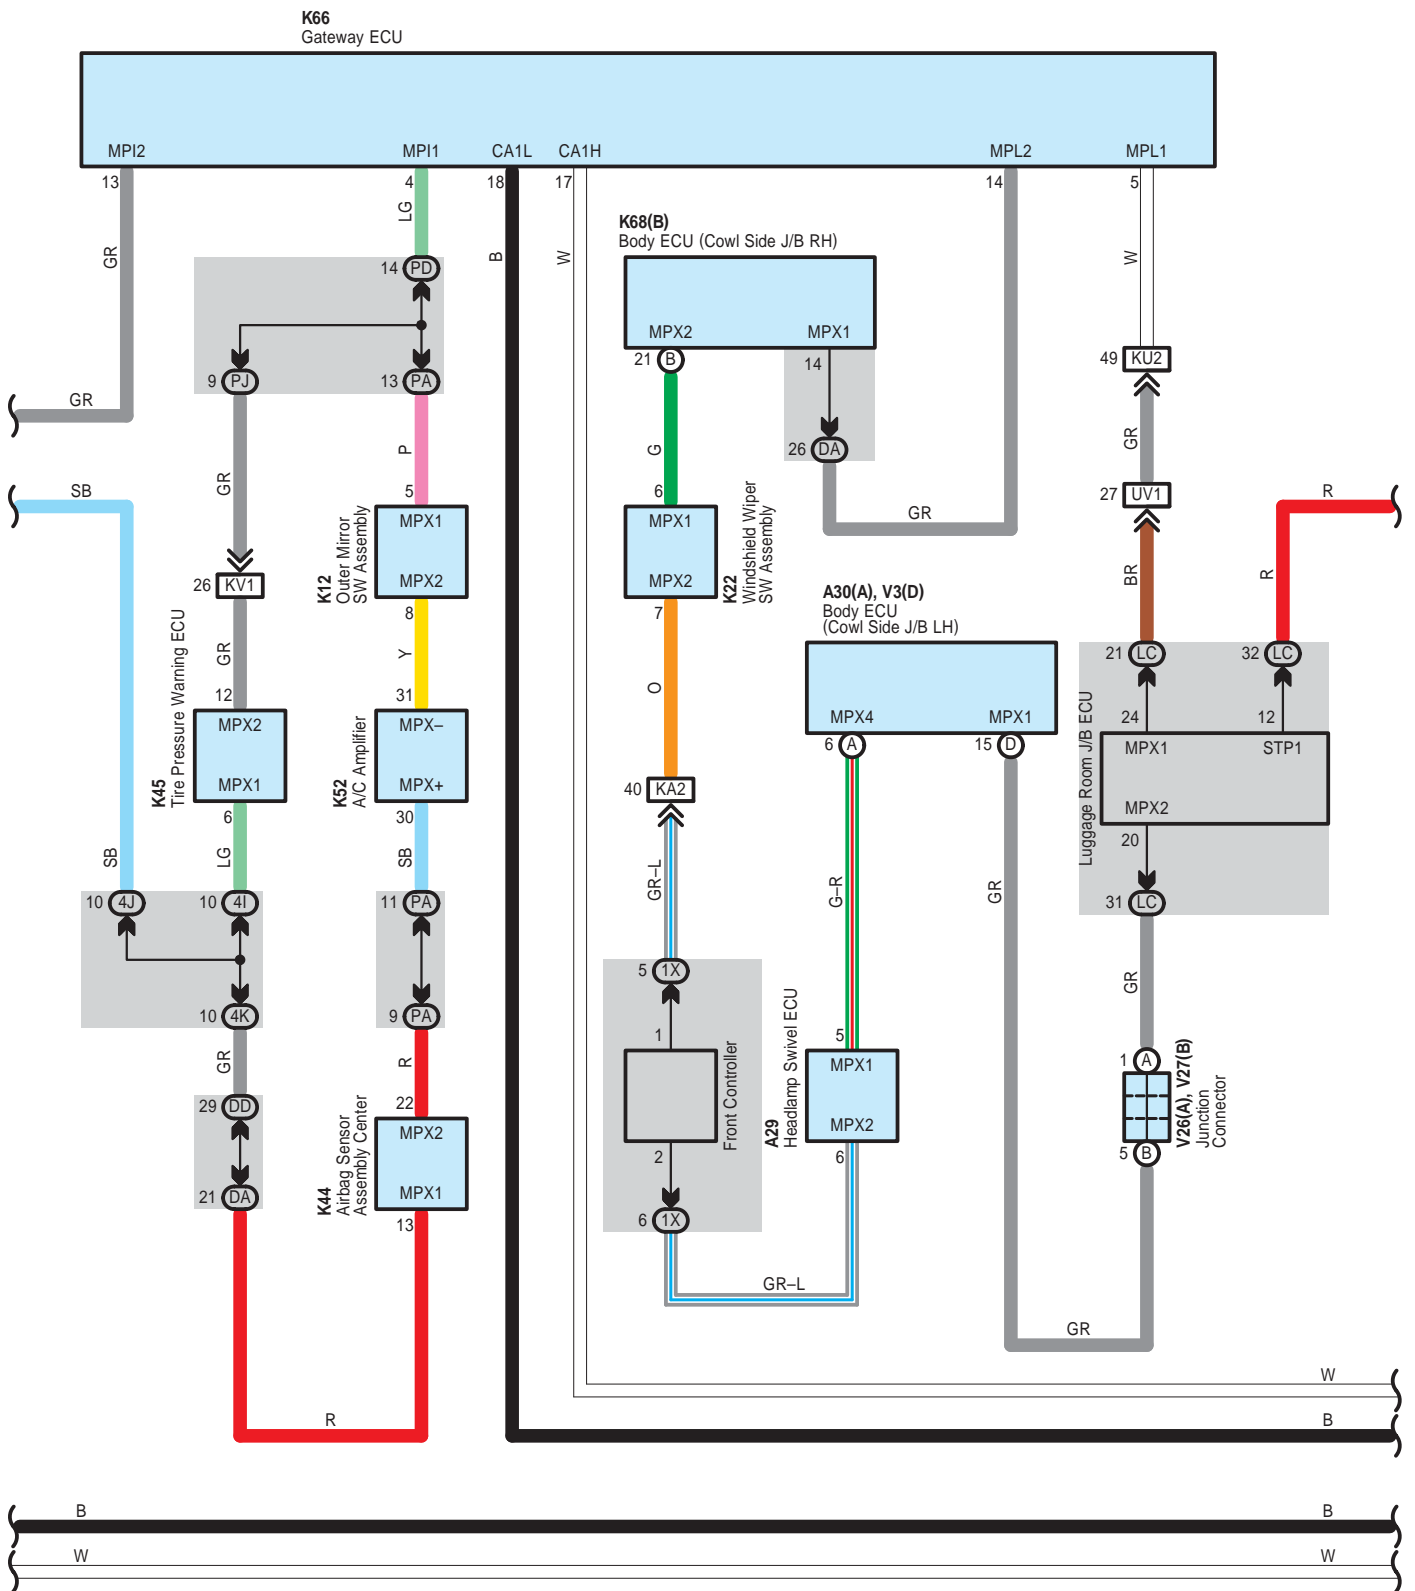



Electronic Modulated Suspension

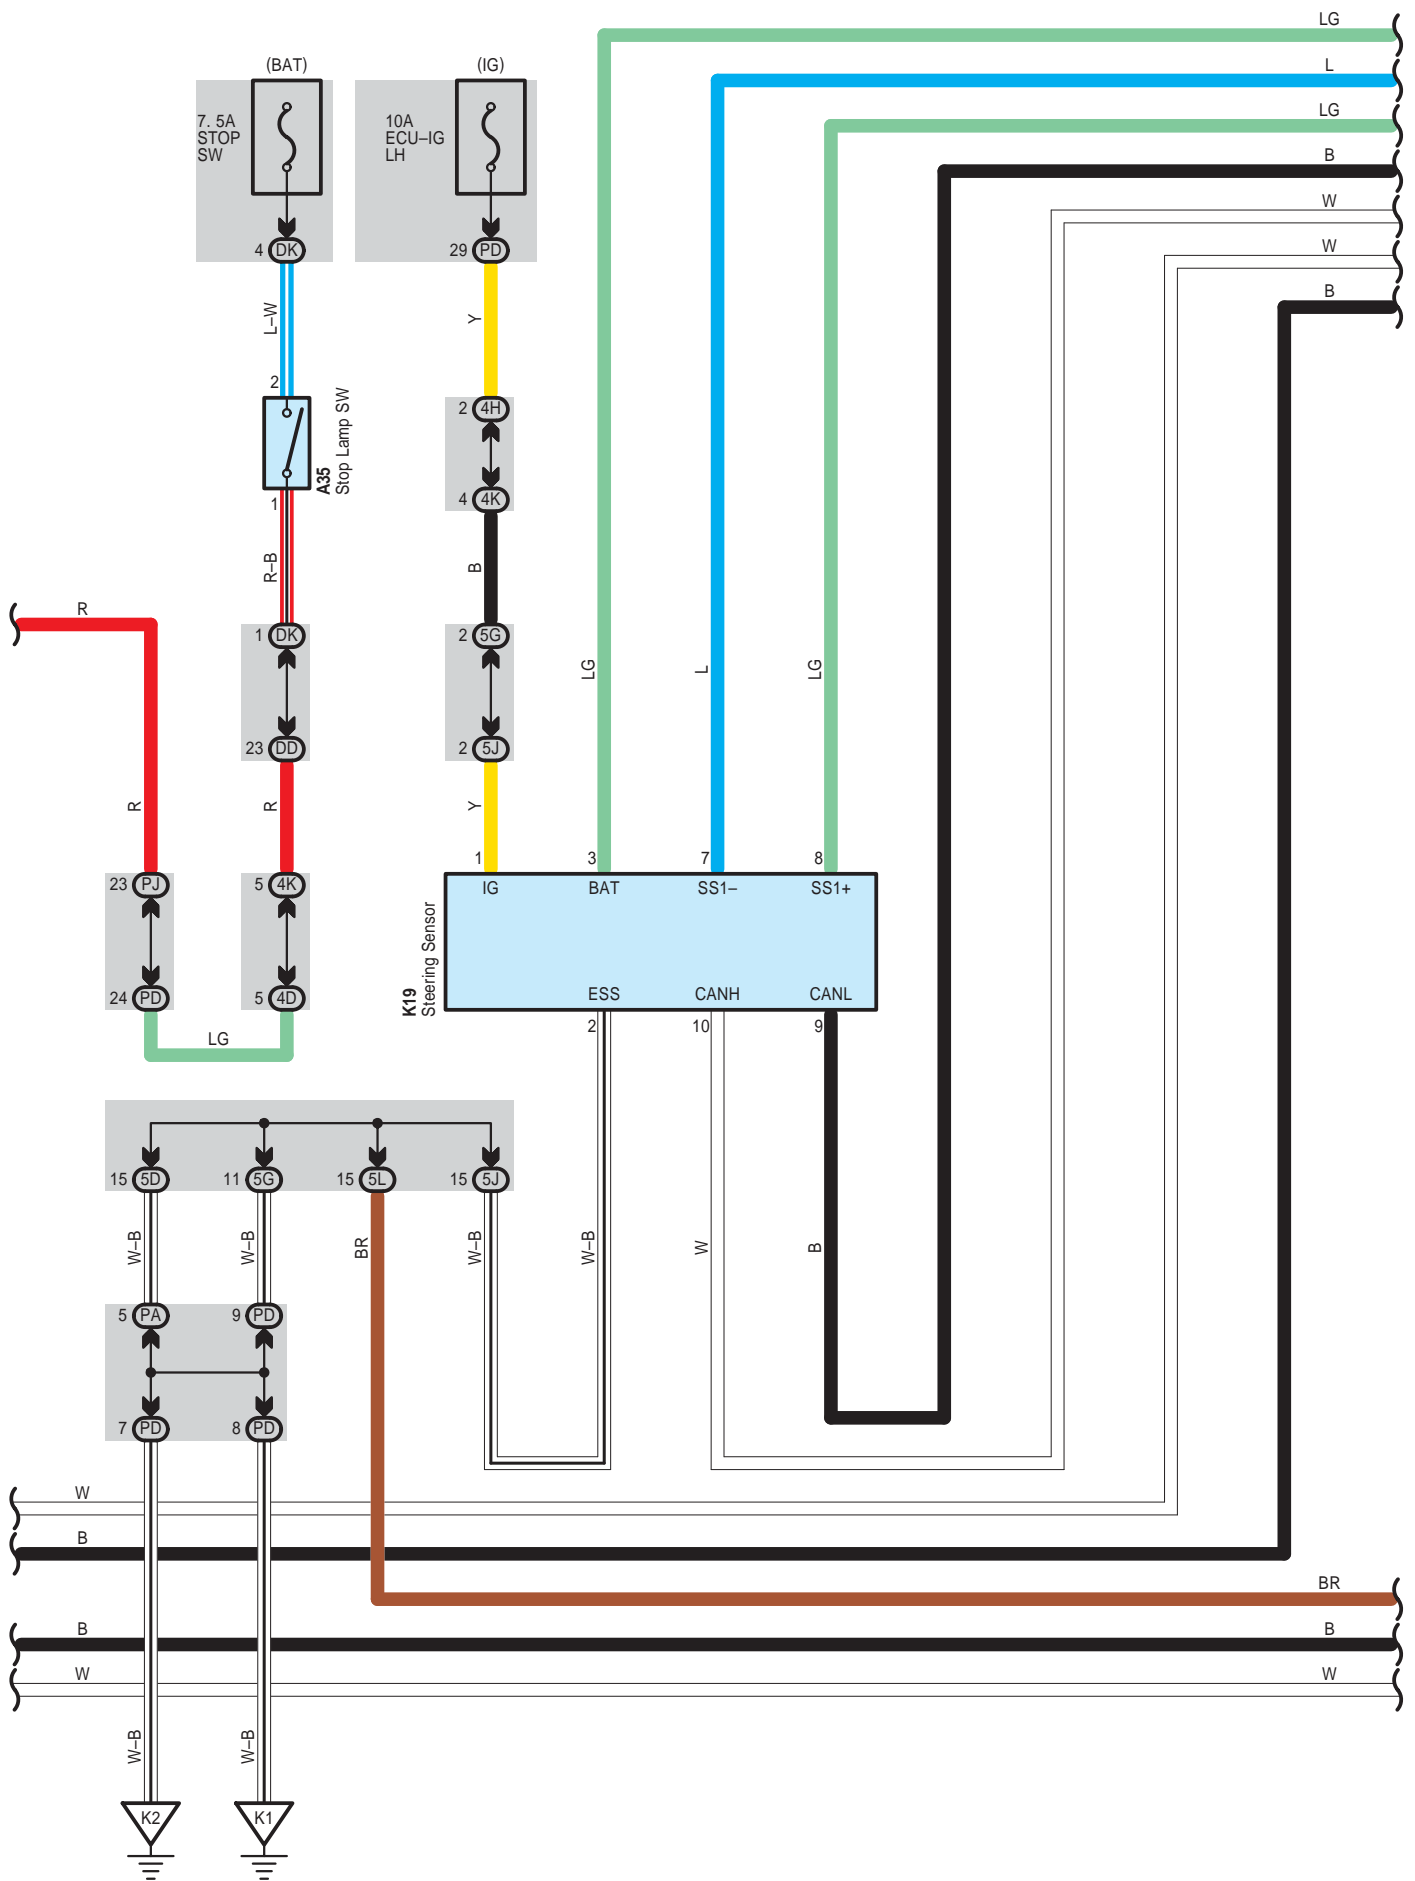

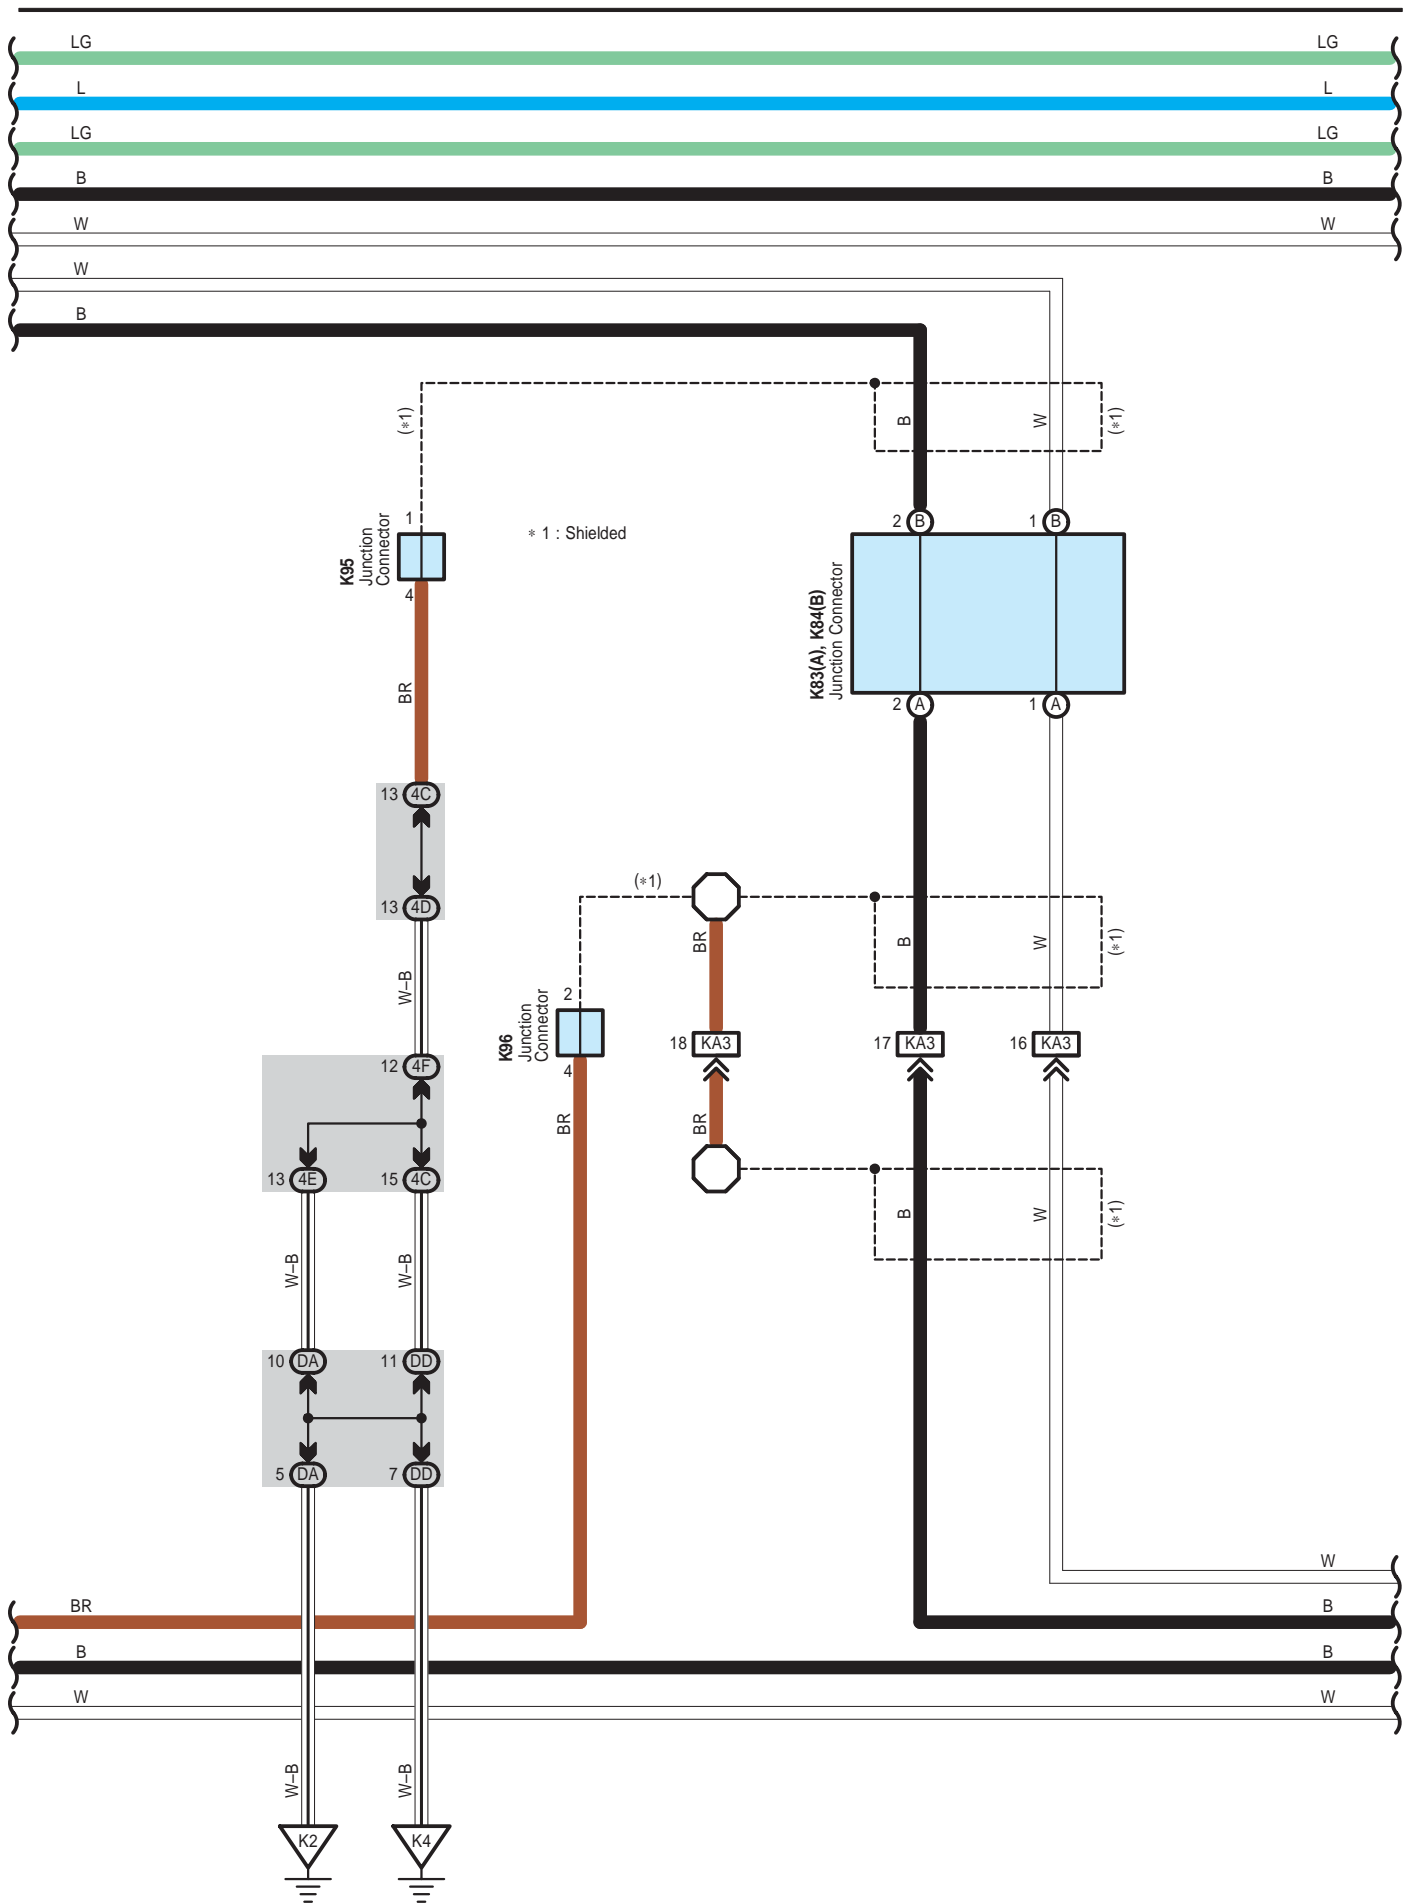



Electronic Modulated Suspension

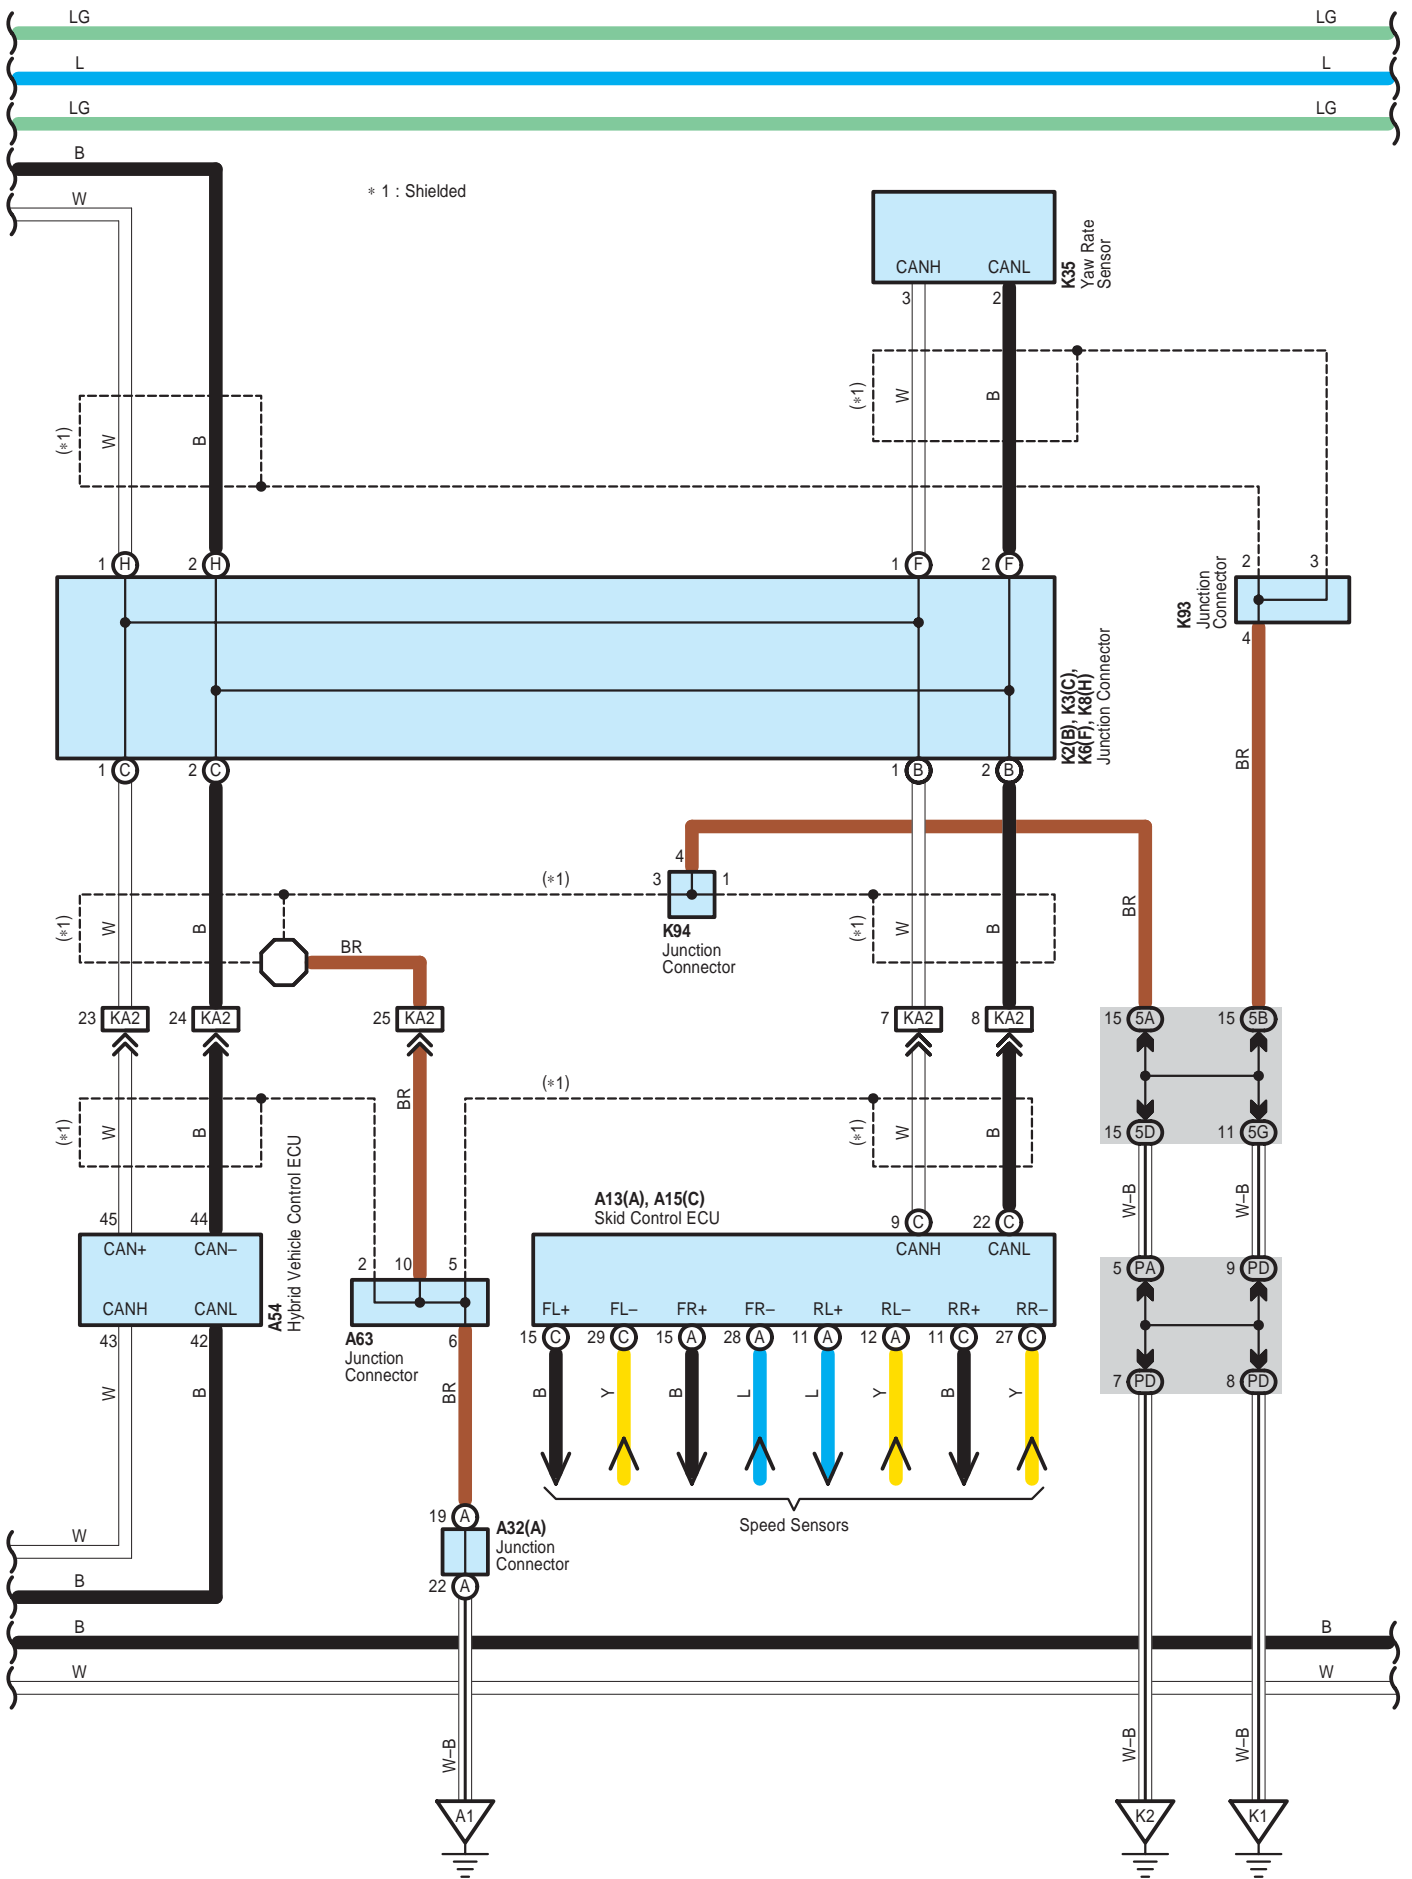

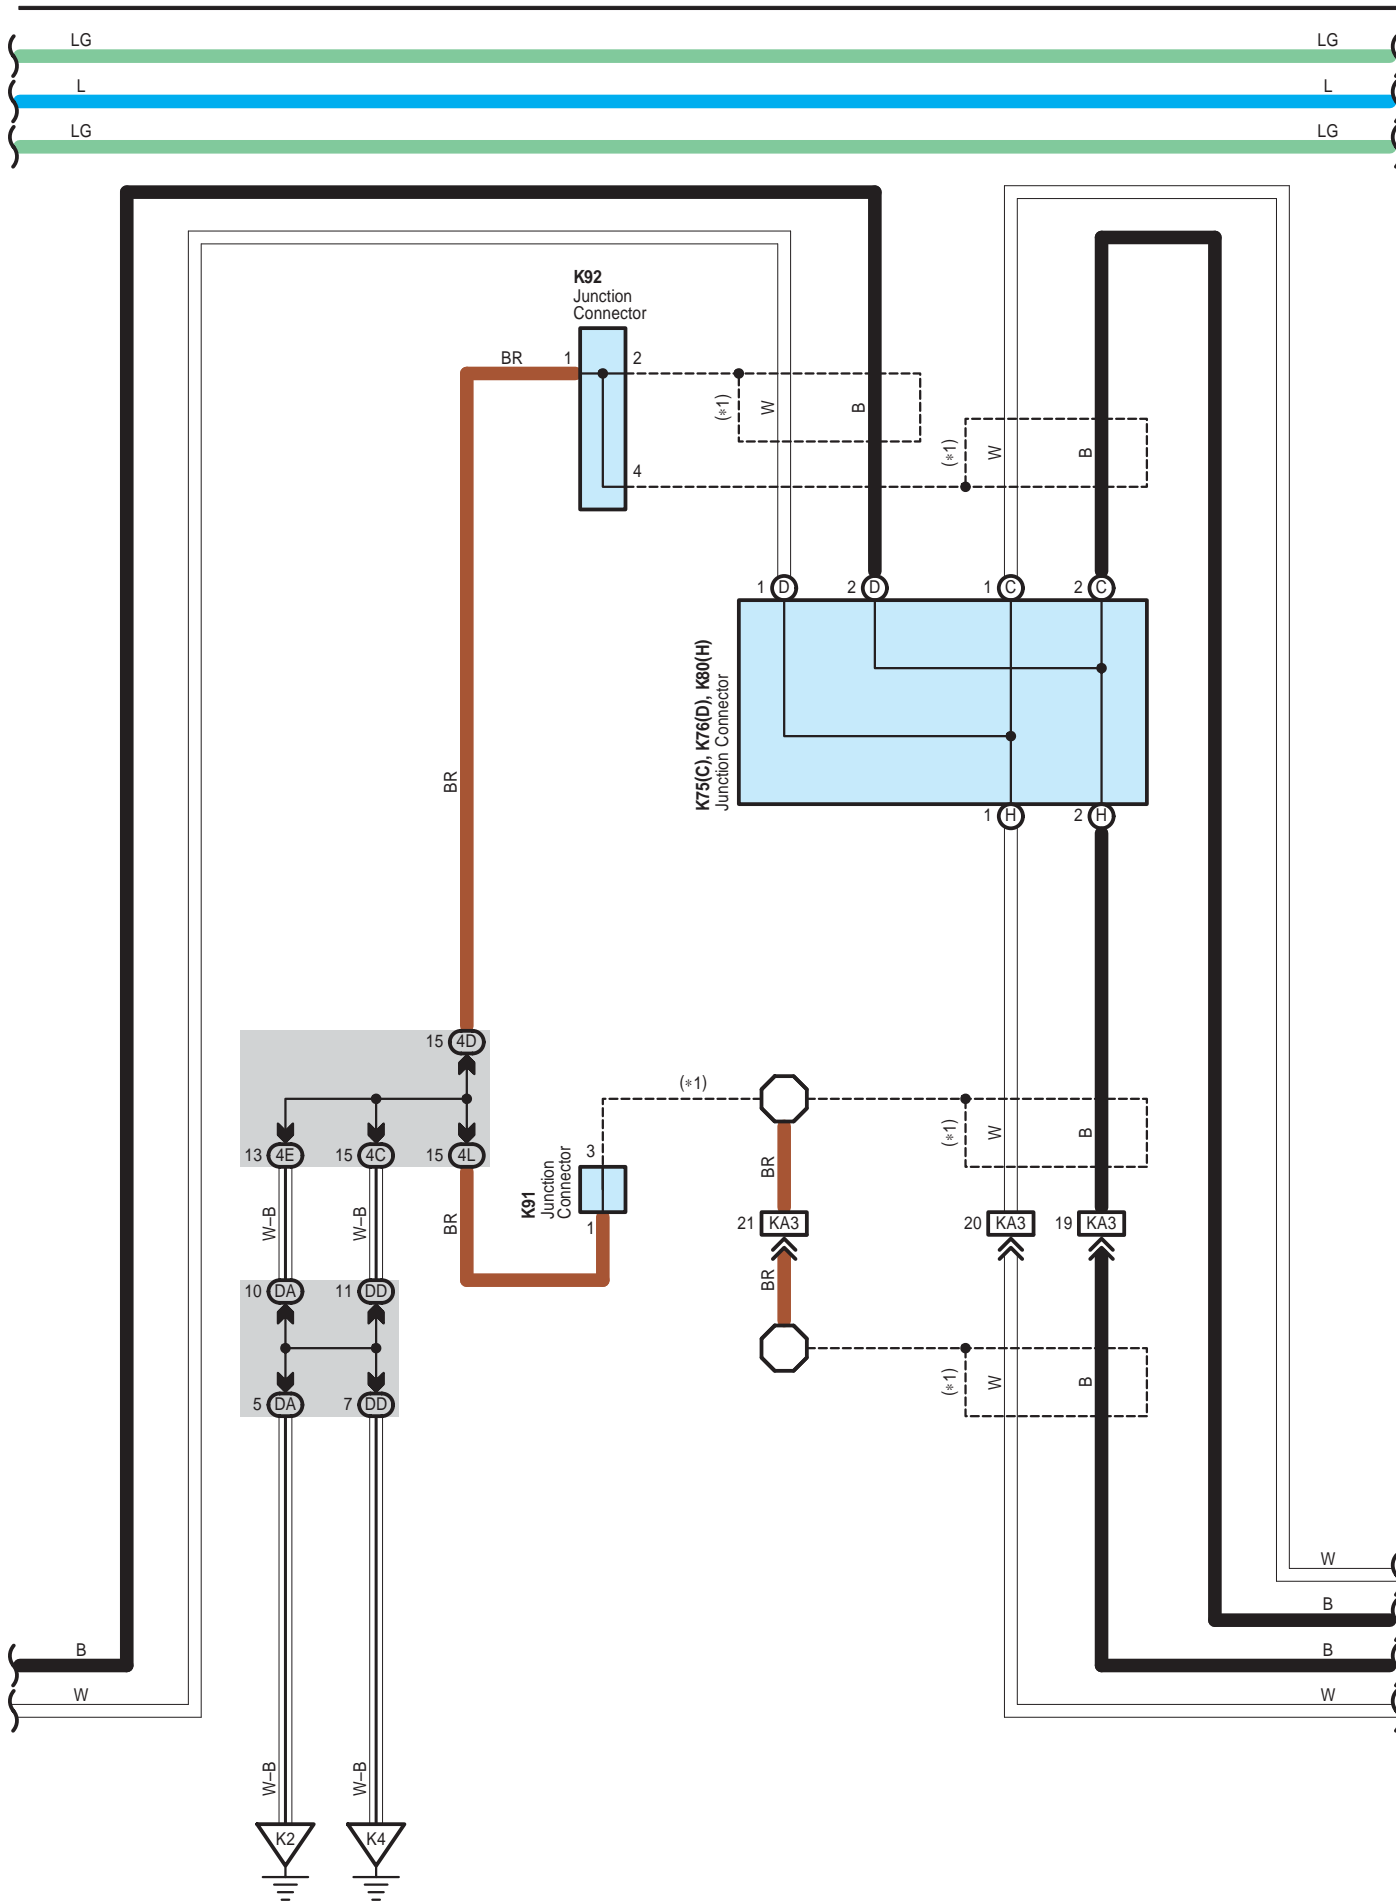

Electronic Modulated Suspension

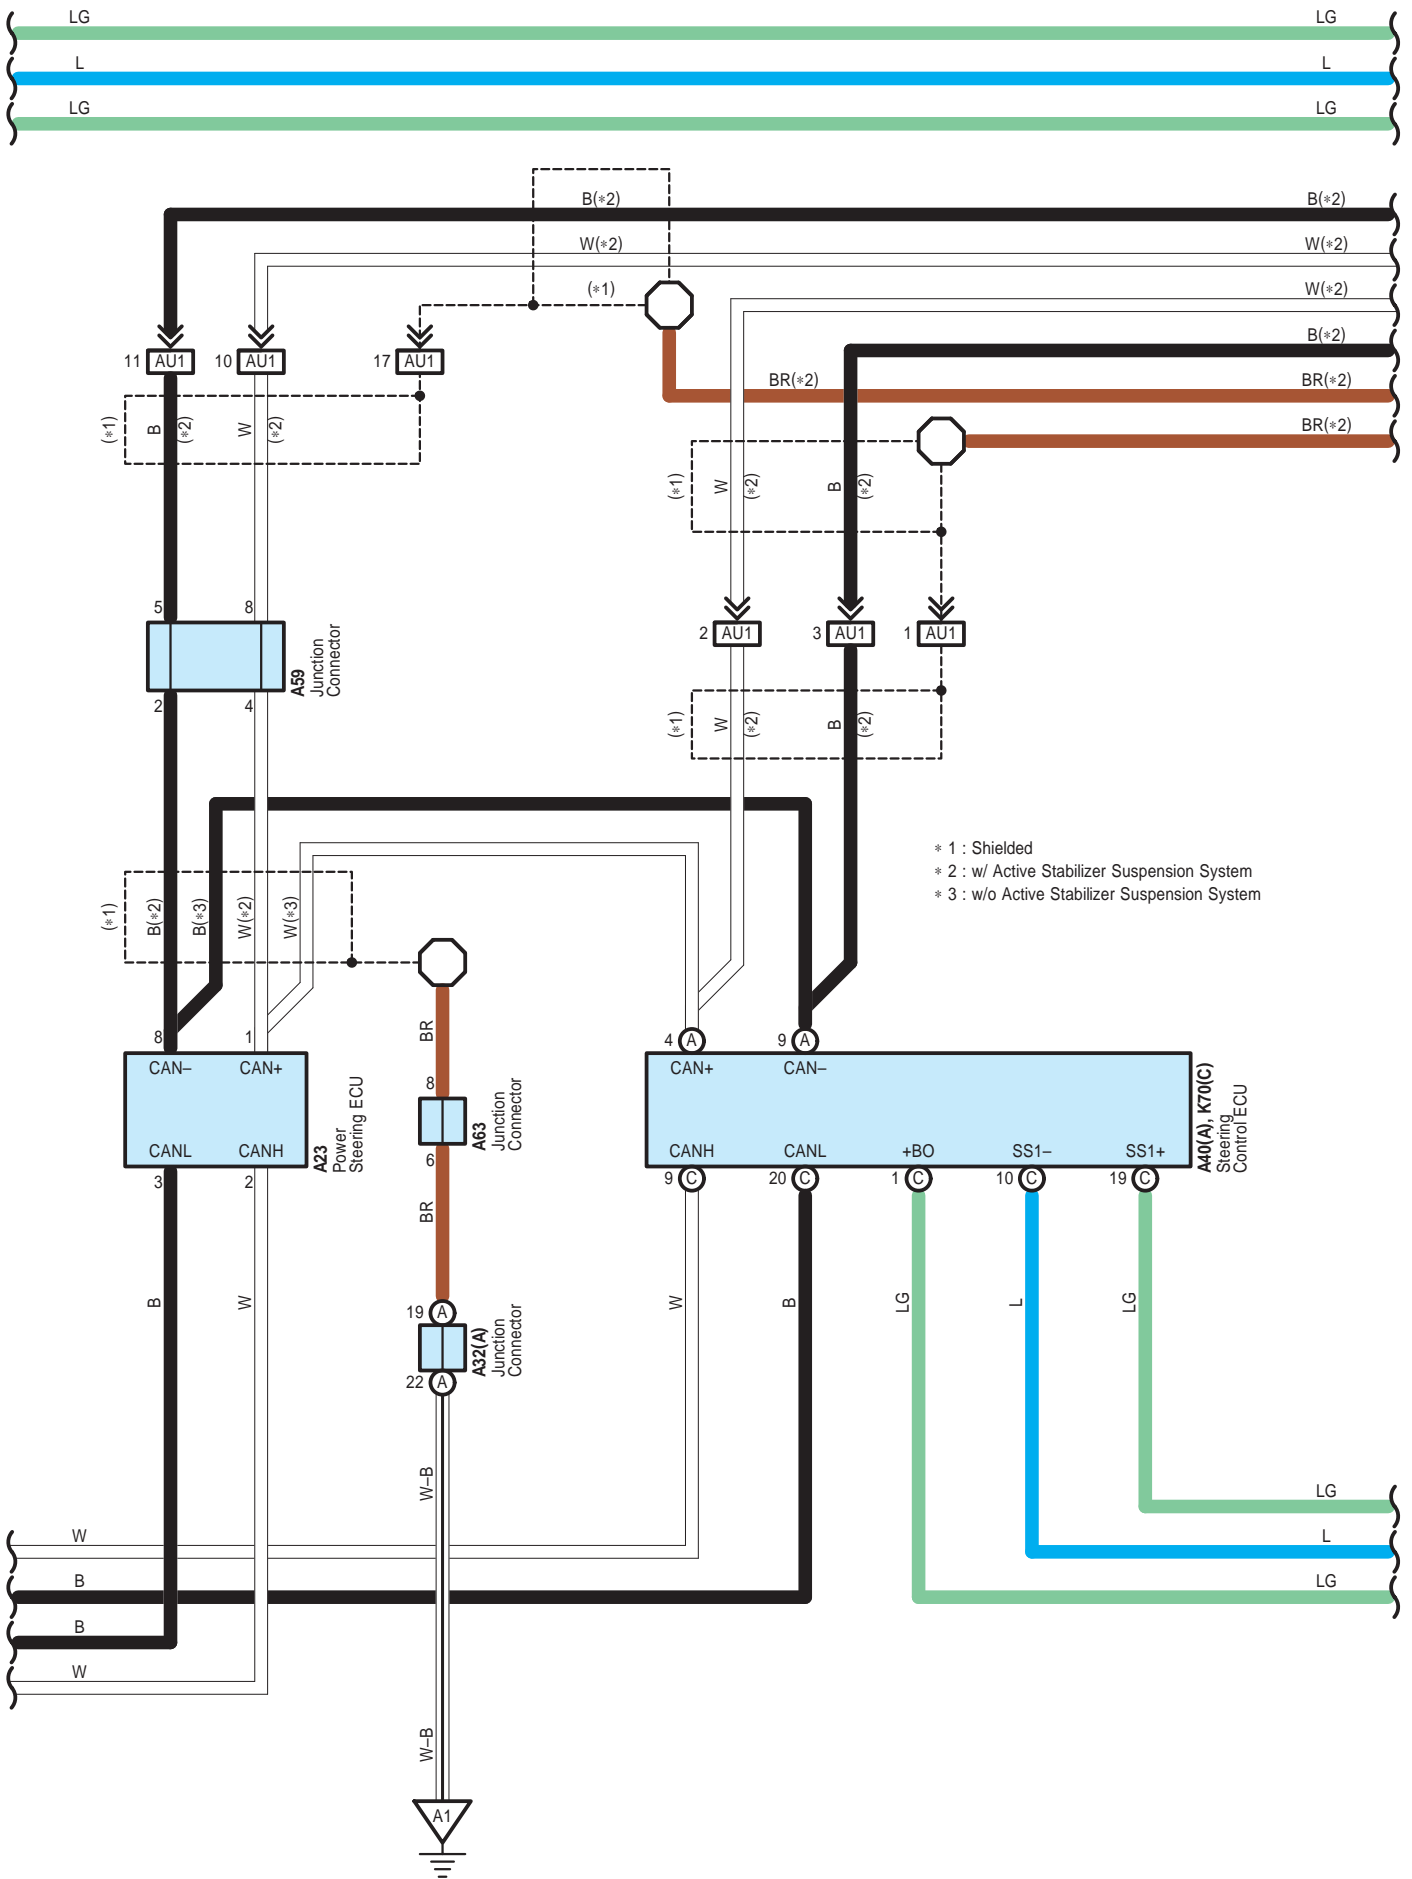

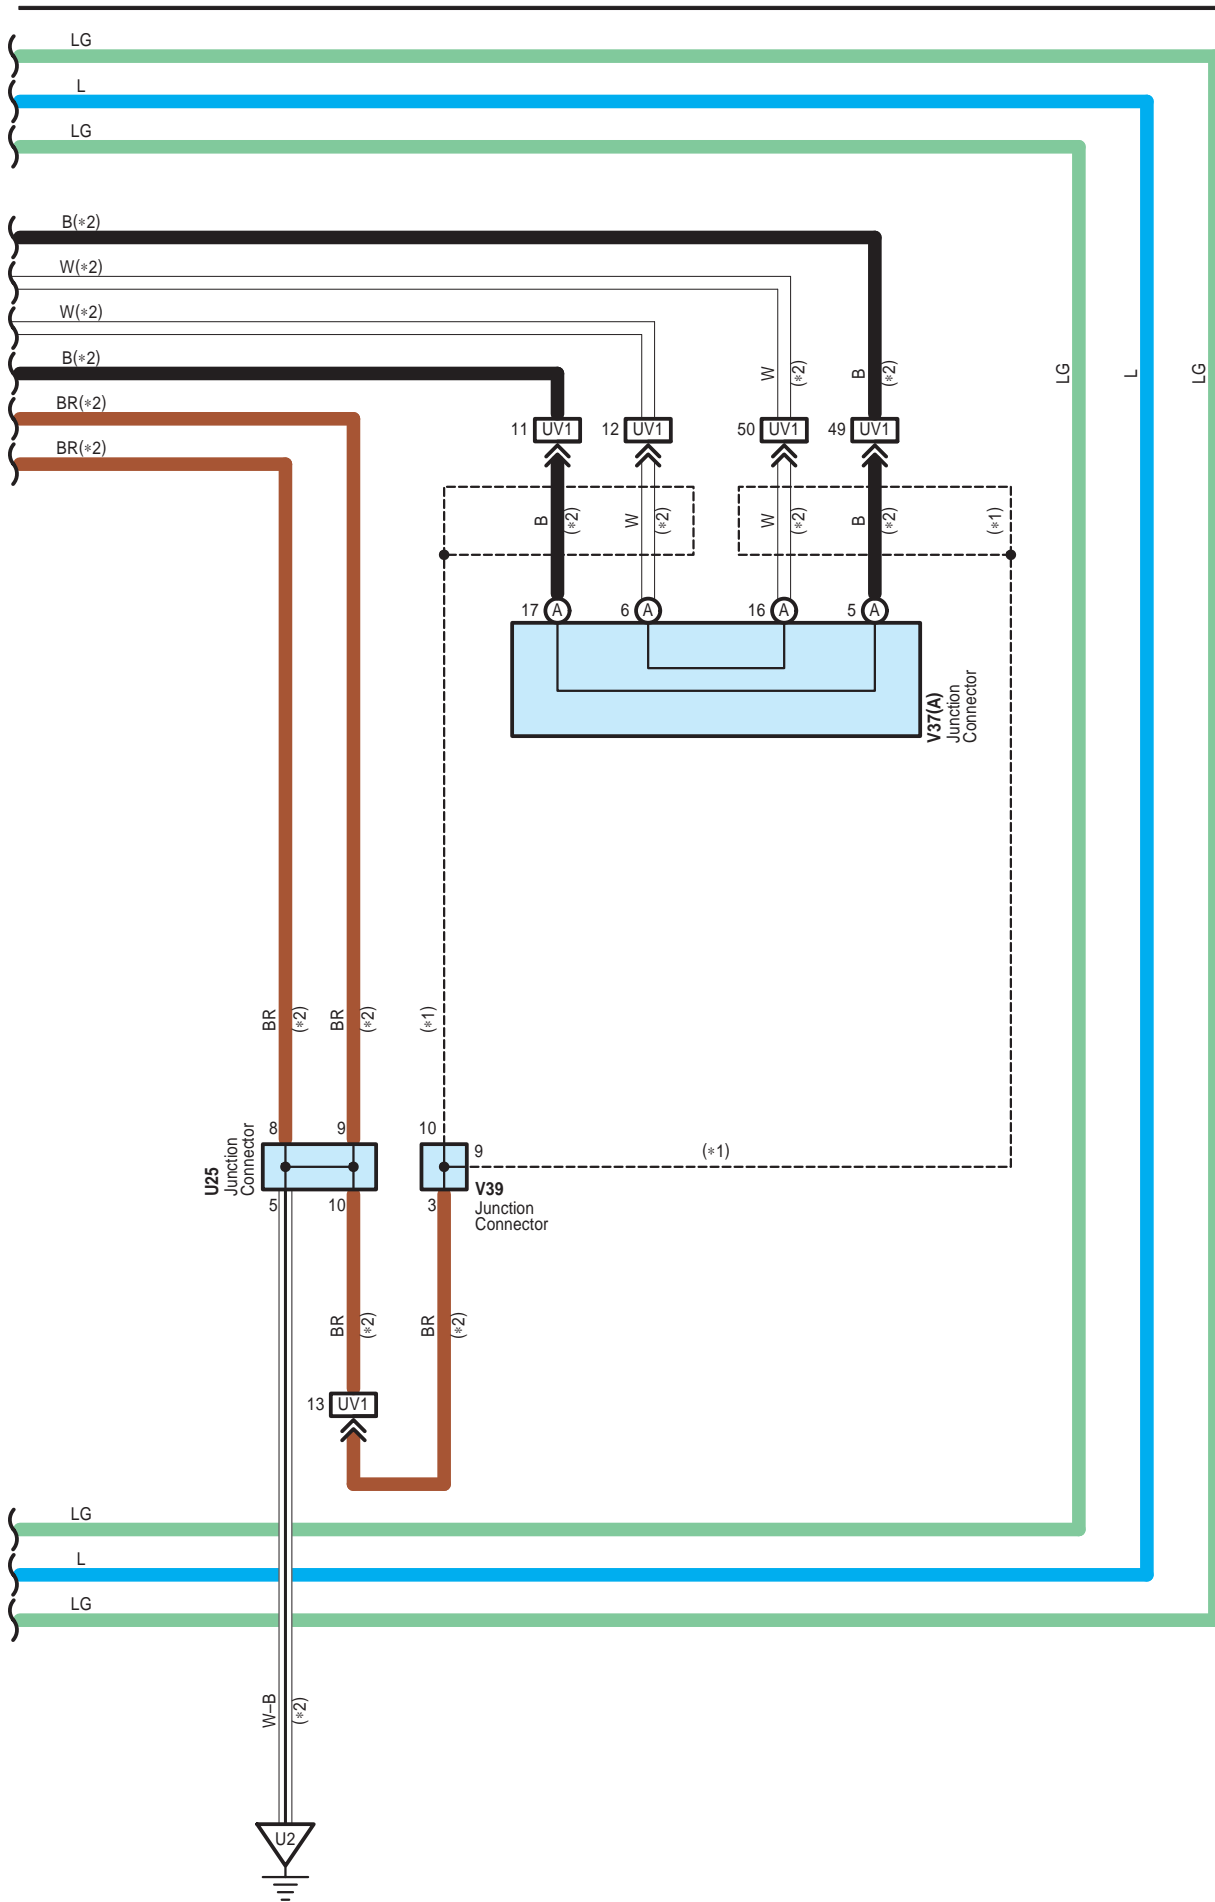

Electronic Modulated Suspension

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A11	80	K8 H	74, 85	K83 A	78, 86
A12	80	K12	85	K84 B	78, 86
A13 A	80	K16	85	K91	86
A15 C	80	K19	85	K92	86
A23	80	K22	85	K93	86
A26	80	K24	85	K94	86
A29	84	K31	85	K95	86
A30 A	84	K35	85	K96	86
A32 A	84	K41	86	U2 B	87
A33 B	84	K44	86	U24	90
A35	84	K45	86	U25	90
A37 A	84	K52	86	U26	90
A40 A	84	K66	86	V3 D	87
A54	80	K68 B	86	V26 A	91
A59	80	K70 C	86	V27 B	91
A63	84	K72 C	86	V28	91
K2 B	74, 85	K75 C	76, 86	V37 A	91
K3 C	74, 85	K76 D	76, 86	V39	91
K6 F	74, 85	K80 H	76, 86		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1X	29	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4K	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
4L		
5A		
5B		
5D		
5G	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
5J		
5L		
DA	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
DK	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel)
DL		
LC	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PA		
PD	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PJ		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AU1	97	Engine Room Main Wire and Floor No.1 Wire (Cowl Side Panel RH)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KA3	97	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

 : Ground Points

Code	See Page	Ground Points Location
A1	96	Left Side of the Dash Panel
A2	96	Front Left Fender Apron
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
U2	98	Right Side of the Rear Floor Partition Panel
V2	98	Roof Side Inner Panel LH