




Fuel Lid Opener

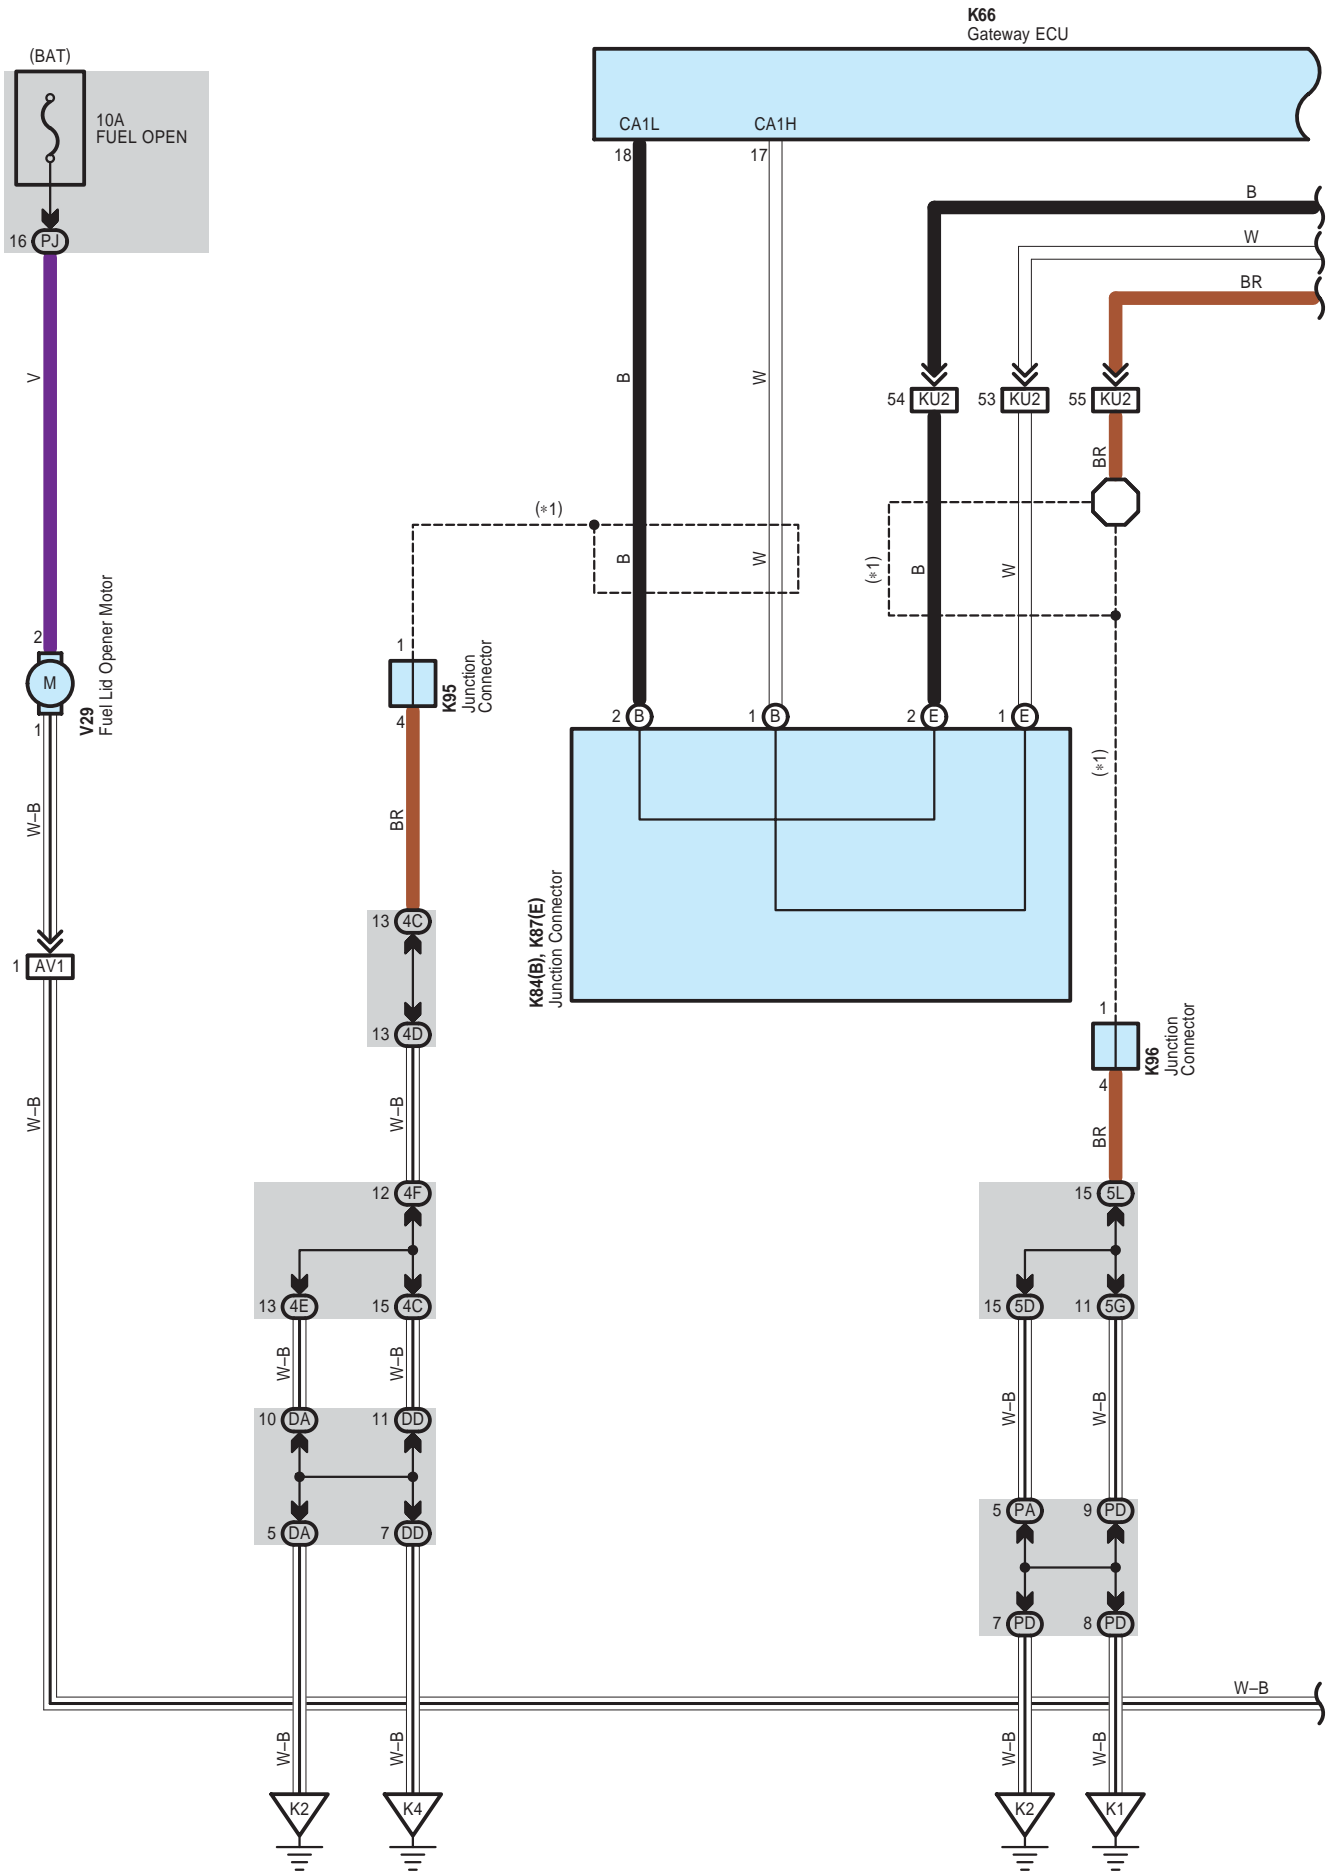

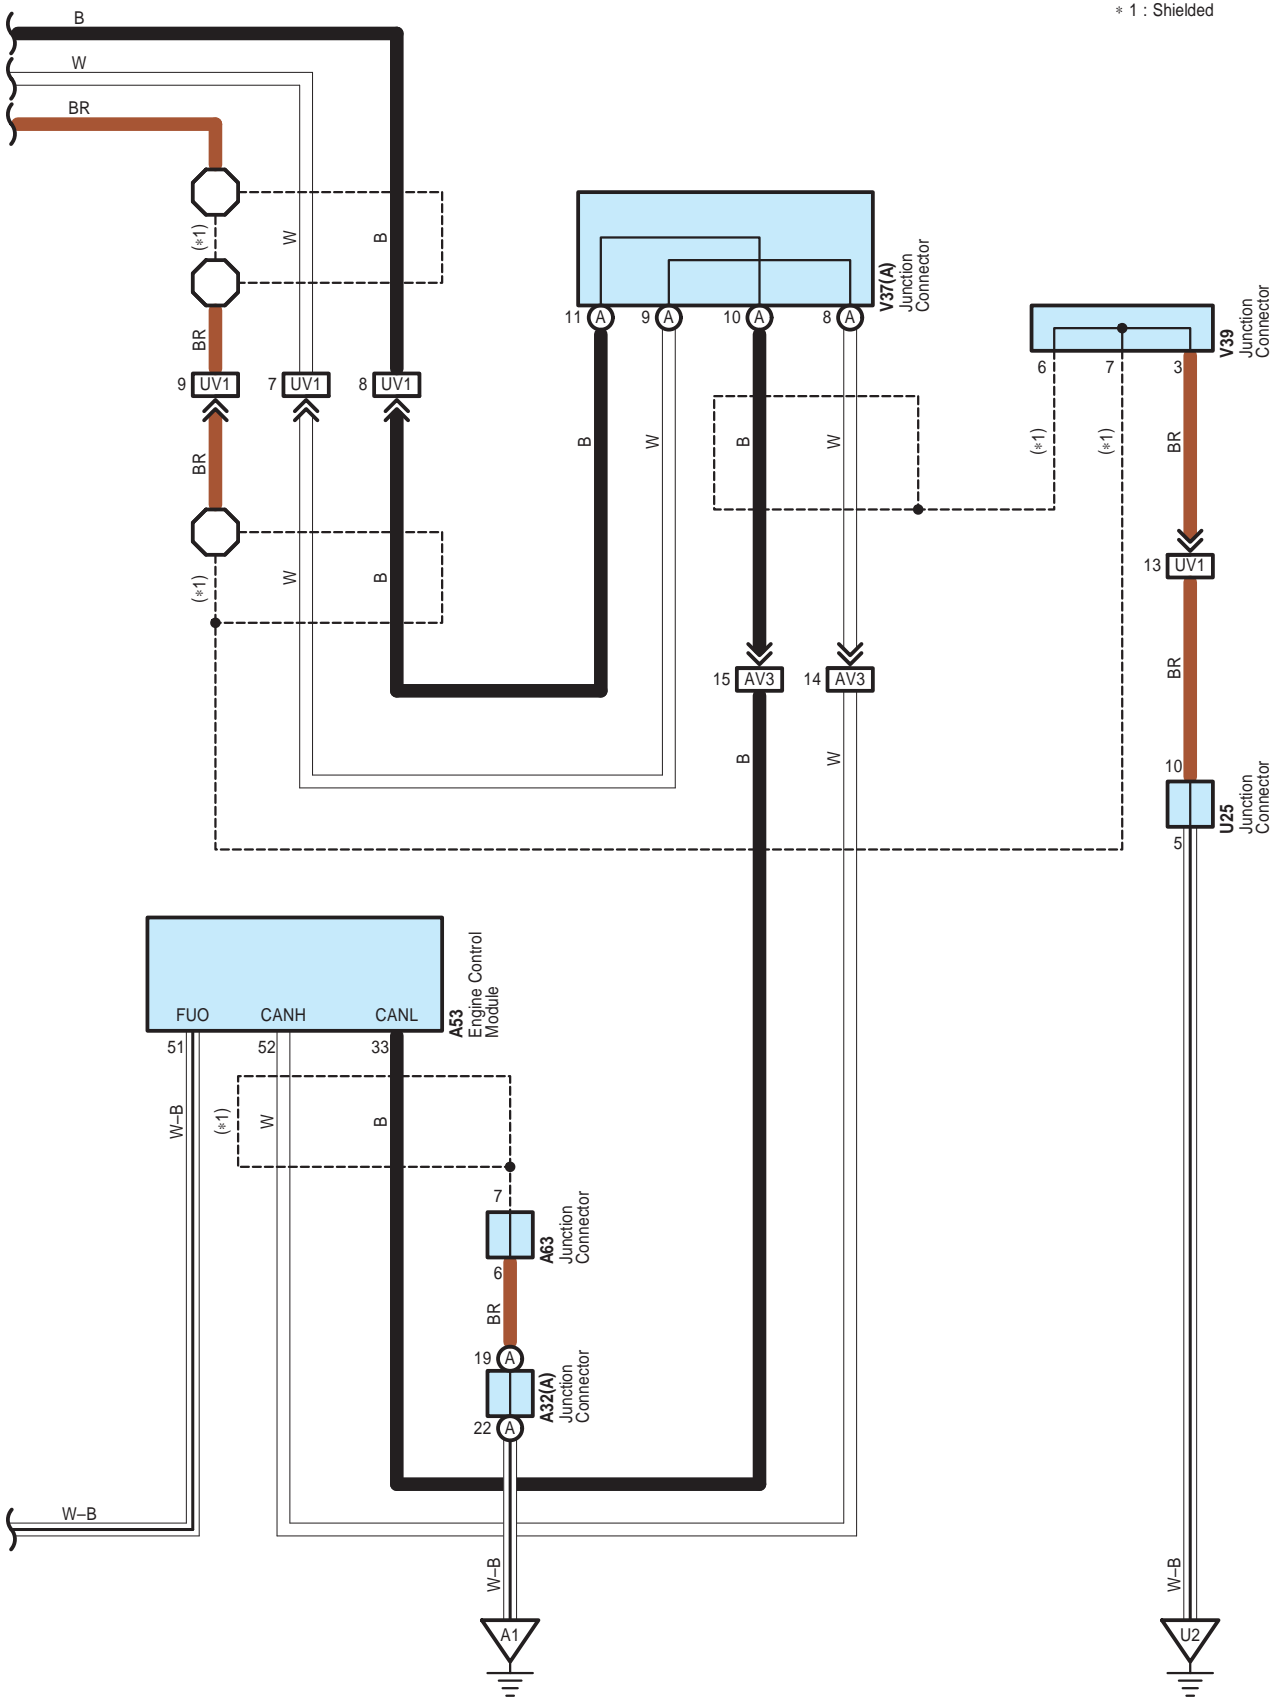

Fuel Lid Opener

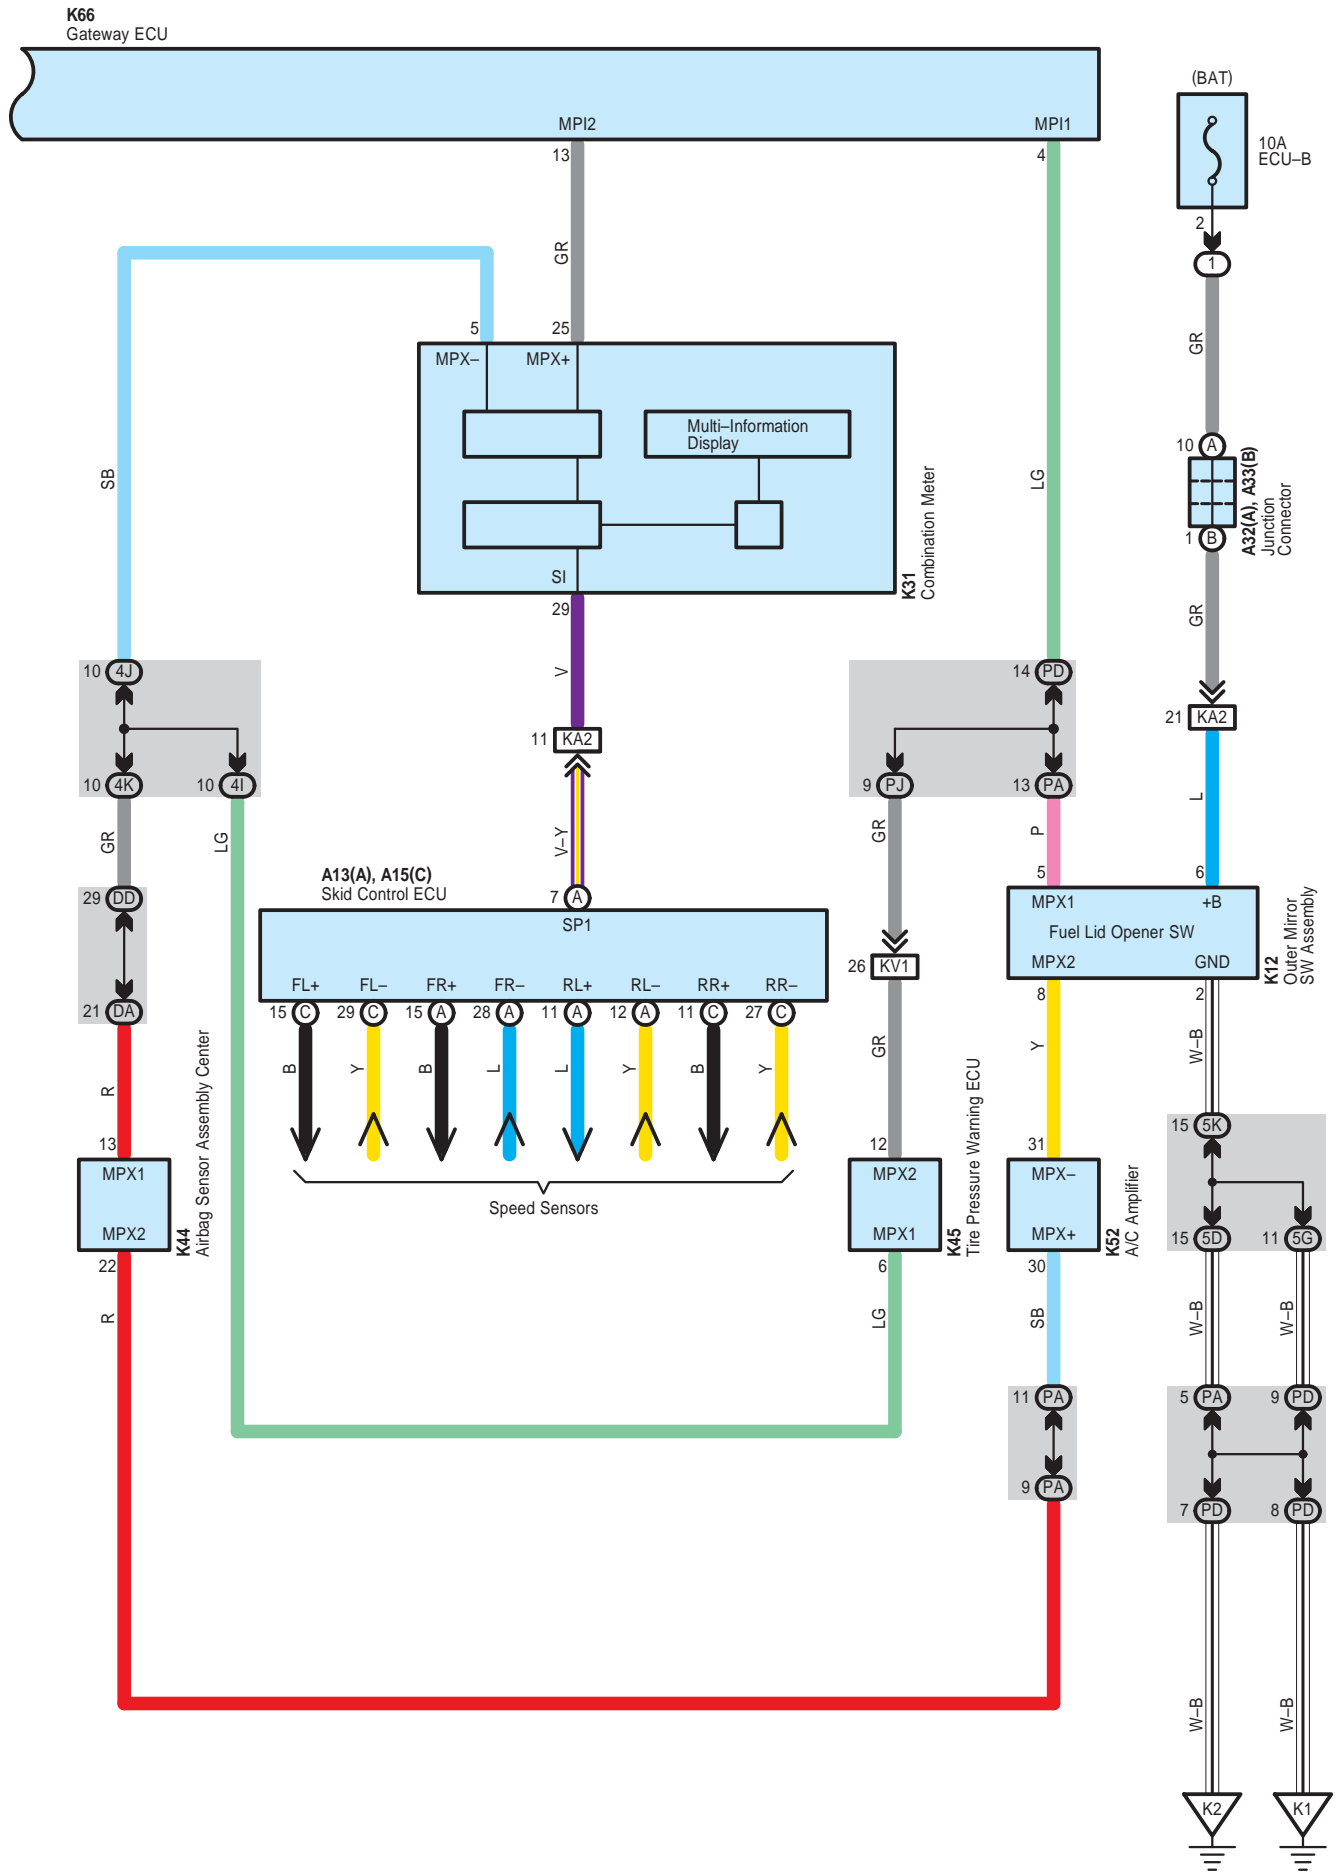

 : Parts Location

Code		See Page	Code		See Page	Code		See Page
A13	A	80	K31	85	K95	86		
A15	C	80	K44	86	K96	86		
A32	A	84	K45	86	U25	90		
A33	B	84	K52	86	V29	91		
A53		80	K66		86	V37	A	91
A63		84	K84	B	78, 86	V39		91
K12		85	K87	E	78, 86			

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4F		
4I		
4J		
4K	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5D		
5G		
5K		
5L	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DA		
DD	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PA		
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AV1	97	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)
AV3		
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

 : Ground Points

Code	See Page	Ground Points Location
A1	96	Left Side of the Dash Panel
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
U2	98	Right Side of the Rear Floor Partition Panel