



Seat Belt Warning

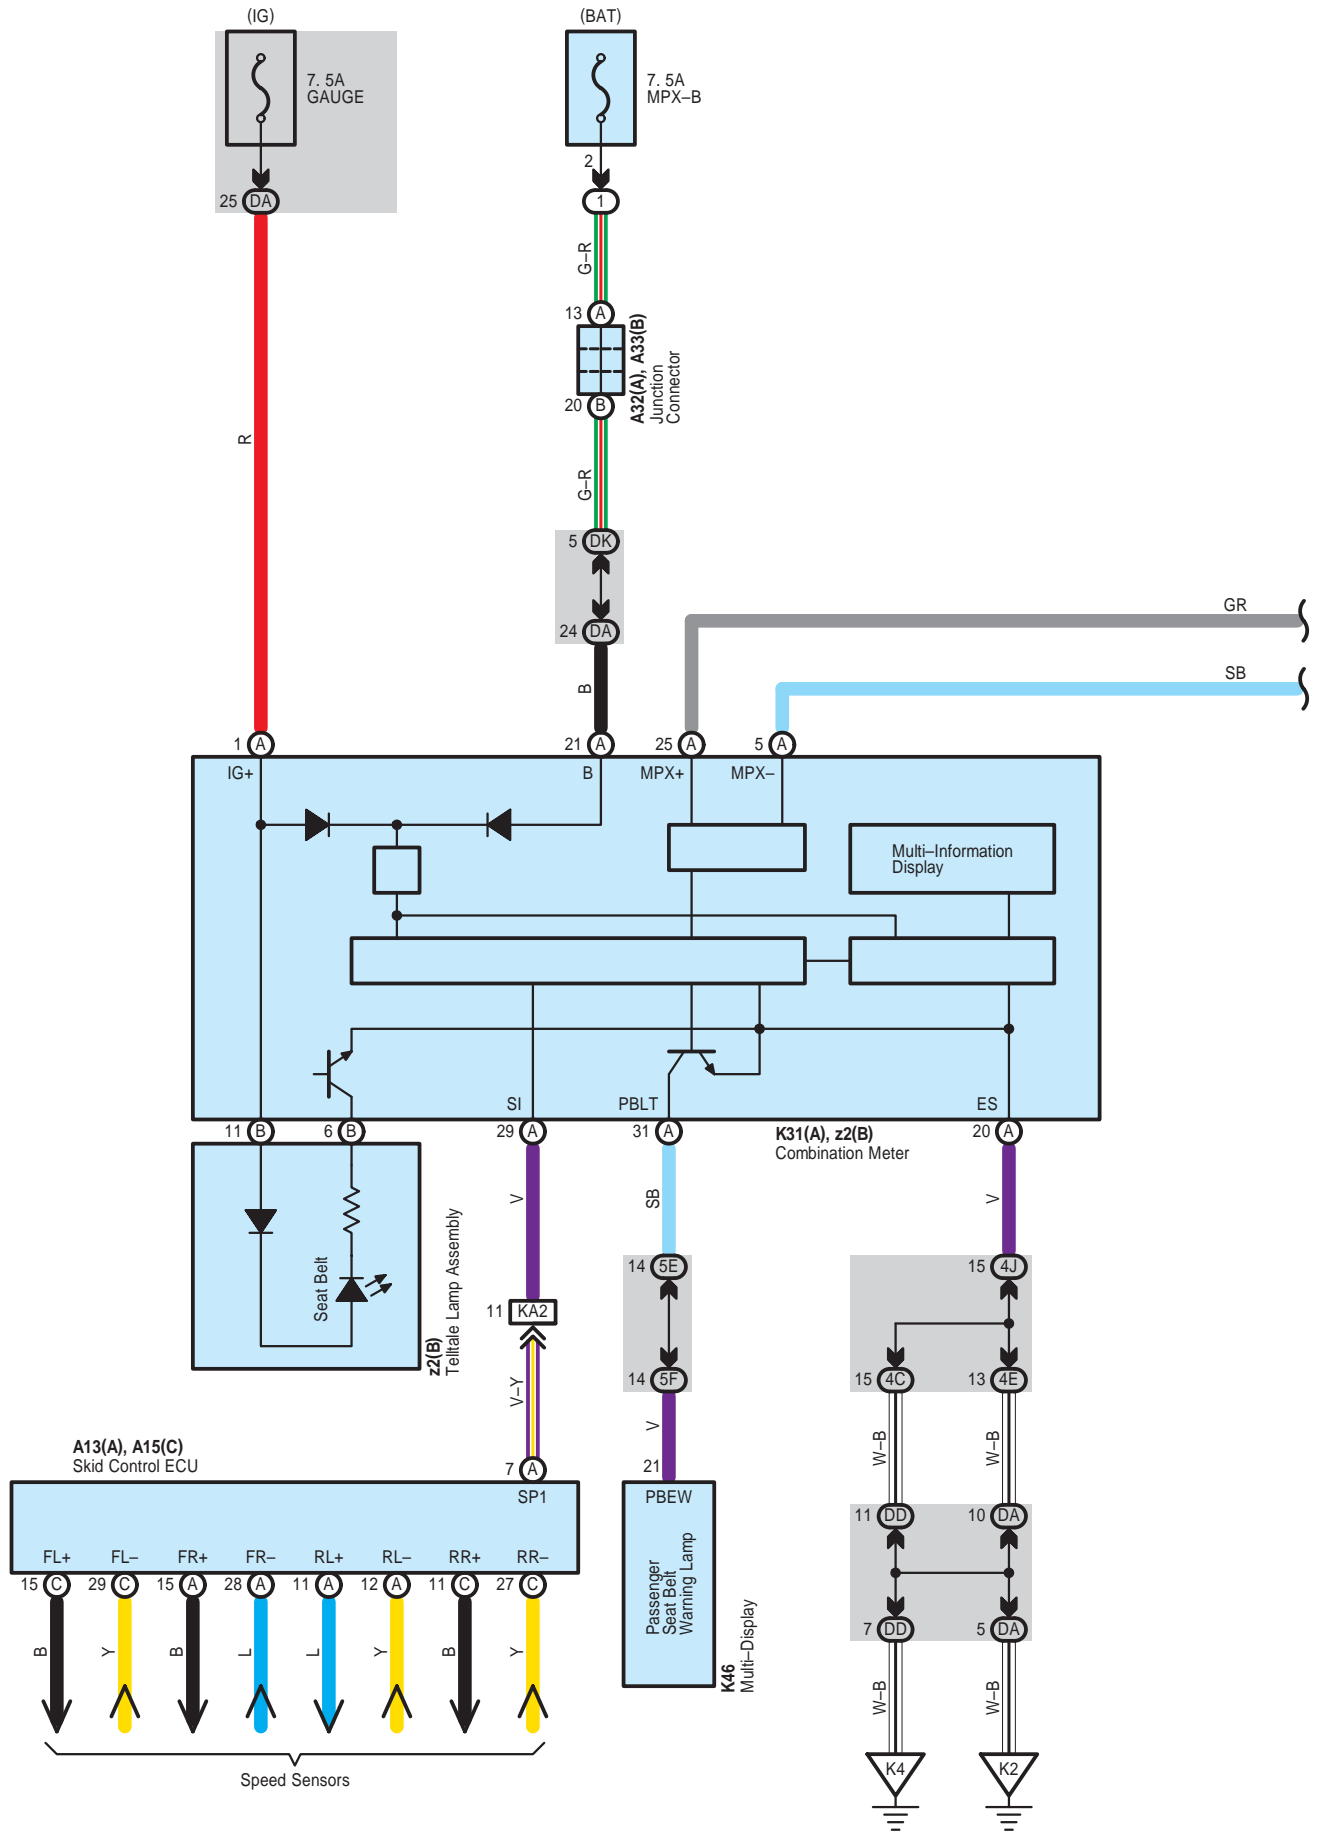

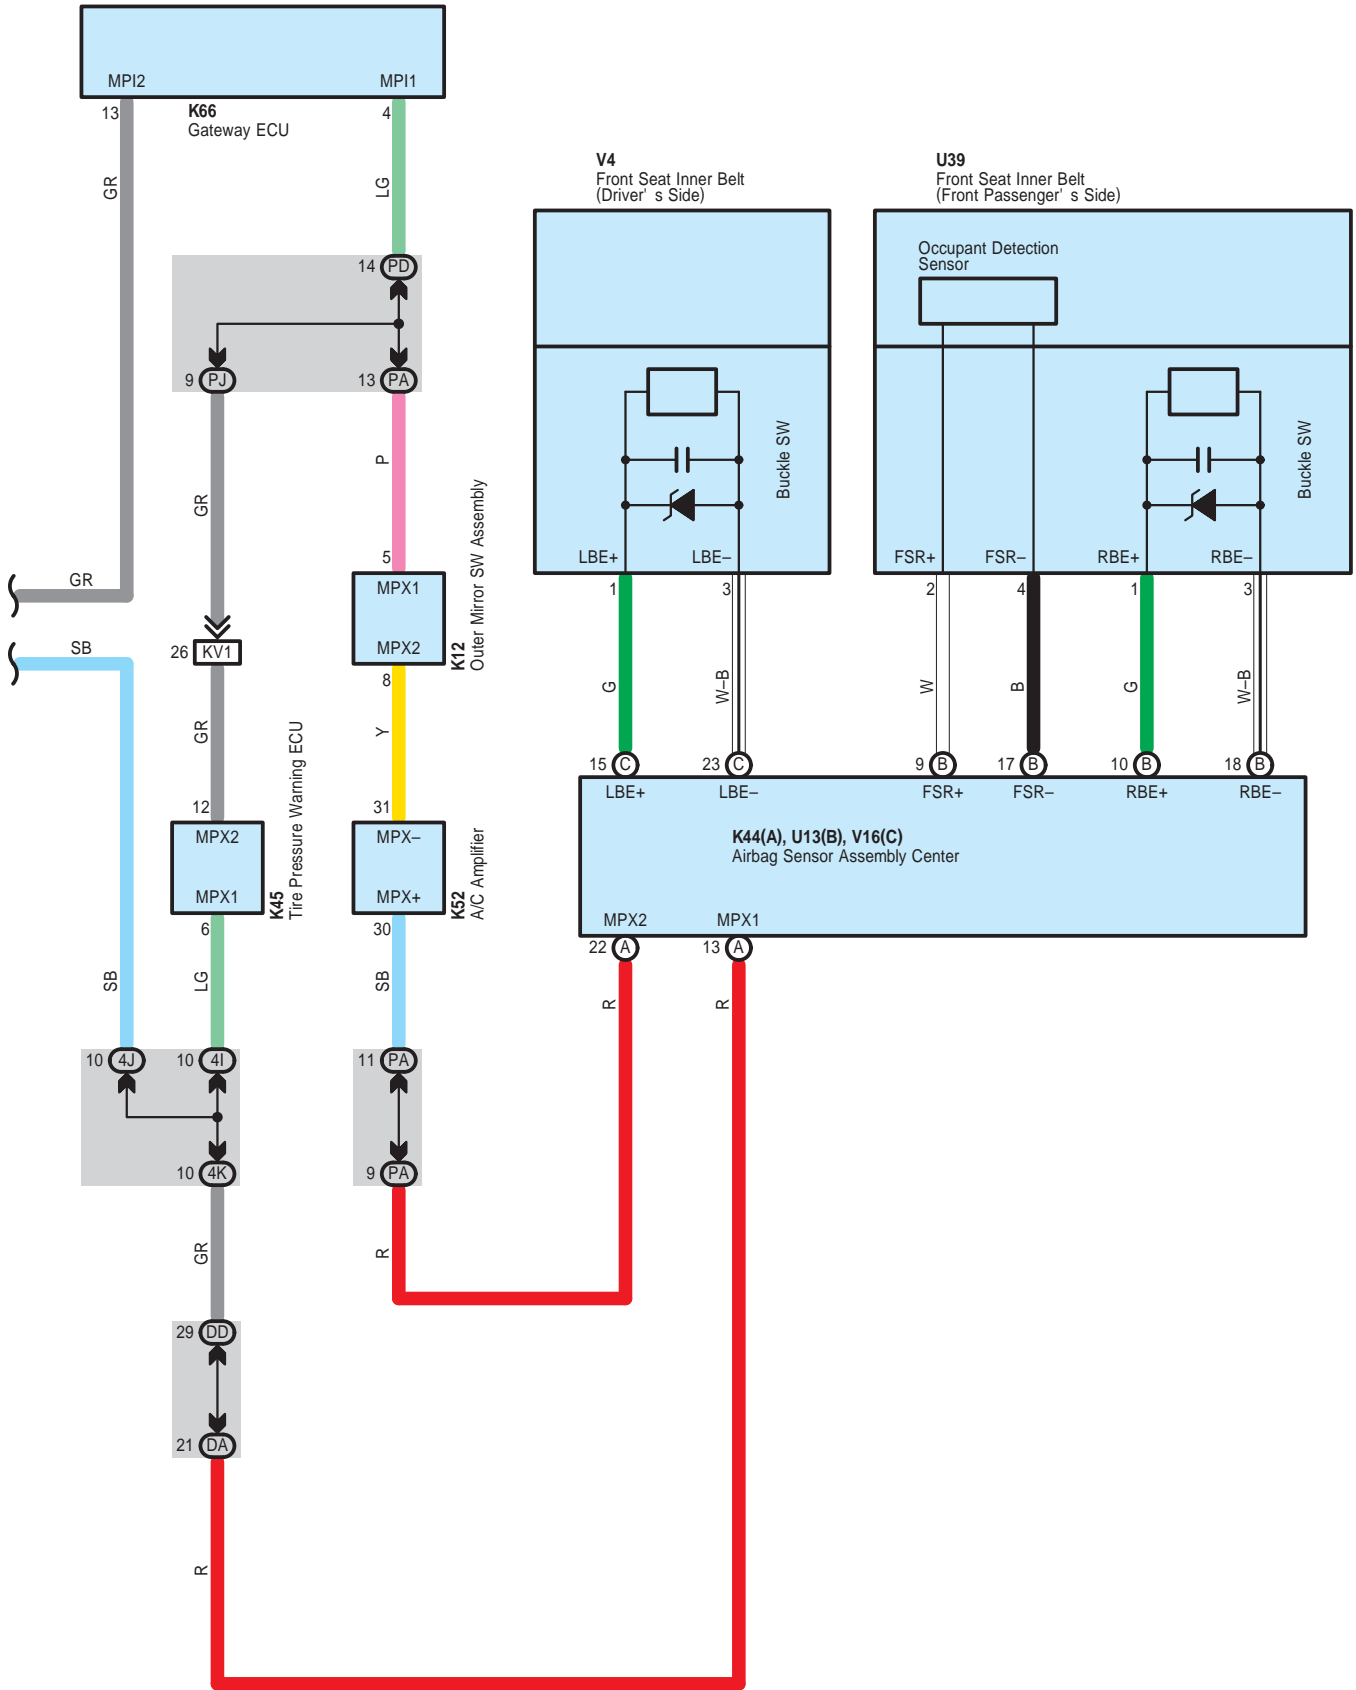

Seat Belt Warning

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A13	A	80	K44	A	86	U39	94	
A15	C	80	K45		86	V4	94	
A32	A	84	K46		86	V16	C	87
A33	B	84	K52		86	z2	B	87
K12		85	K66		86			
K31	A	85	U13	B	87			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4E		
4I		
4J		
4K		
5E	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5F		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
DK	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel

