



Power Seat for Driver's Seat without Memory

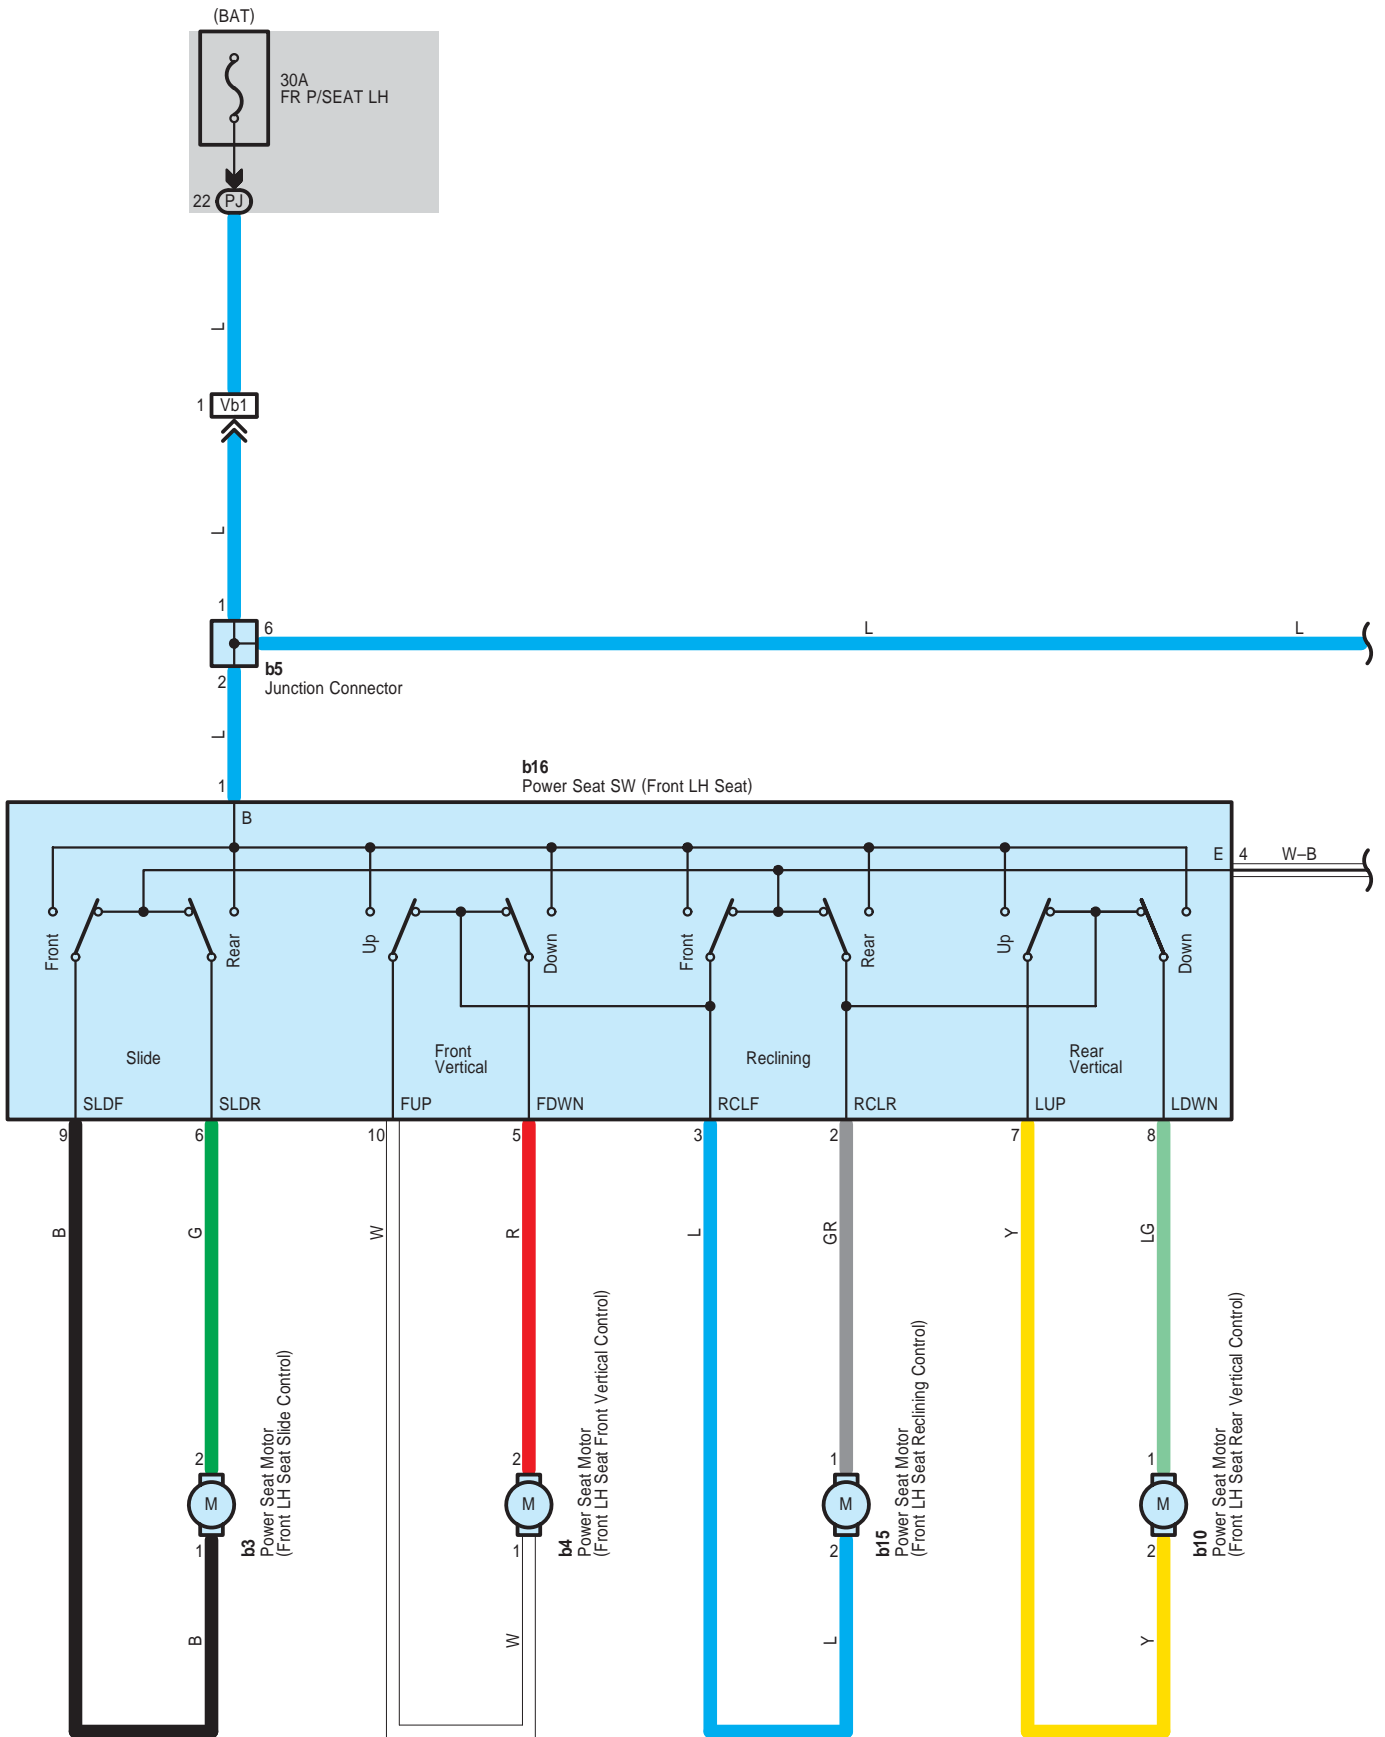

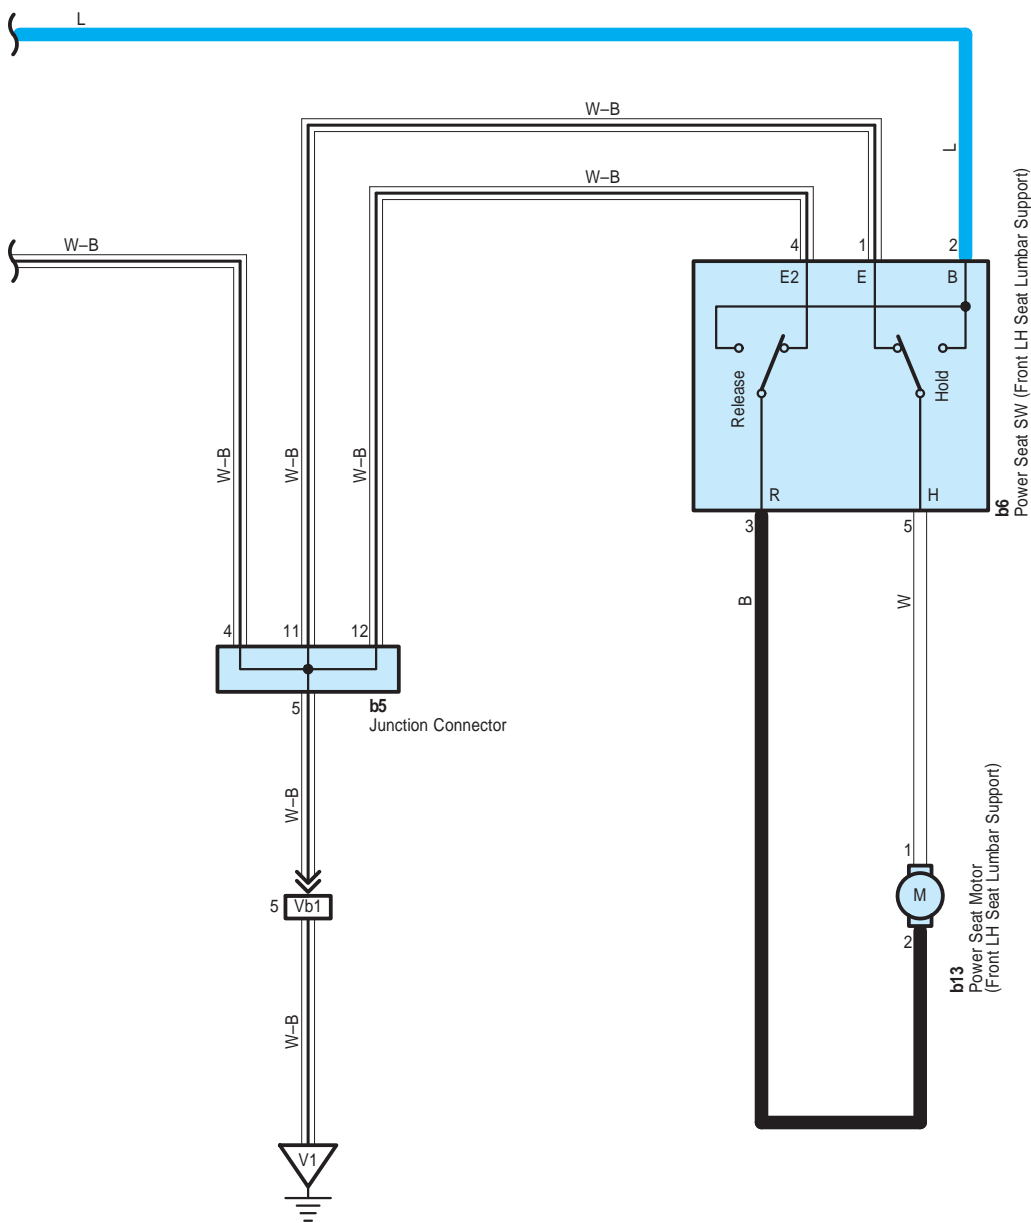

Power Seat for Driver's Seat without Memory

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
b3	94	b6	94	b15	94
b4	94	b10	94	b16	94
b5	94	b13	94		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
Vb1	99	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)

 : **Ground Points**

Code	See Page	Ground Points Location
V1	98	Under the Driver's Seat

