



Power Seat for Front Passenger's Seat with Memory

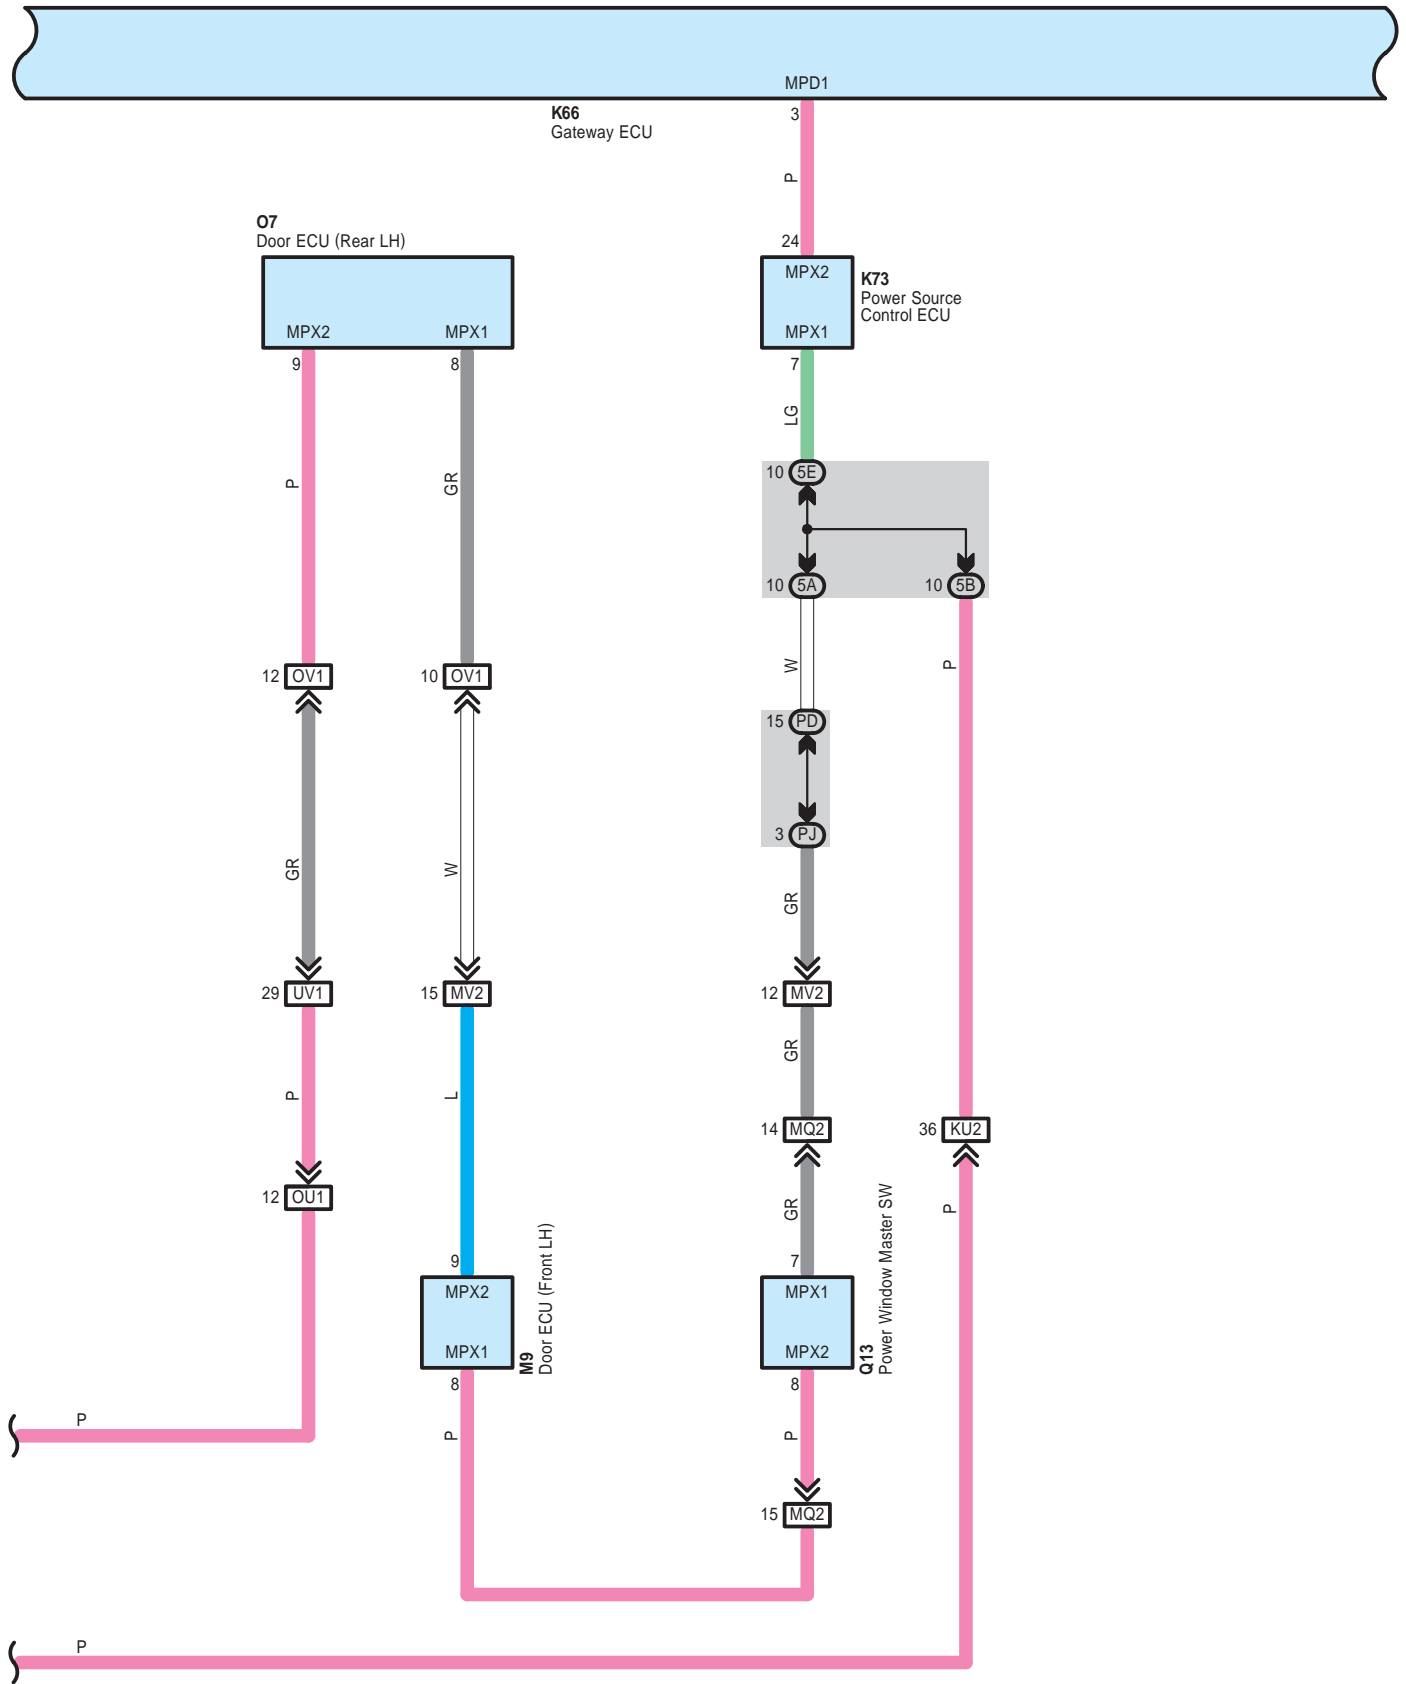

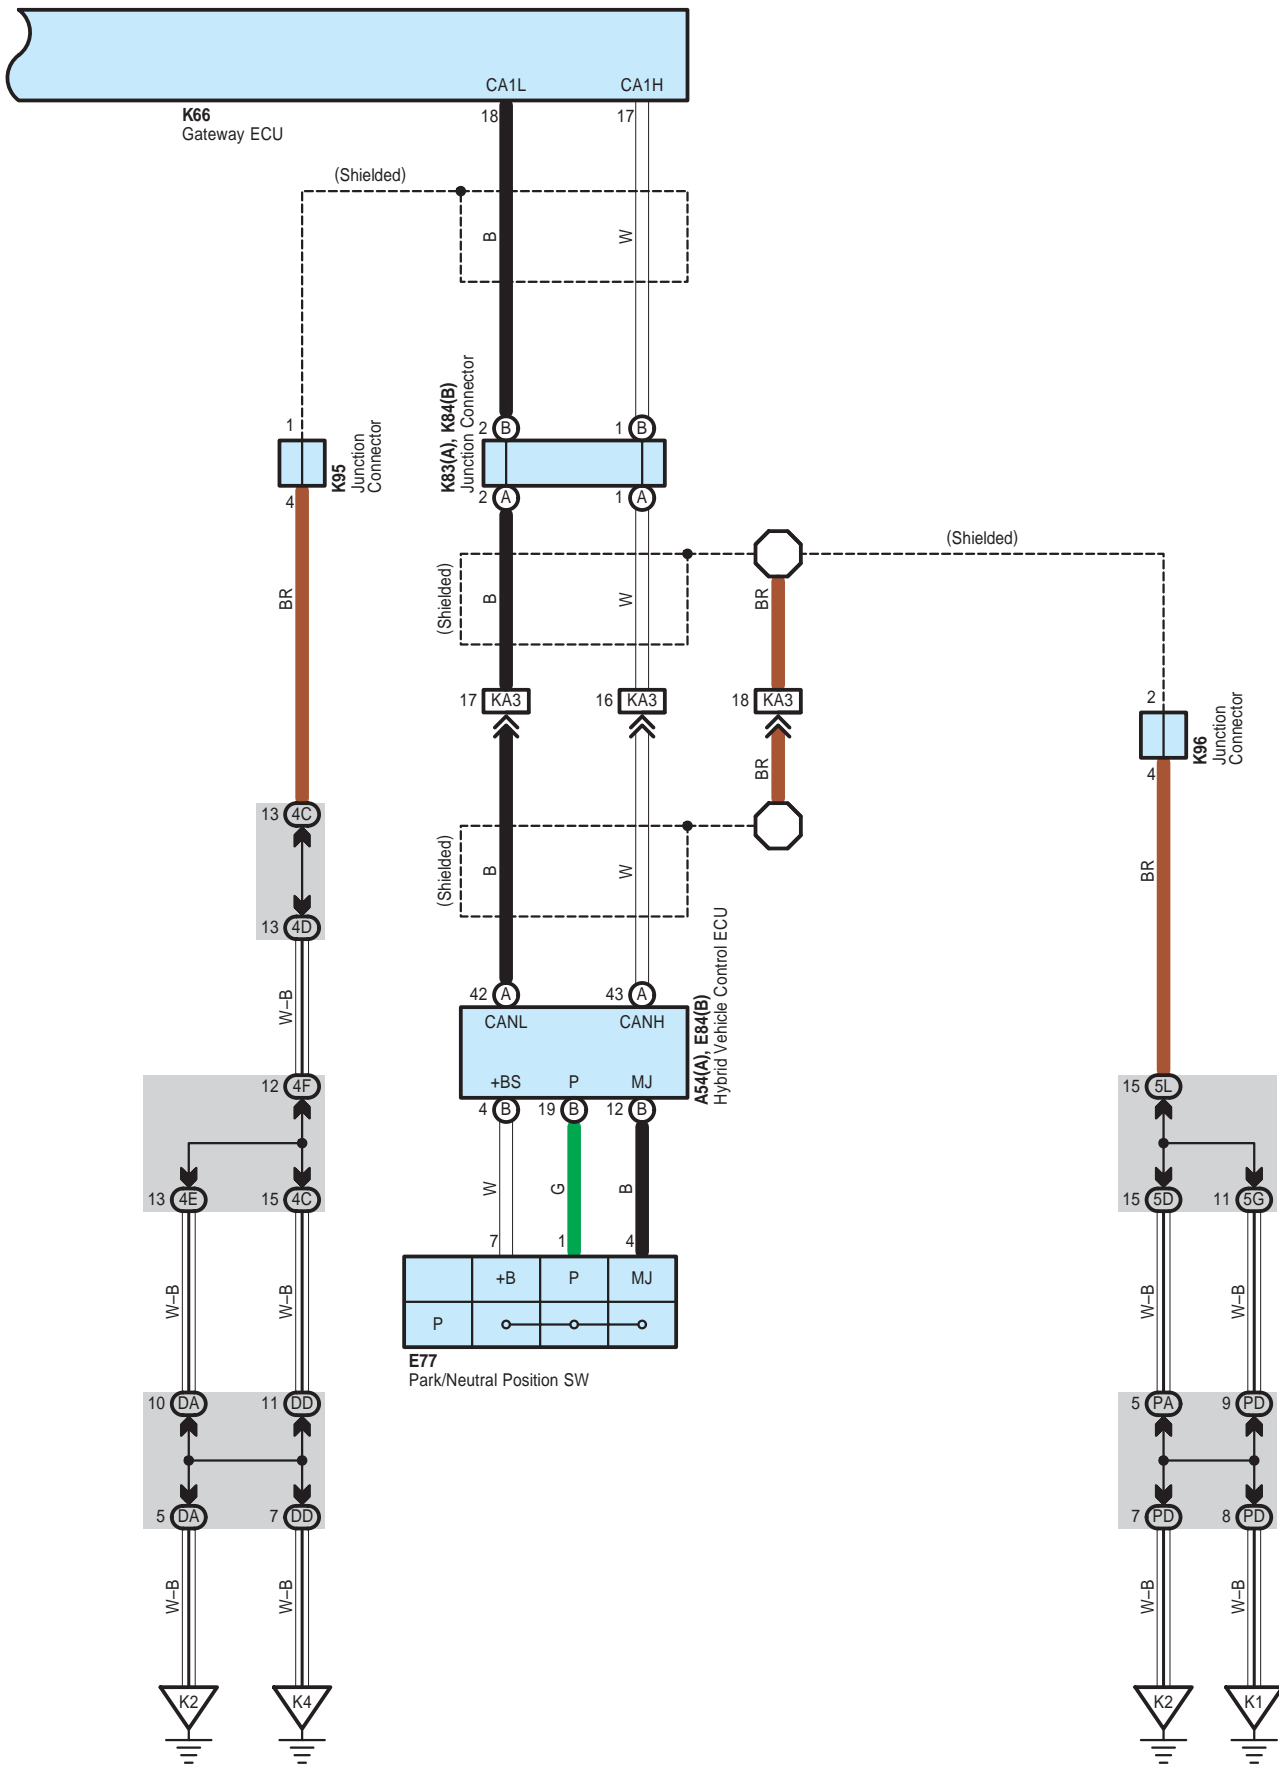

LEXUS GS 450h (EM02D0U)

Power Seat for Front Passenger's Seat with Memory

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A32	A	84	K95	86	a1	94		
A33	B	84	K96	86	a4	94		
A54	A	80	M4	88	a5	94		
E77		81	M9	88	a6	A	94	
E84	B	81	O3	88	a7	B	94	
K66		86	O7	88	a8		94	
K73		86	Q2	89	a10		94	
K83	A	78, 86	Q13	89	a13		94	
K84	B	78, 86	U28	90	a15		94	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4F		
5A	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5B		
5D		
5E		
5G		
5L	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DA		
DD	56	Floor Wire and Cowl Side J/B RH (Behind the Glove Box)
DJ	56	Floor Wire and Cowl Side J/B RH (Behind the Glove Box)
DK	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA3	97	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
MQ1	98	Front Door RH Wire and Front Door RH No.2 Wire (Front Door Inner Panel RH)
MQ2	98	Front Door LH Wire and Front Door LH No.2 Wire (Front Door Inner Panel LH)
MU2	97	Front Door RH Wire and Floor No.1 Wire (Right Kick Panel)
MV2	97	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
OU1	98	Rear Door No.1 Wire and Floor No.1 Wire (Right Center Pillar)
OV1	98	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)
Ua1	99	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)



: Ground Points

Code	See Page	Ground Points Location
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
U1	98	Under the Front Passenger's Seat