



Power Seat for Front Passenger's Seat without Memory

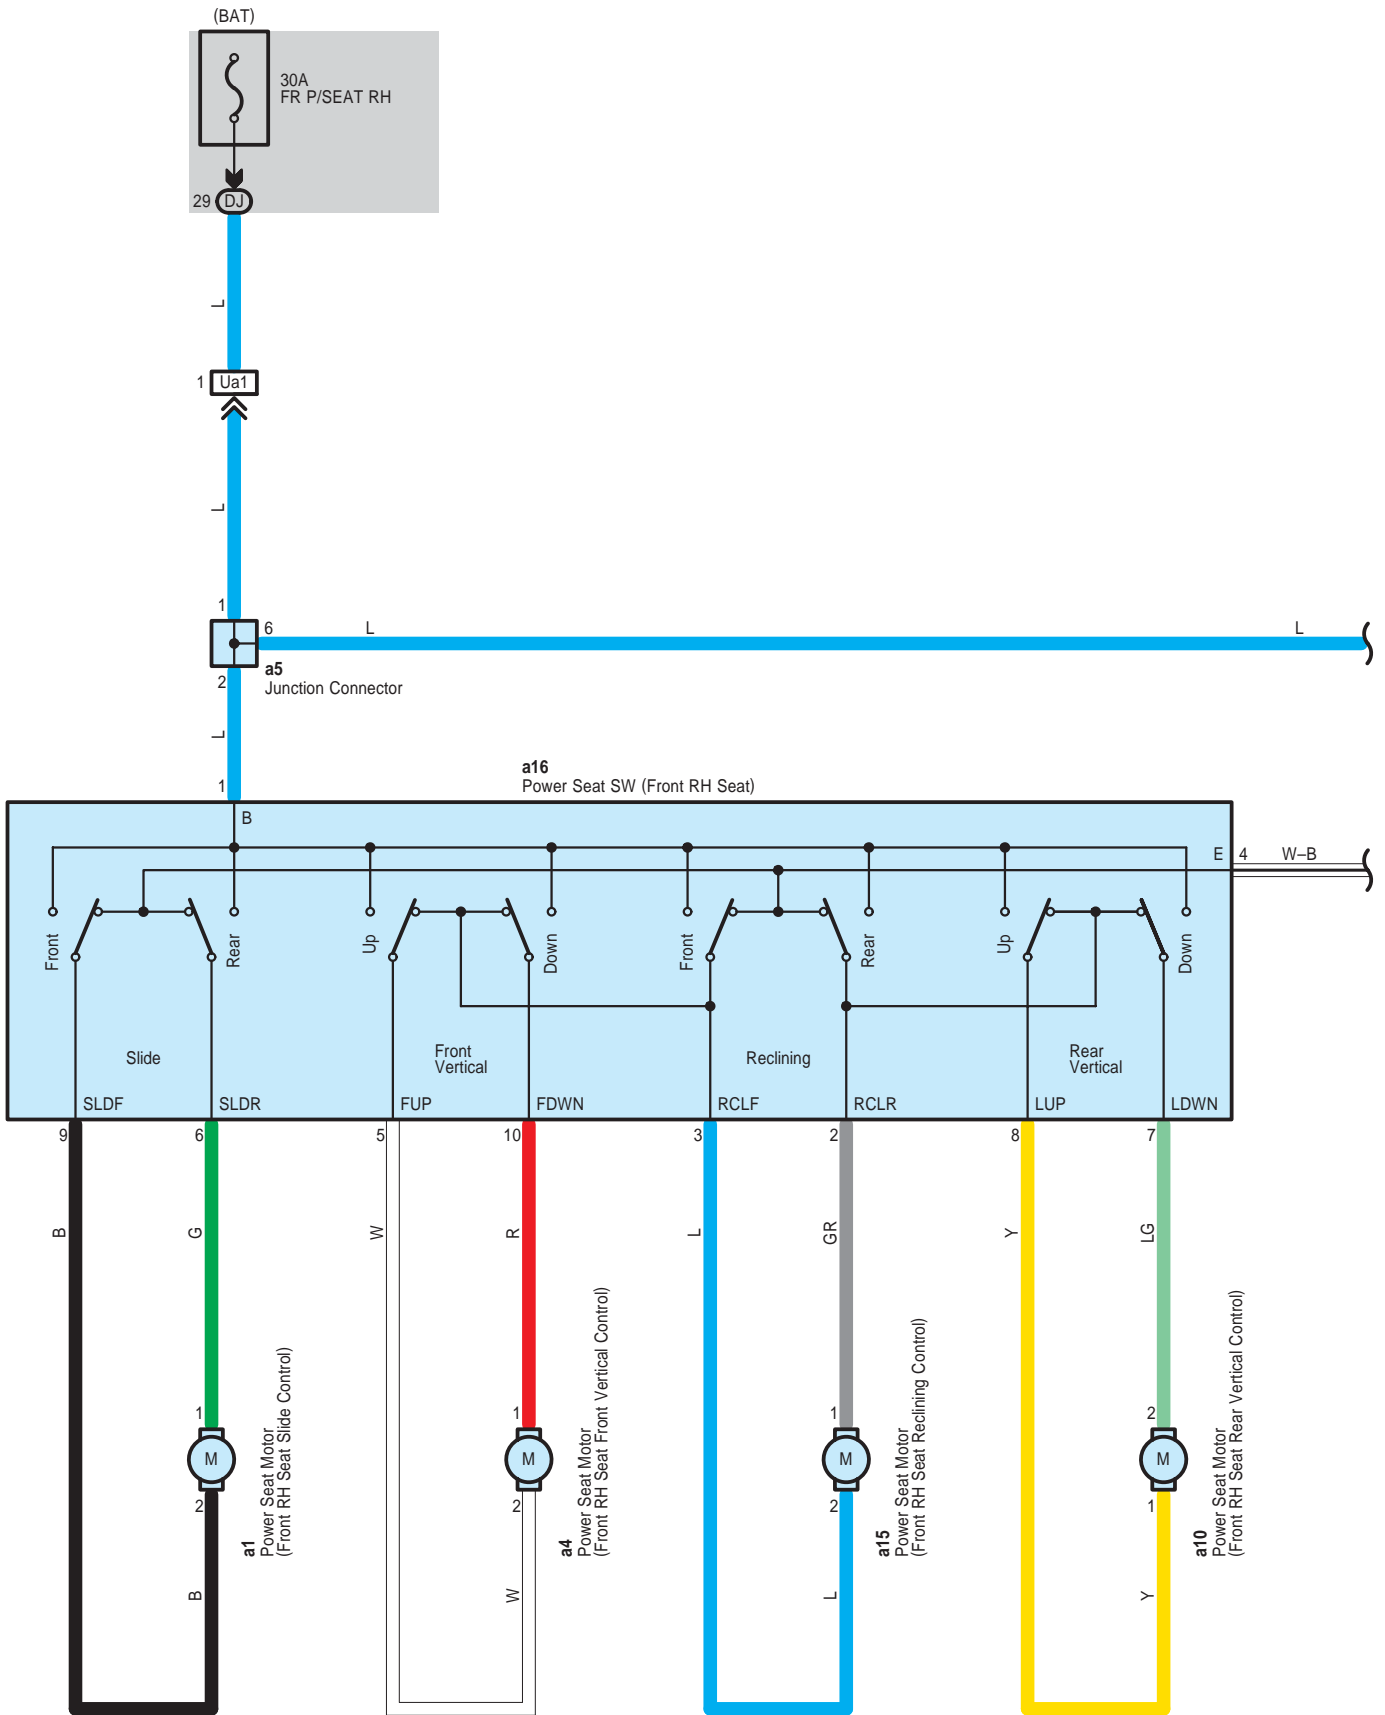

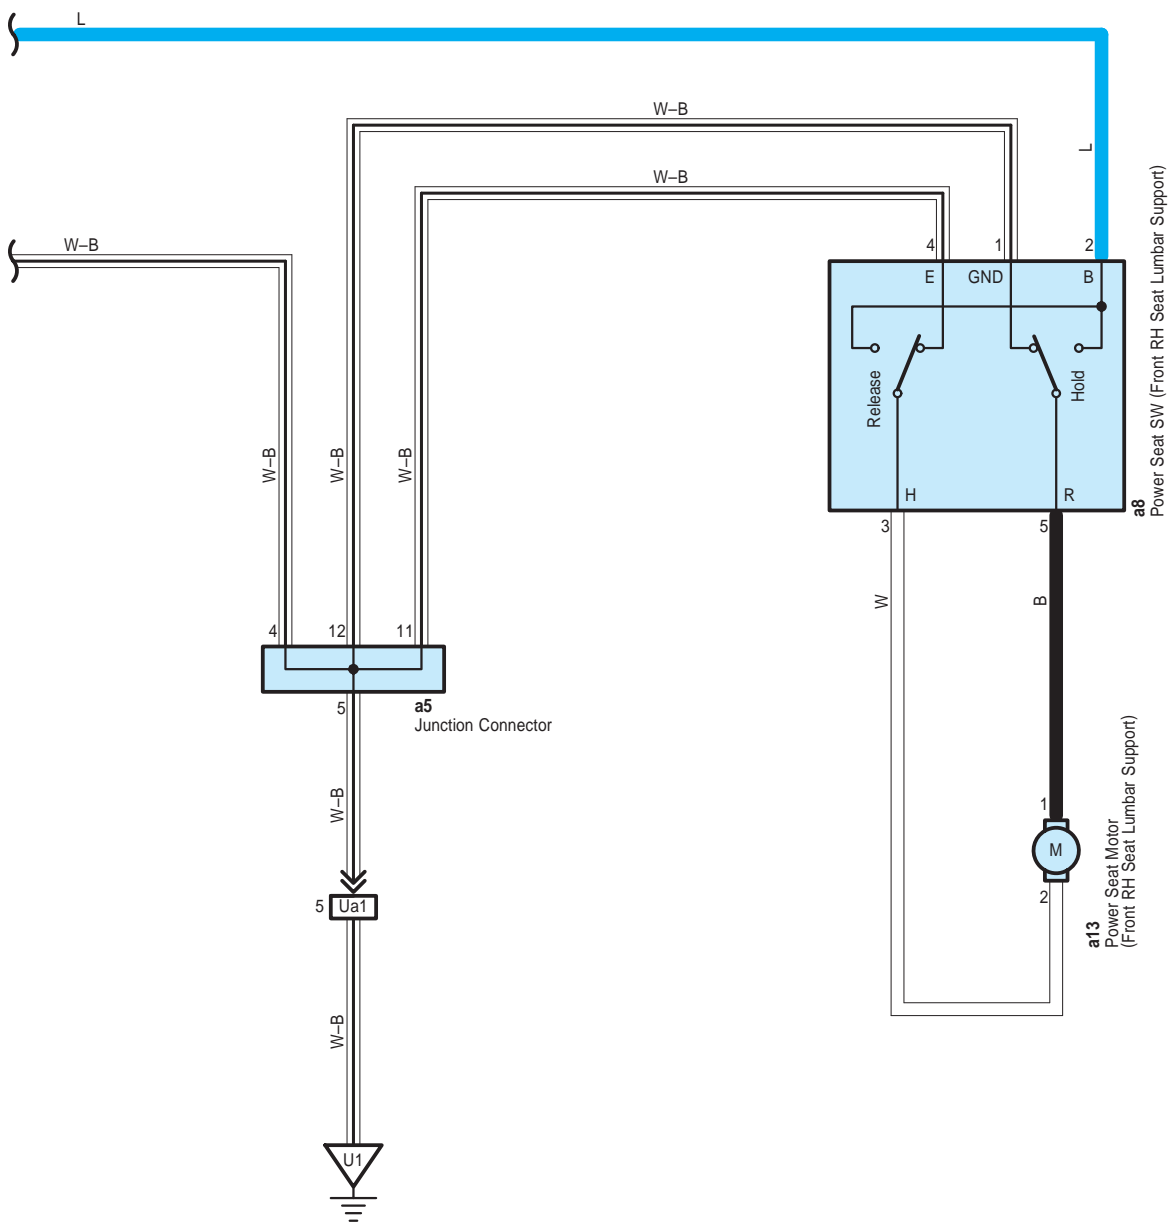

Power Seat for Front Passenger's Seat without Memory

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
a1	94	a8	94	a15	94
a4	94	a10	94	a16	94
a5	94	a13	94		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DJ	56	Floor Wire and Cowl Side J/B RH (Behind the Glove Box)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
Ua1	99	Floor No.1 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

 : **Ground Points**

Code	See Page	Ground Points Location
U1	98	Under the Front Passenger's Seat

