


Automatic Glare-Resistant EC Mirror and Garage Door Opener

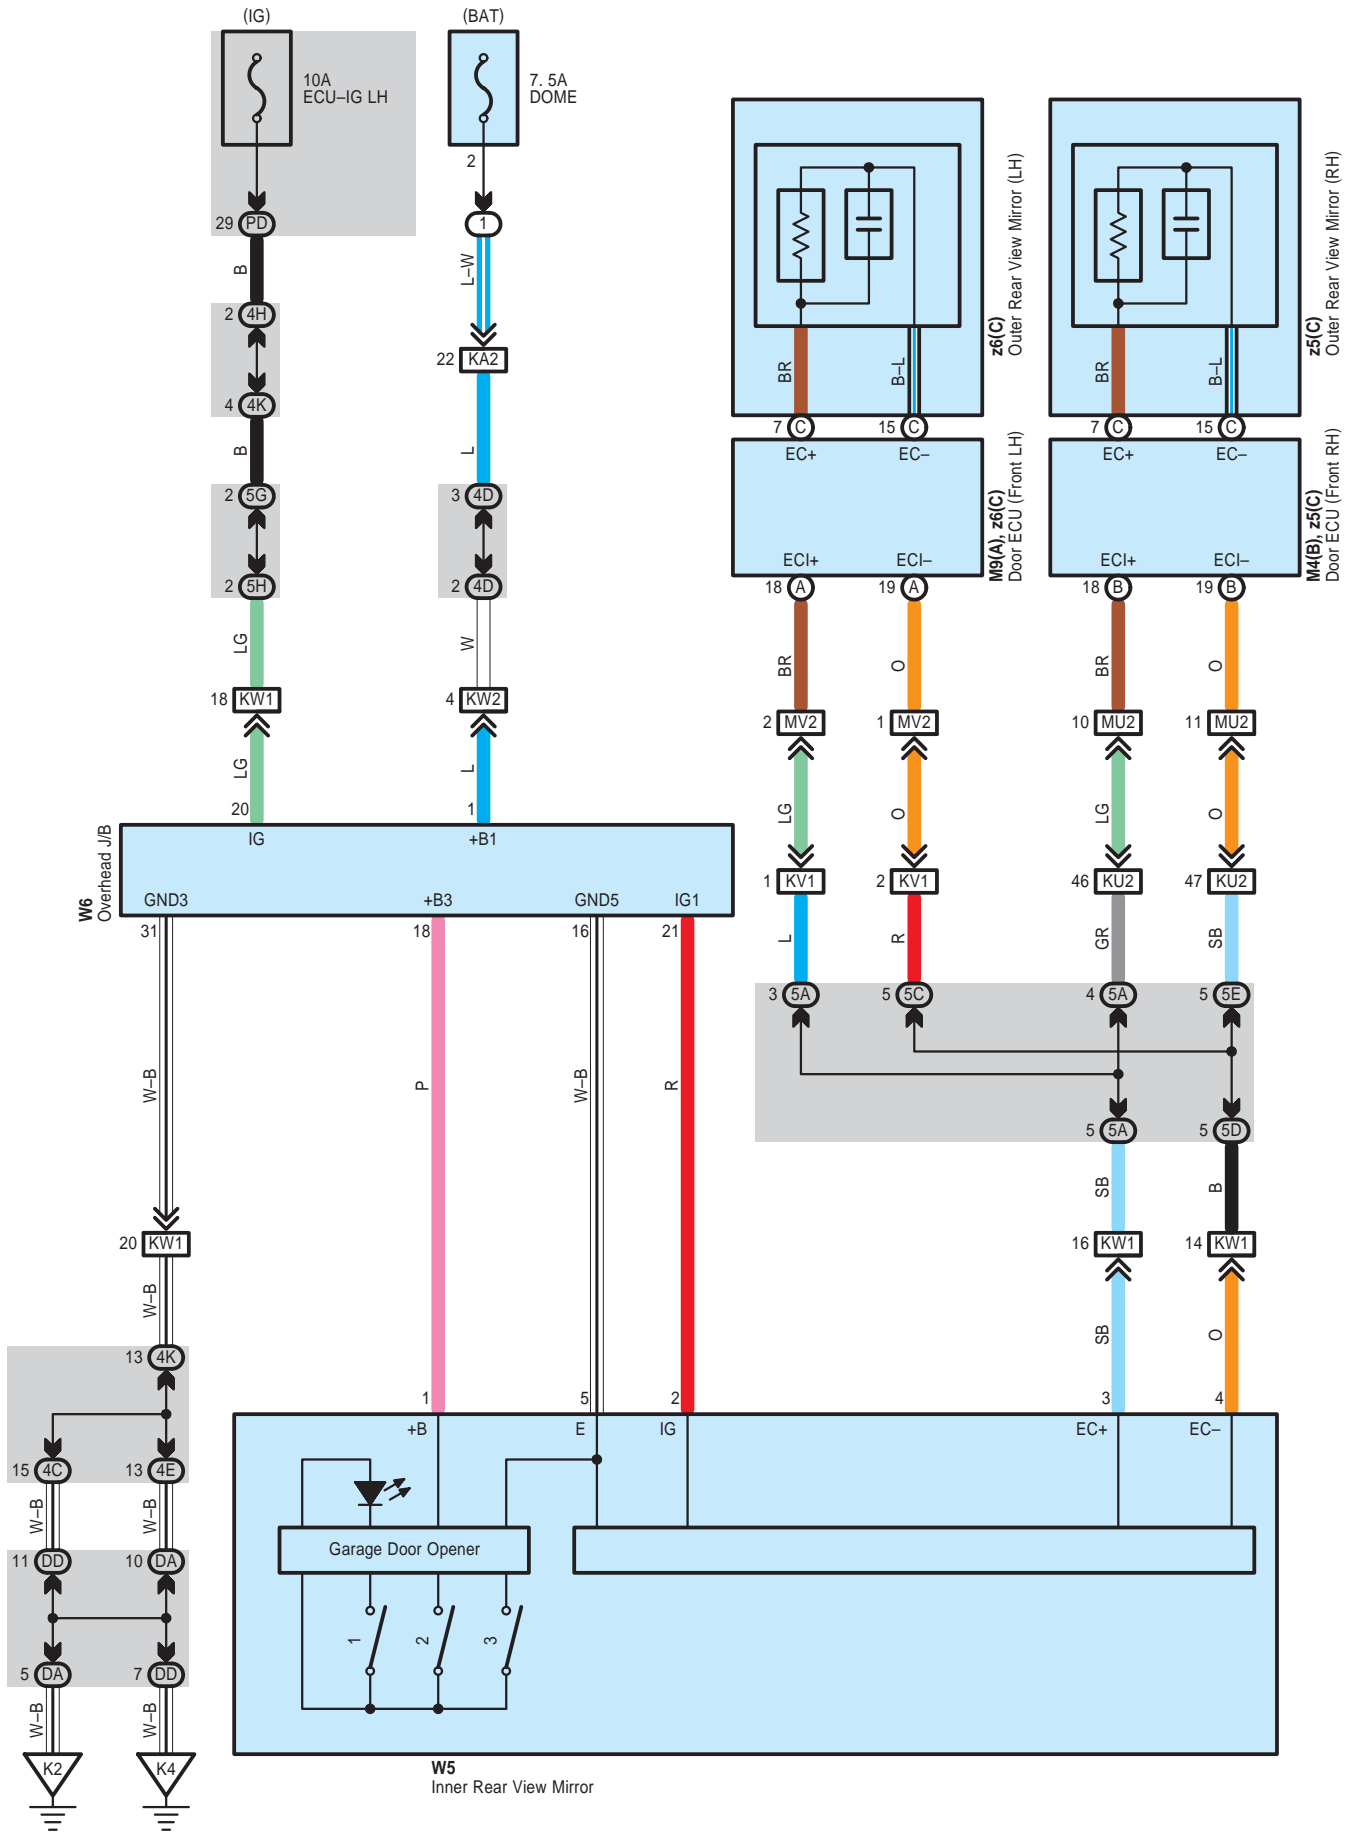

 : **Parts Location**

Code		See Page	Code		See Page	Code		See Page
M4	B	88	W5	92	z5	C	93	
M9	A	88	W6	92	z6	C	93	

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4H		
4K		
5A	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5C		
5D		
5E		
5G		
5H	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DA		
DD	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
KW1	97	Instrument Panel Wire and Roof Wire (Left Side of the Instrument Panel)
KW2		
MU2	97	Front Door RH Wire and Floor No.1 Wire (Right Kick Panel)
MV2	97	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel