


Power Outlet

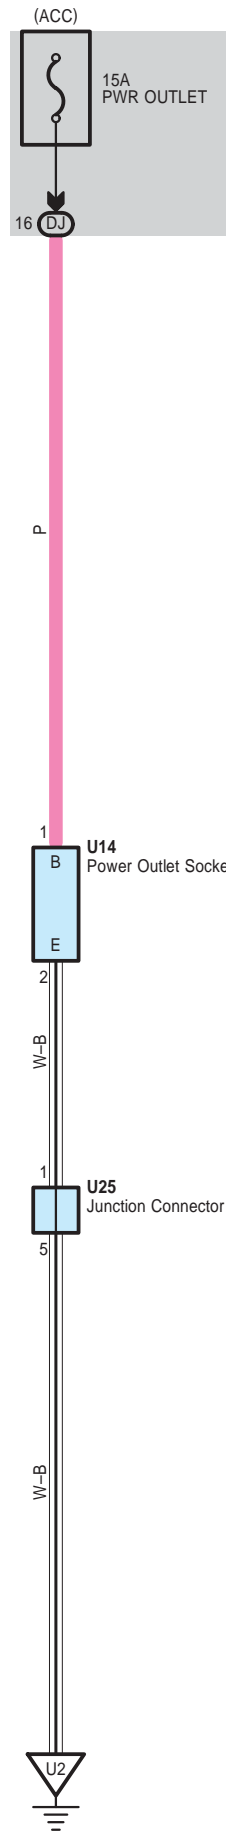

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
U14	87	U25	90		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DJ	56	Floor Wire and Cowl Side J/B RH (Behind the Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
U2	98	Right Side of the Rear Floor Partition Panel