





LEXUS GS 450h (EM02D0U)

# Horn

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
A11	80	B9	82	V3	D 87
A29	84	K20	85	V26	A 91
A30	A 84	K22	85	V27	B 91
A32	84	K66	86		
B6	82	K68	B 86		

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1X	29	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
1Y		
1Z	29	Engine Room No.2 Wire and Engine Room J/B No.2 (Engine Compartment left)
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
LC	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel )
PL	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

## : Ground Points

Code	See Page	Ground Points Location
A2	96	Front Left Fender Apron

