



# Remote Control Mirror

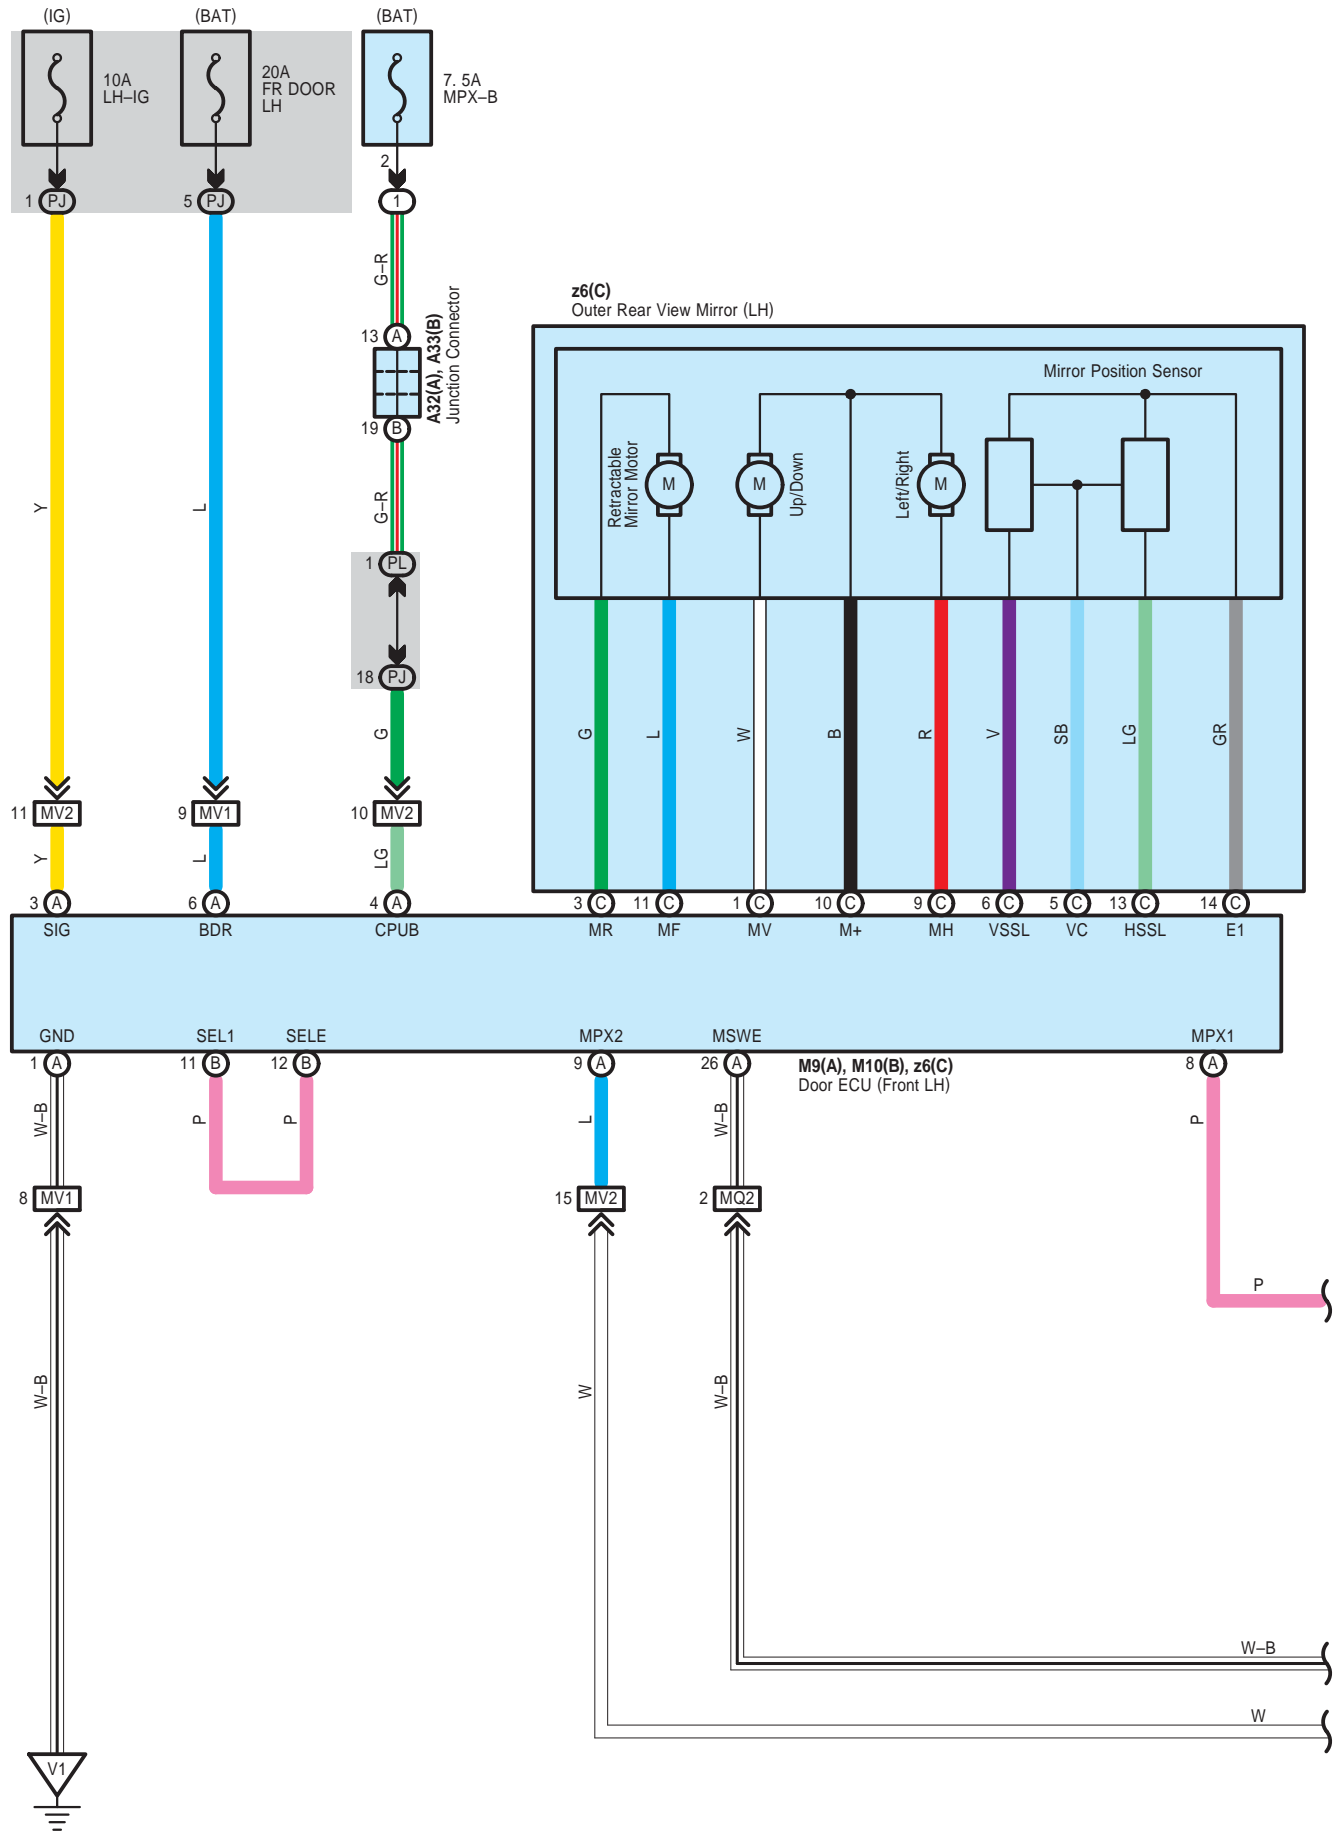

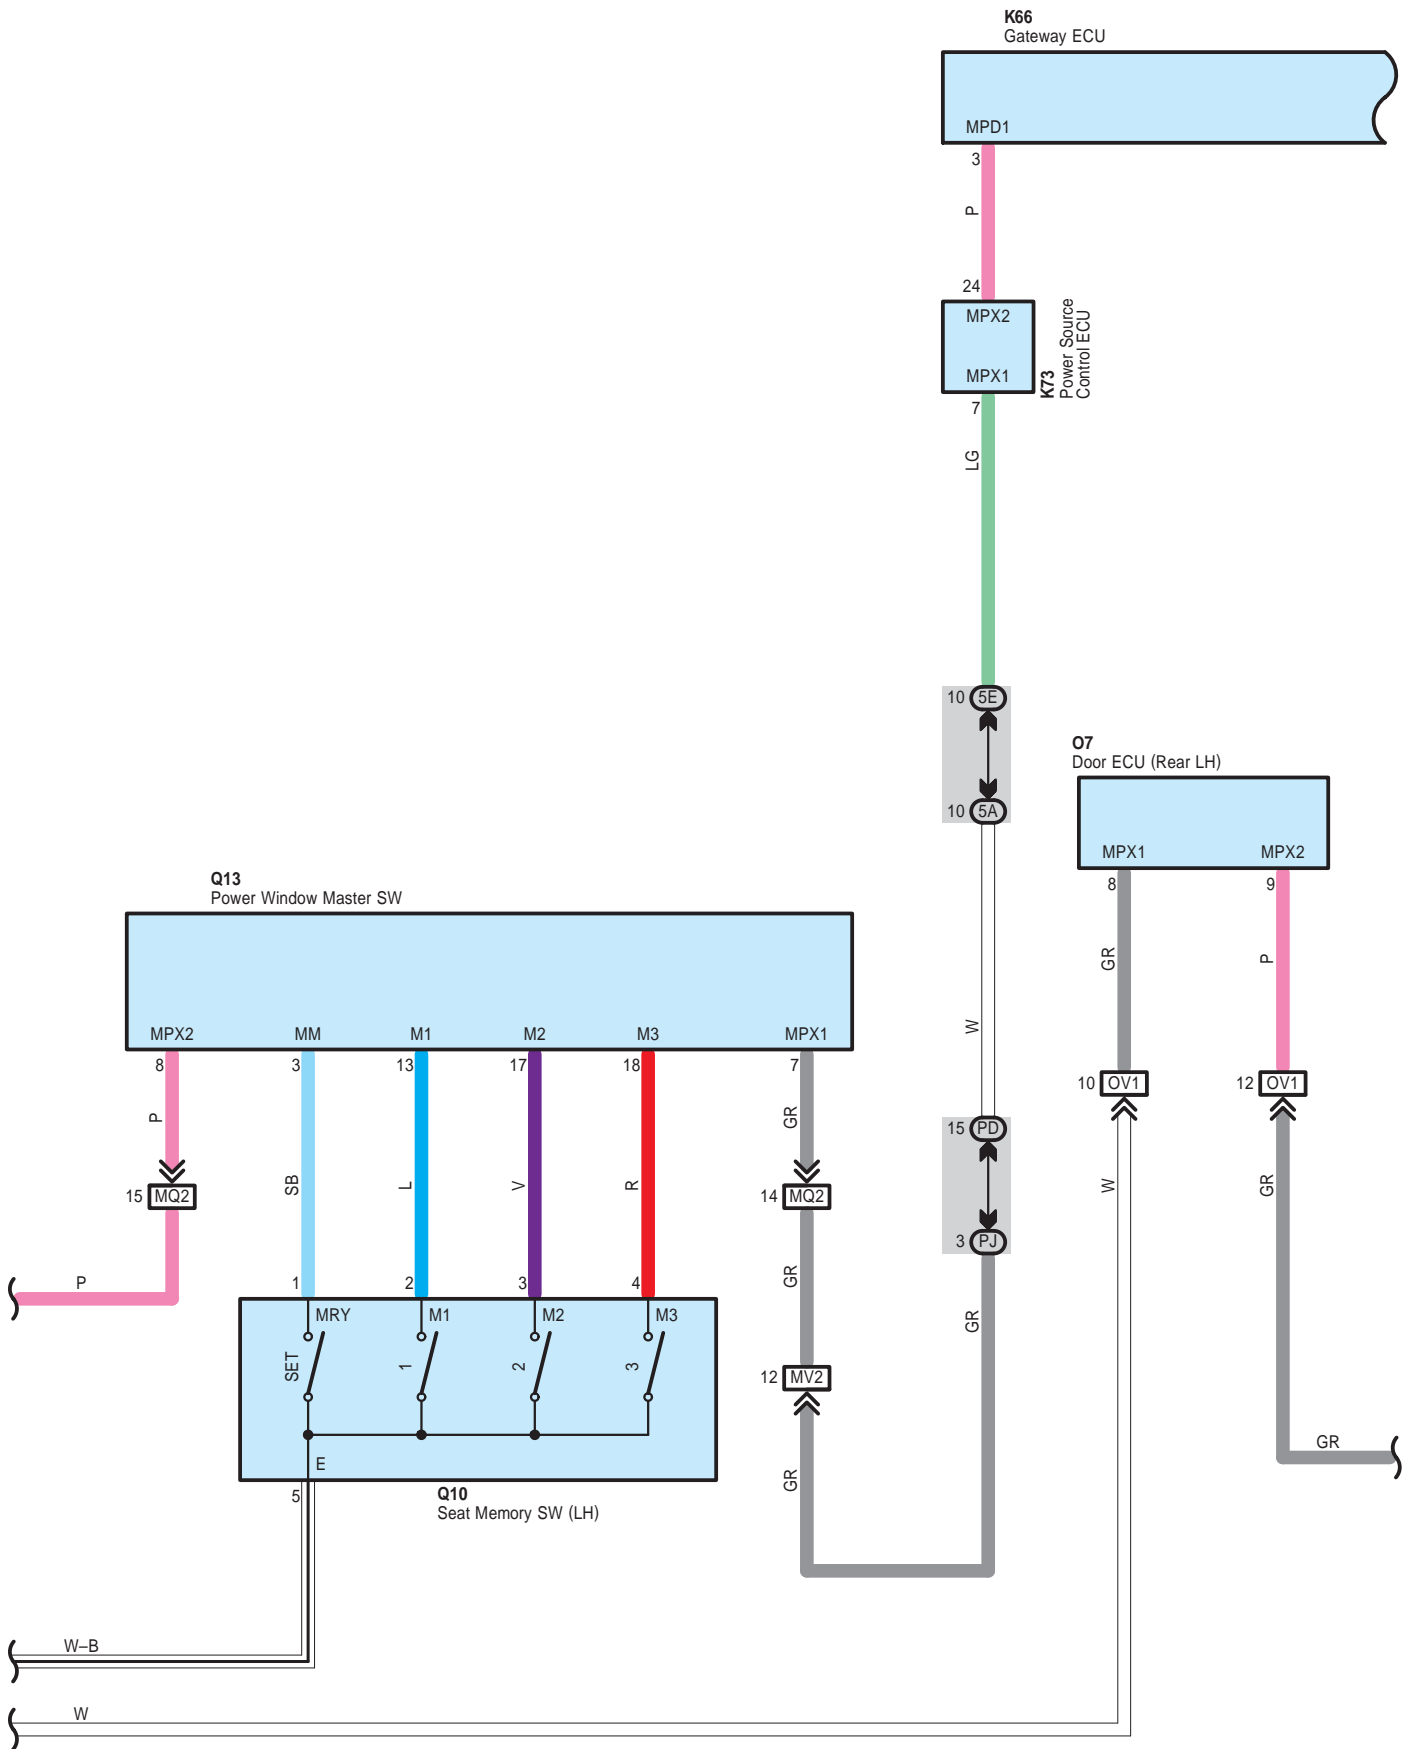


# Remote Control Mirror




K66  
Gateway ECU




z5(C)  
Outer Rear View Mirror (RH)

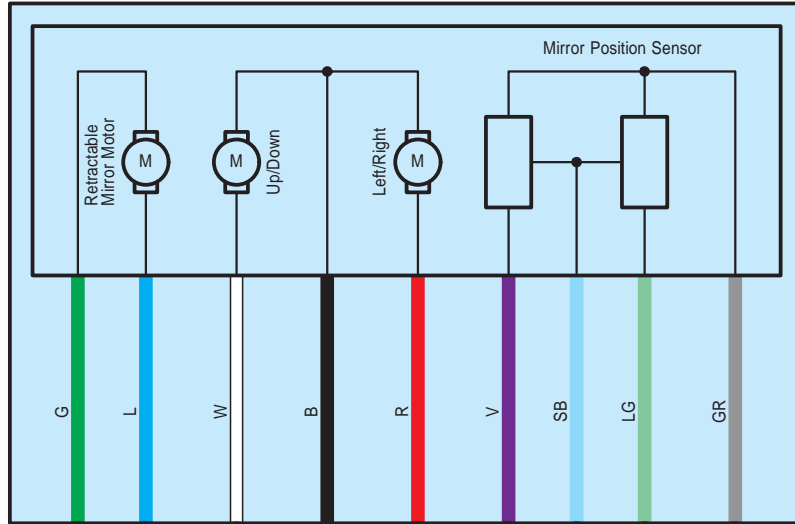


O3  
Door ECU (Rear RH)

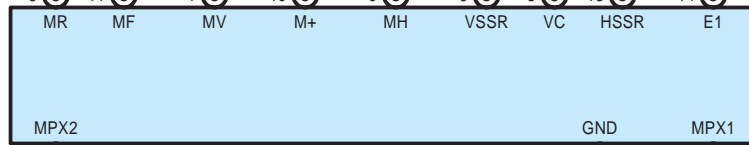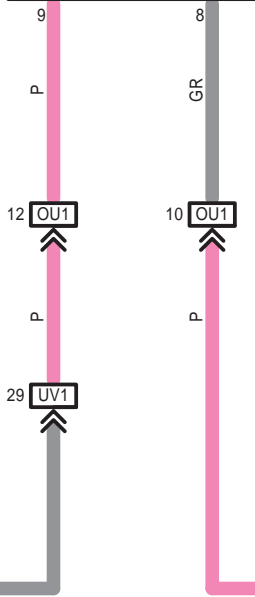 


M4(B), z5(C)  
Door ECU (Front RH)

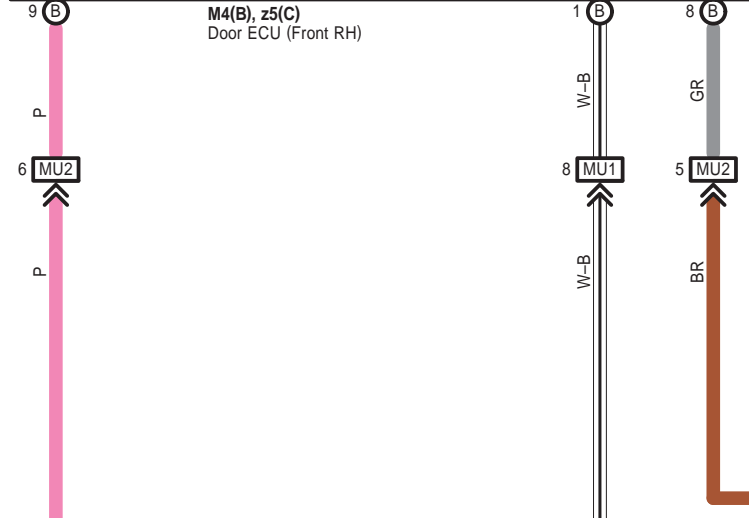

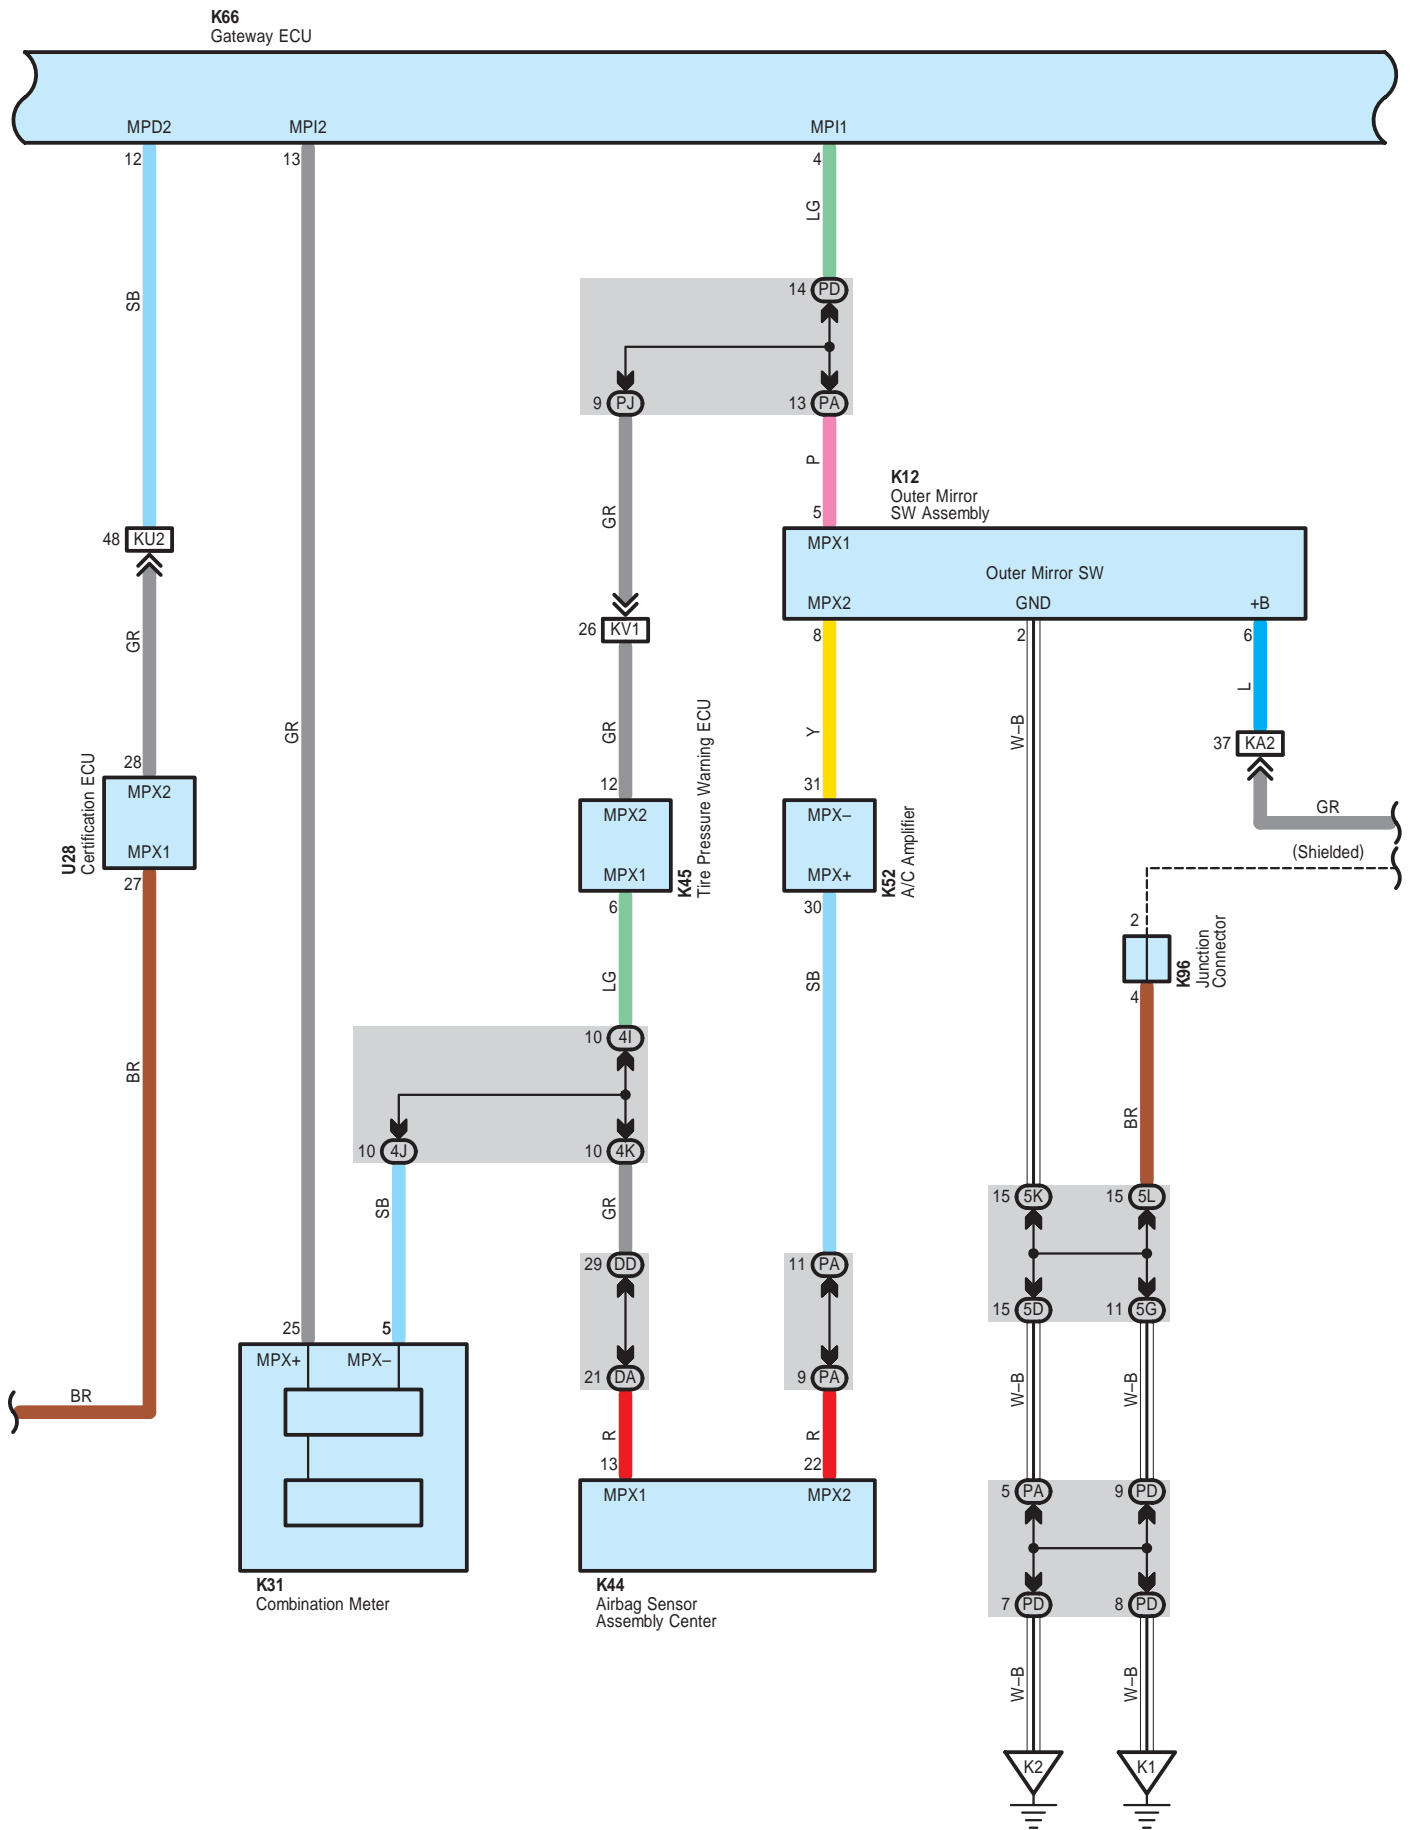

# Remote Control Mirror

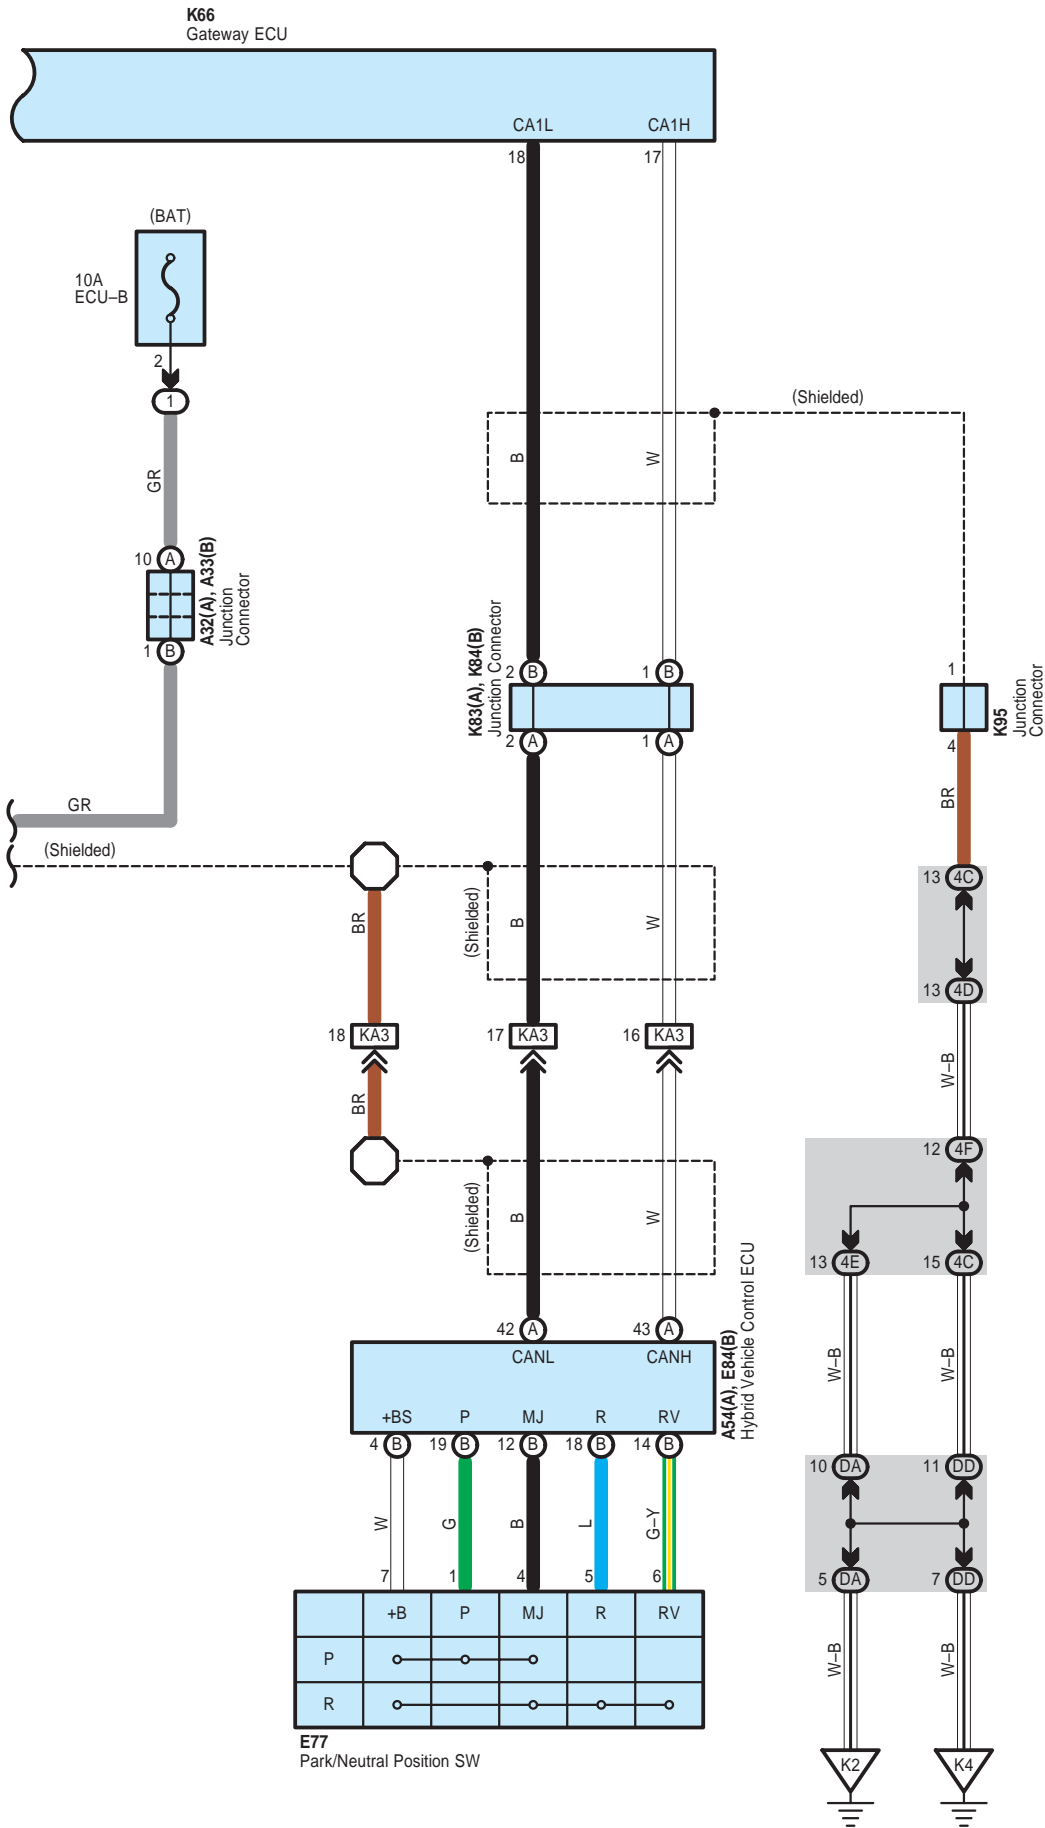

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A32	A	84	K52	86	M10	B	88	
A33	B	84	K66	86	O3		88	
A54	A	80	K73	86	O7		88	
E77		81	K83	A	78, 86	Q10	89	
E84	B	81	K84	B	78, 86	Q13	89	
K12		85	K95		86	U28	90	
K31		85	K96		86	z5	C	93
K44		86	M4	B	88	z6	C	93
K45		86	M9	A	88			

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4F		
4I		
4J		
4K		
5A	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5D		
5E		
5G		
5K		
5L		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PL	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KA3	97	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
MQ2	98	Front Door LH Wire and Front Door LH No.2 Wire (Front Door Inner Panel LH)
MU1	97	Front Door RH Wire and Floor No.1 Wire (Right Kick Panel)
MU2		
MV1	97	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
MV2		
OU1	98	Rear Door No.1 Wire and Floor No.1 Wire (Right Center Pillar)
OV1	98	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

## Remote Control Mirror

---



: **Ground Points**

Code	See Page	Ground Points Location
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
U1	98	Under the Front Passenger's Seat
V1	98	Under the Driver's Seat

