




# Combination Meter

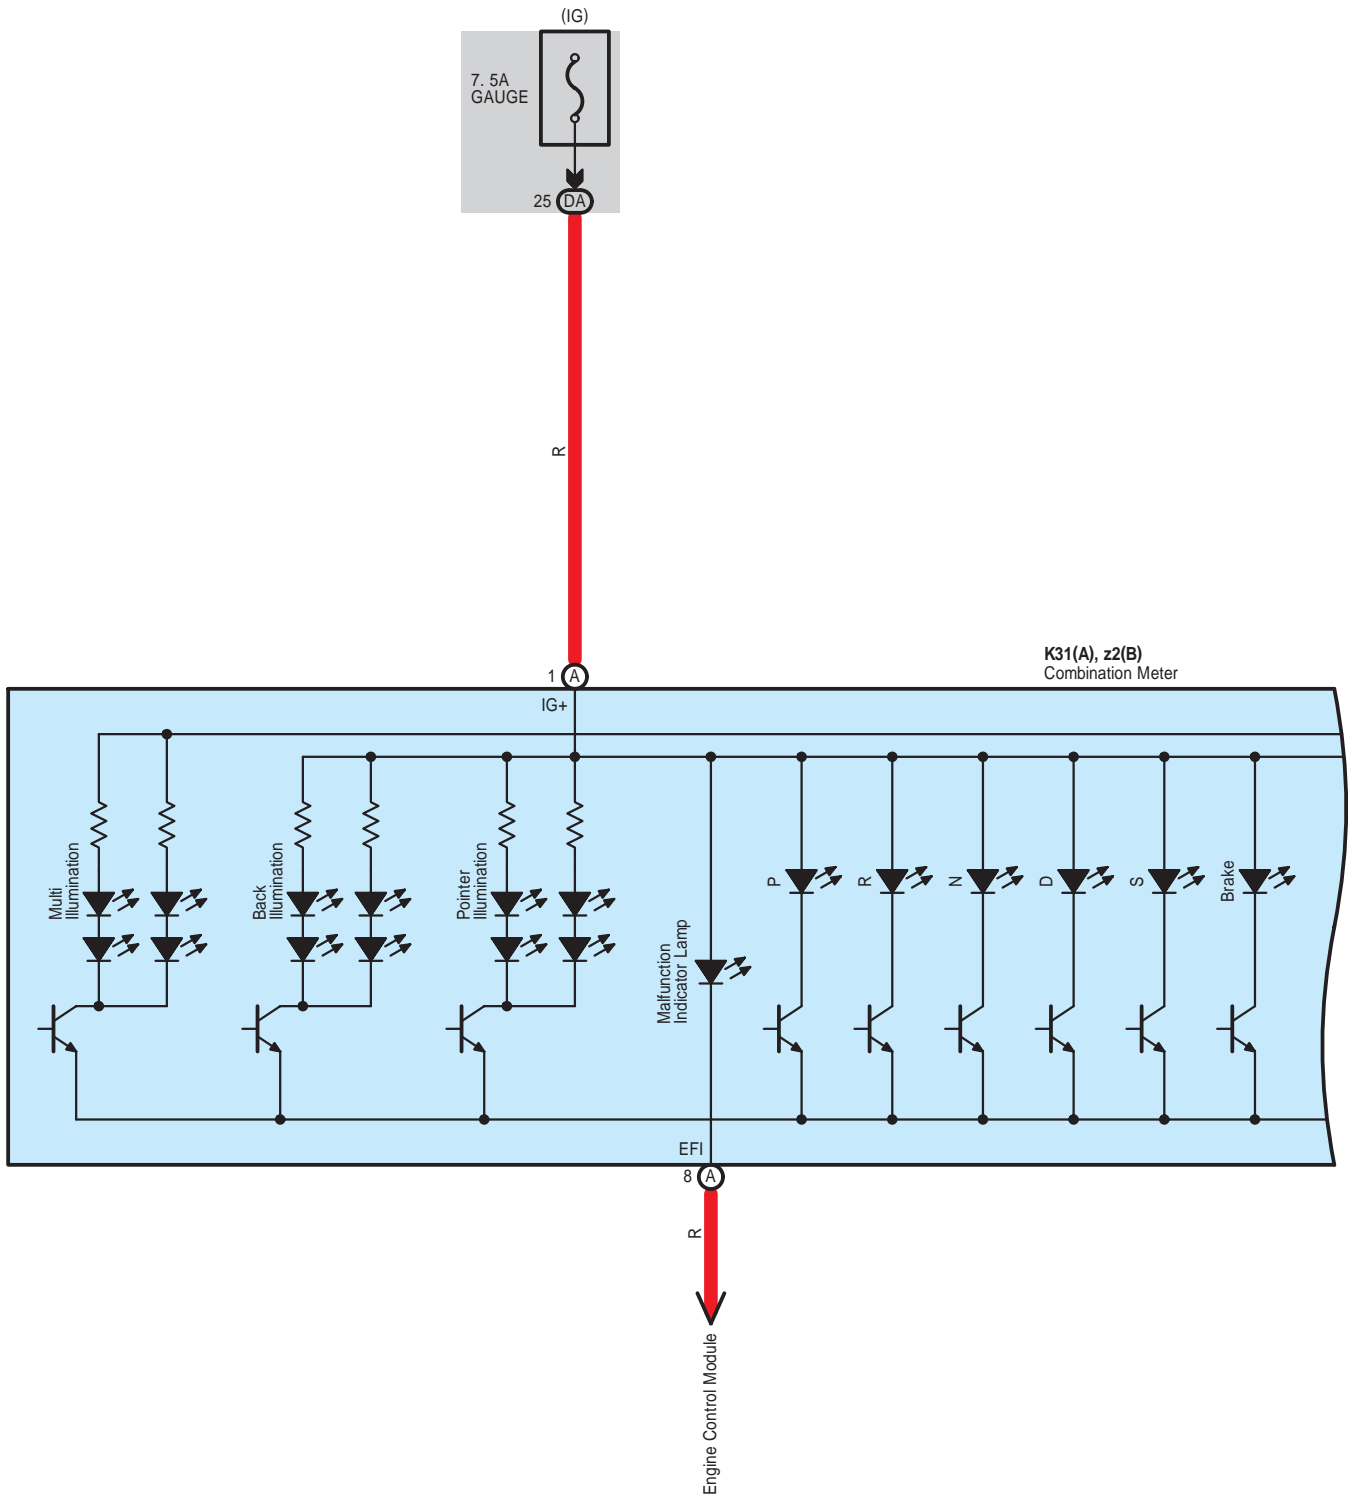

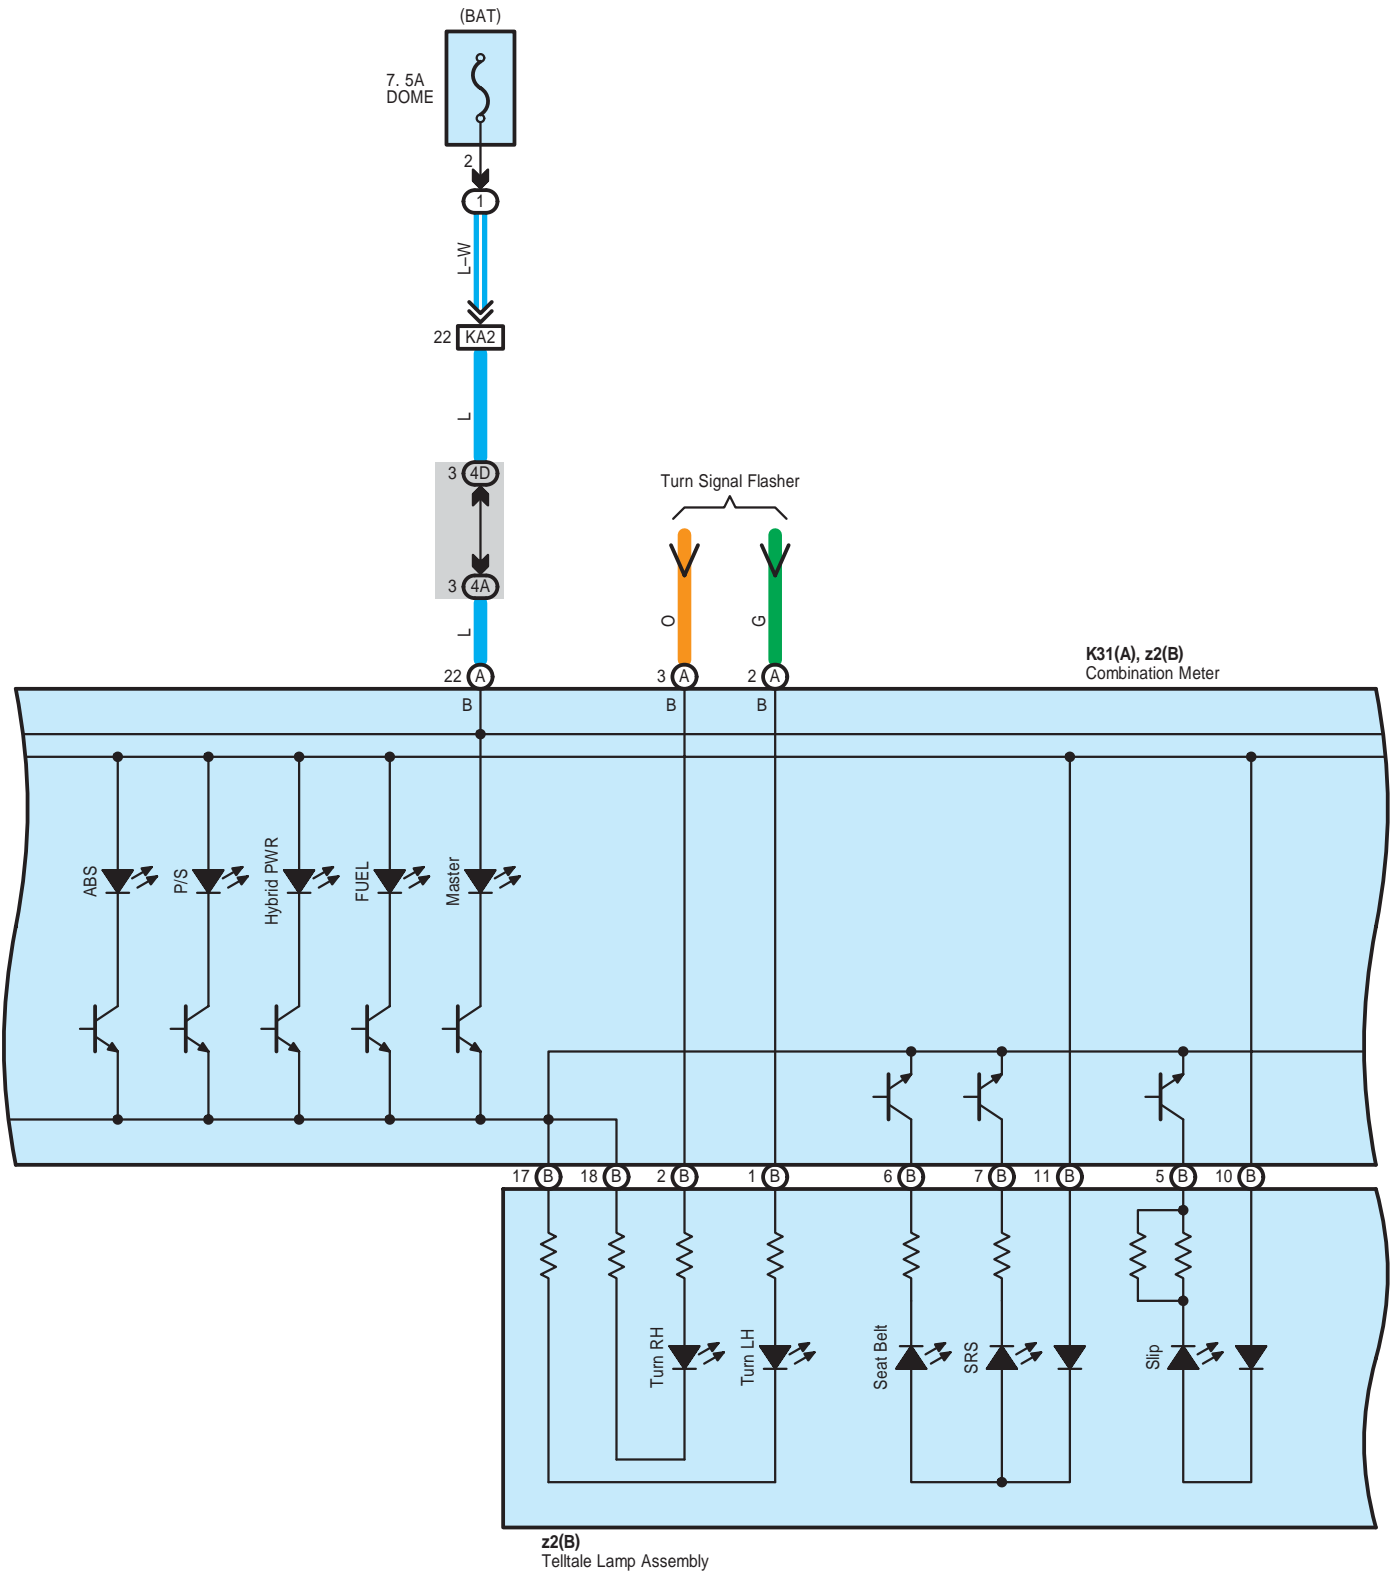


# Combination Meter


K31(A), z2(B)  
Combination Meter

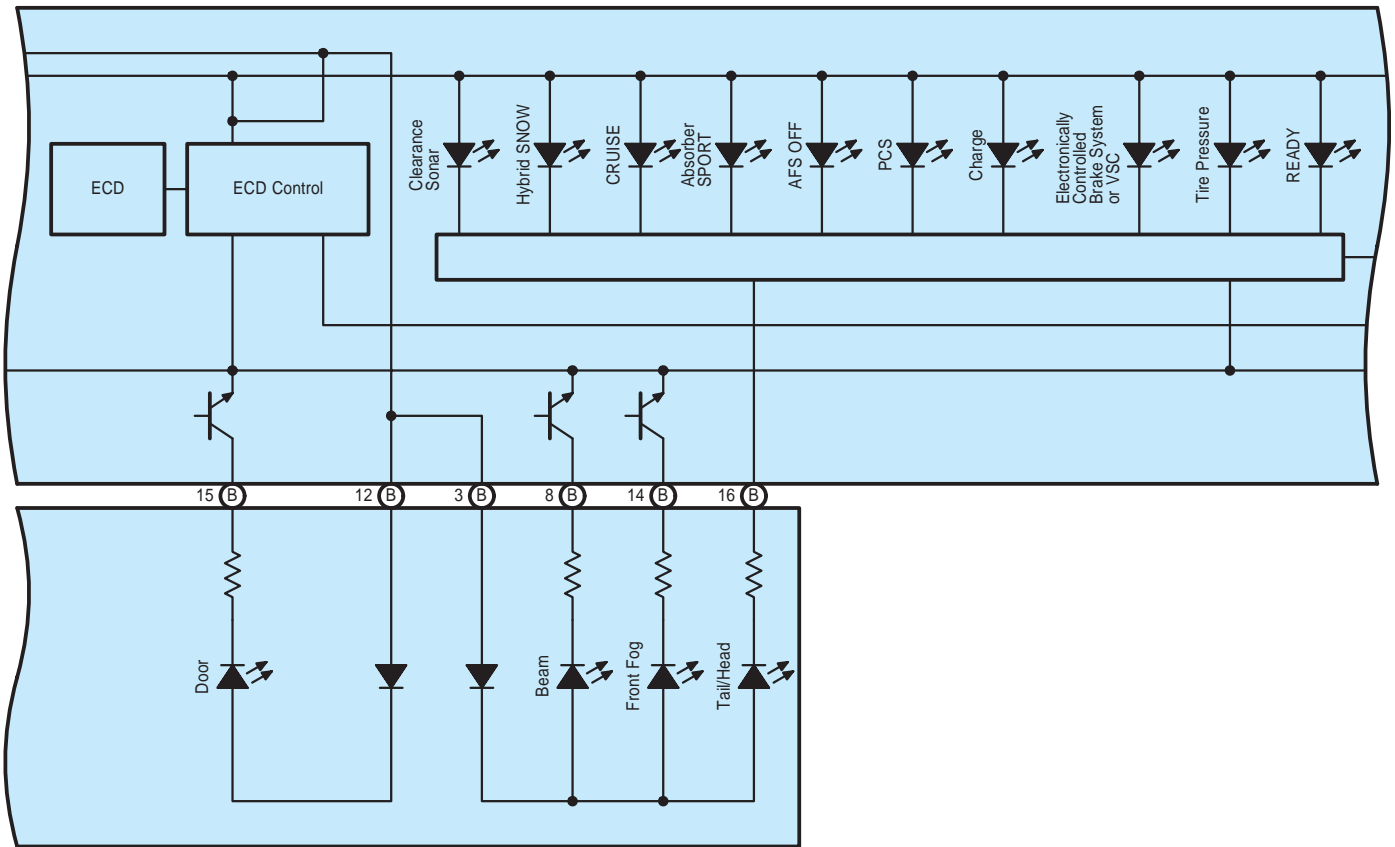


z2(B)  
Telltale Lamp Assembly

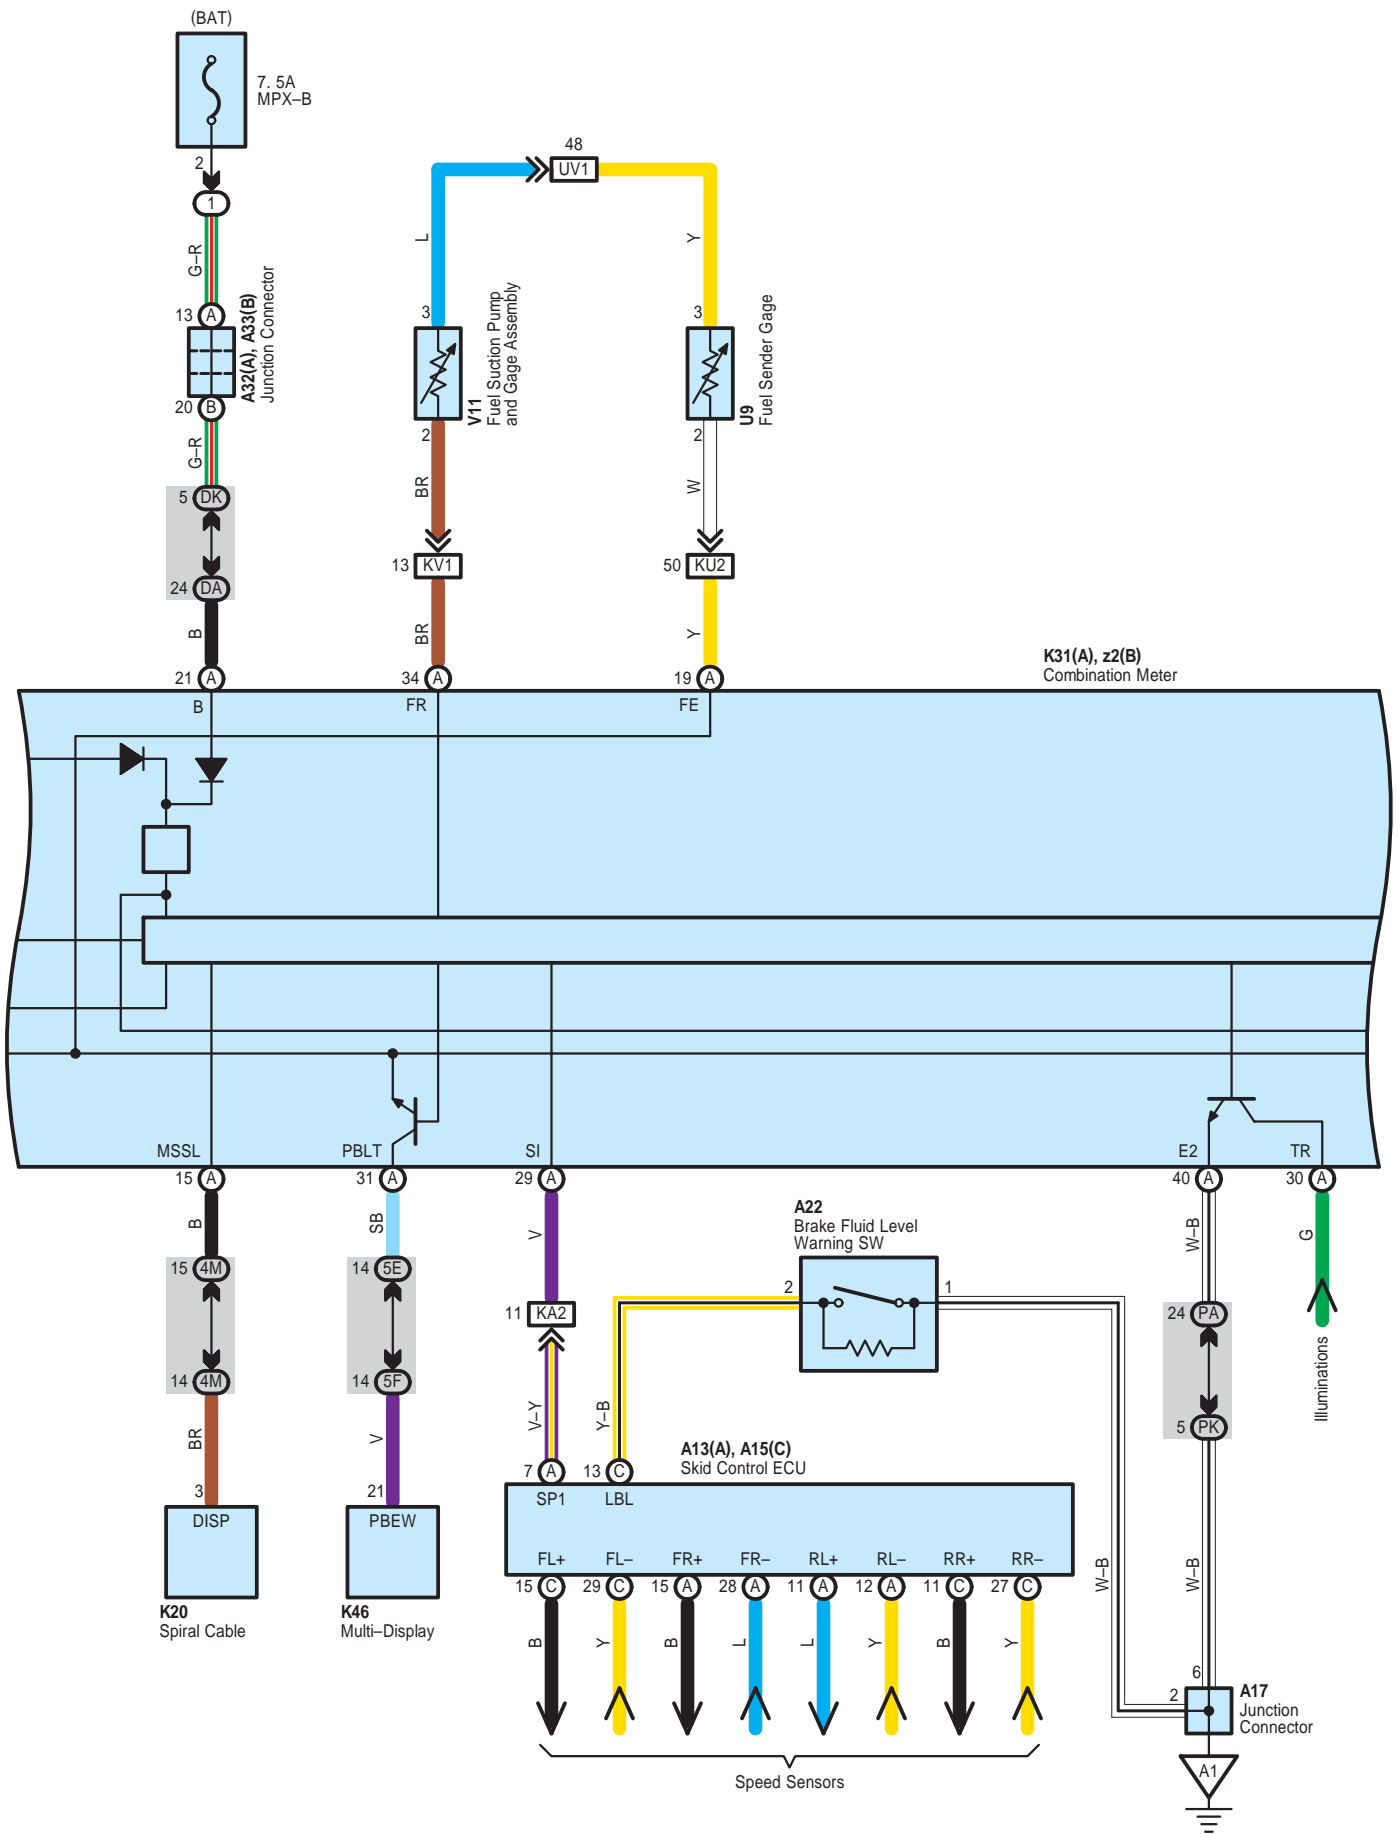



# Combination Meter

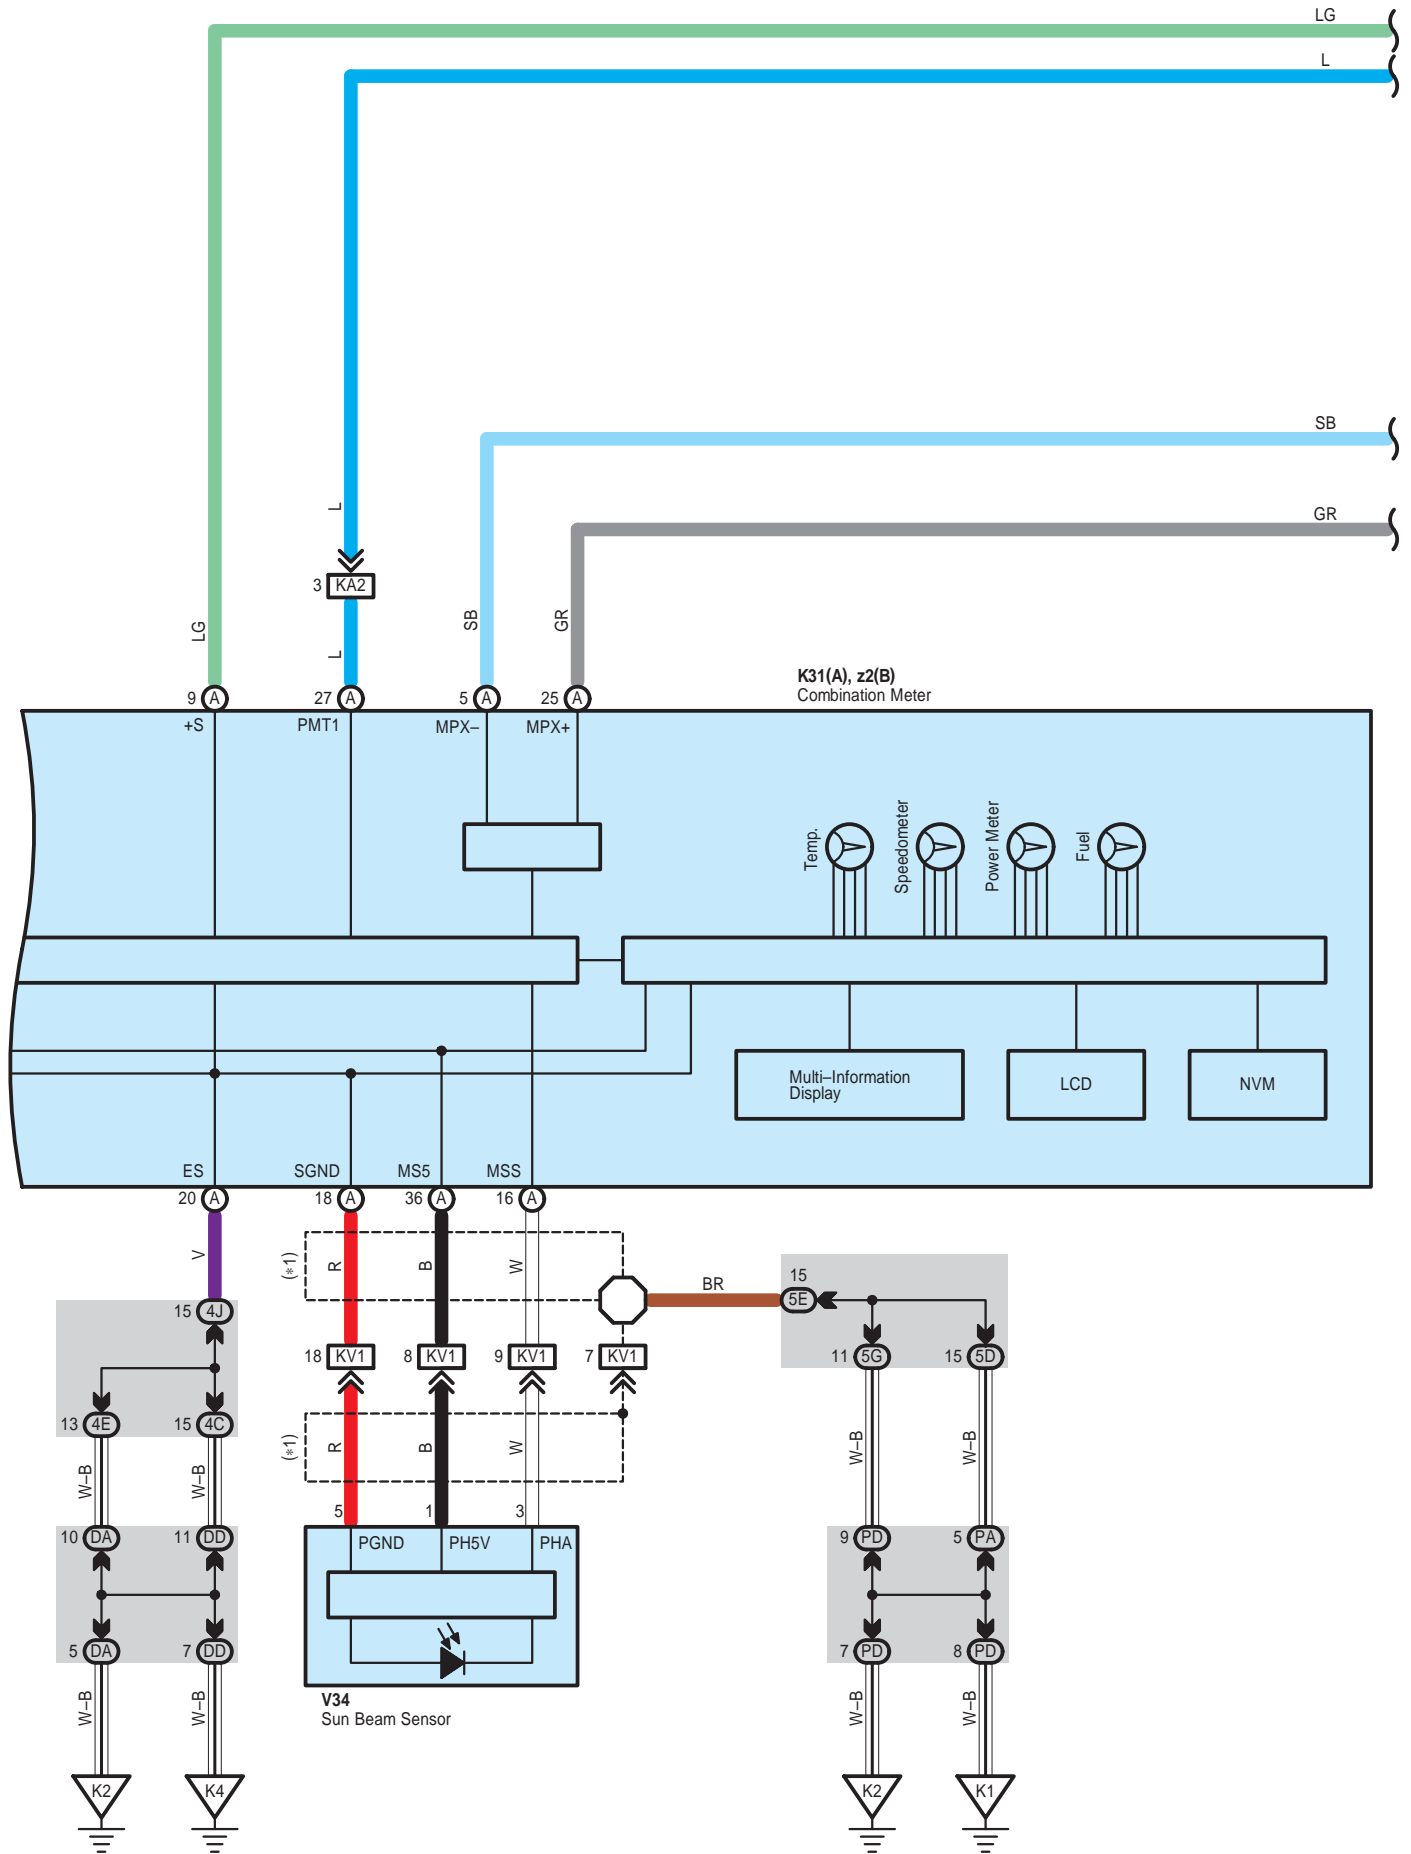

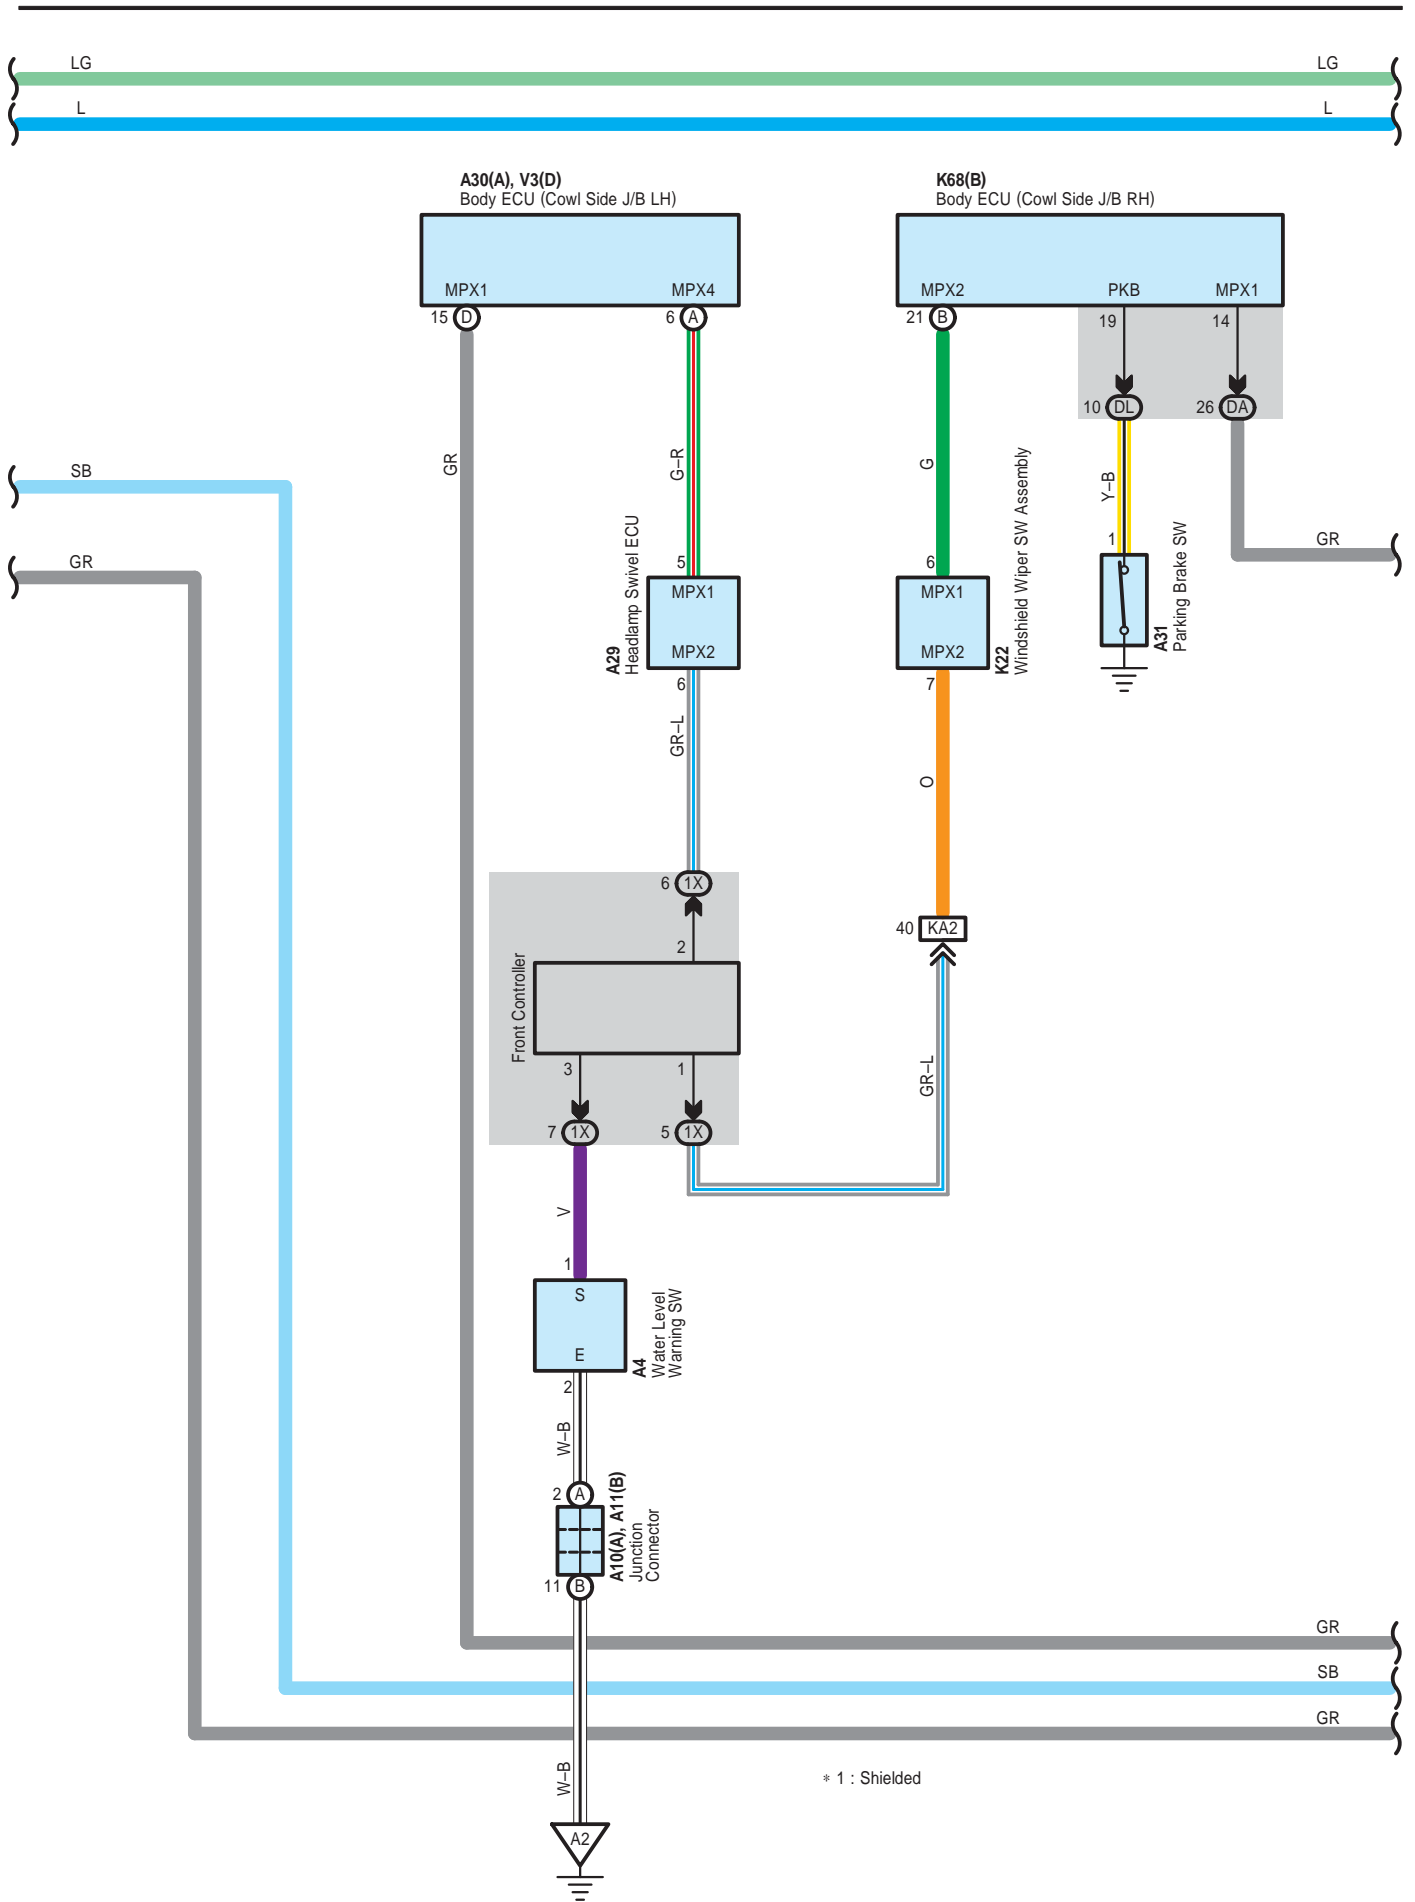


# Combination Meter

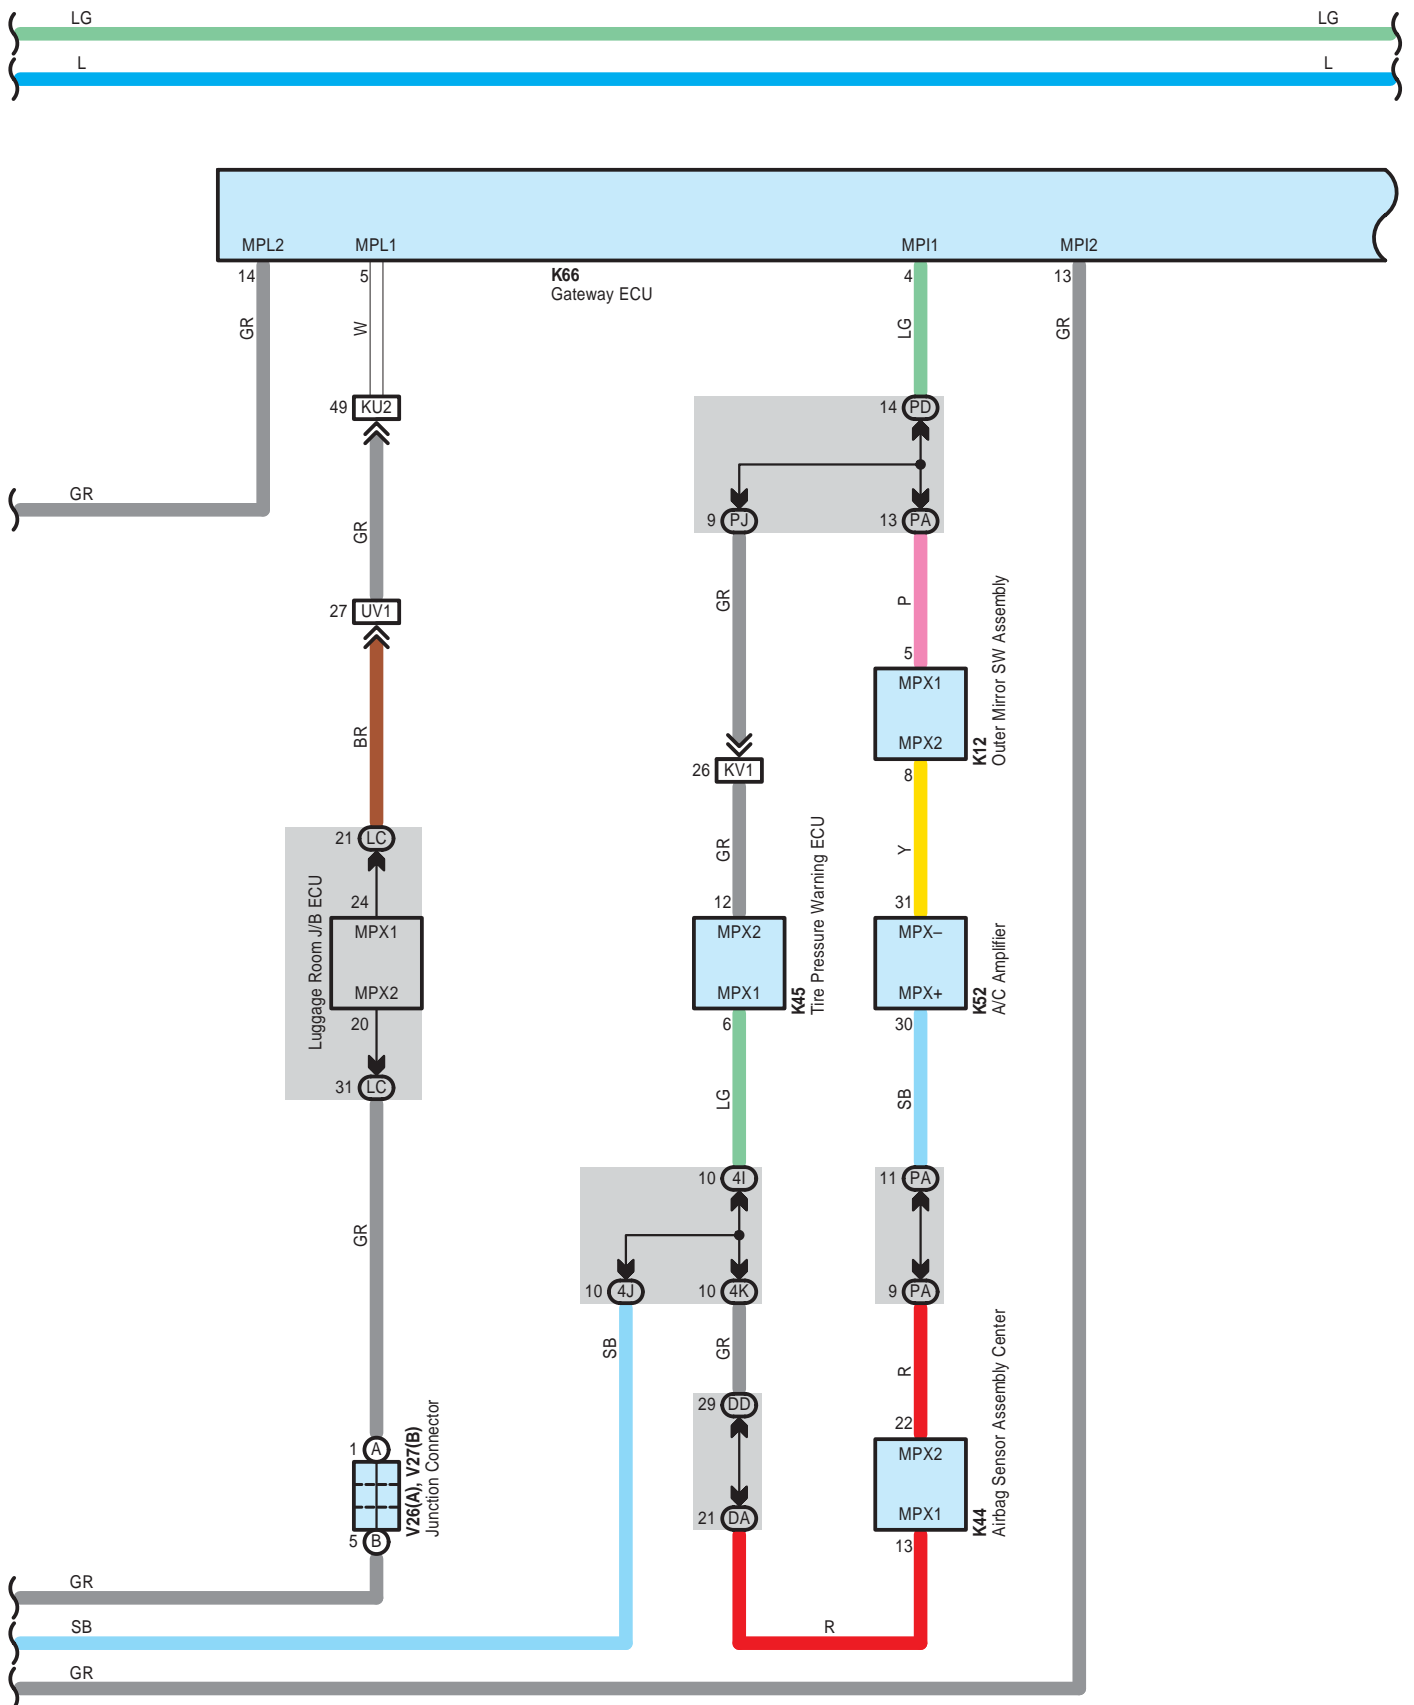


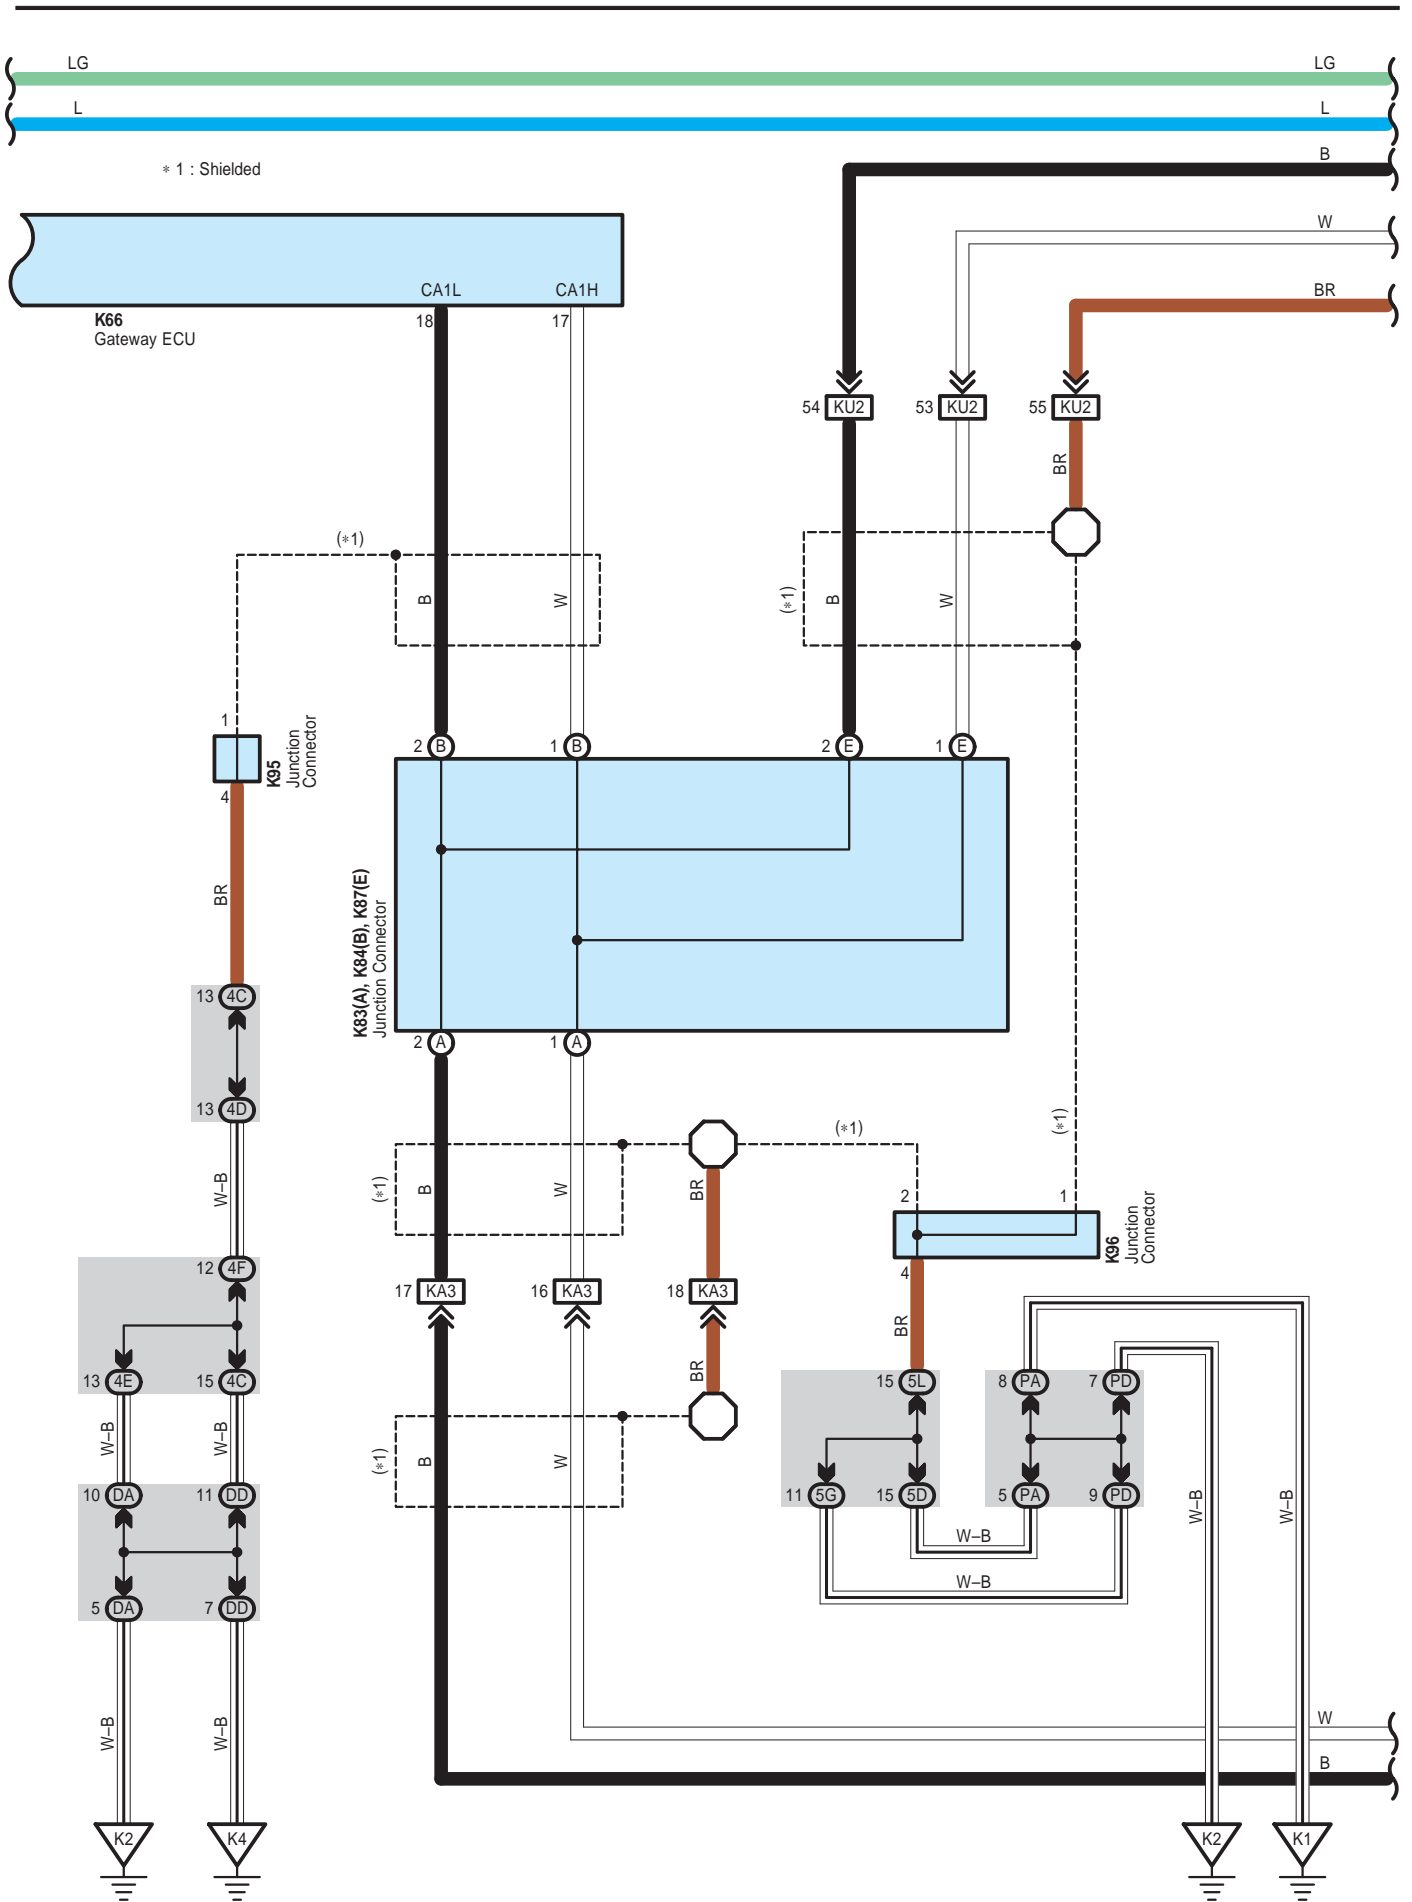




# Combination Meter

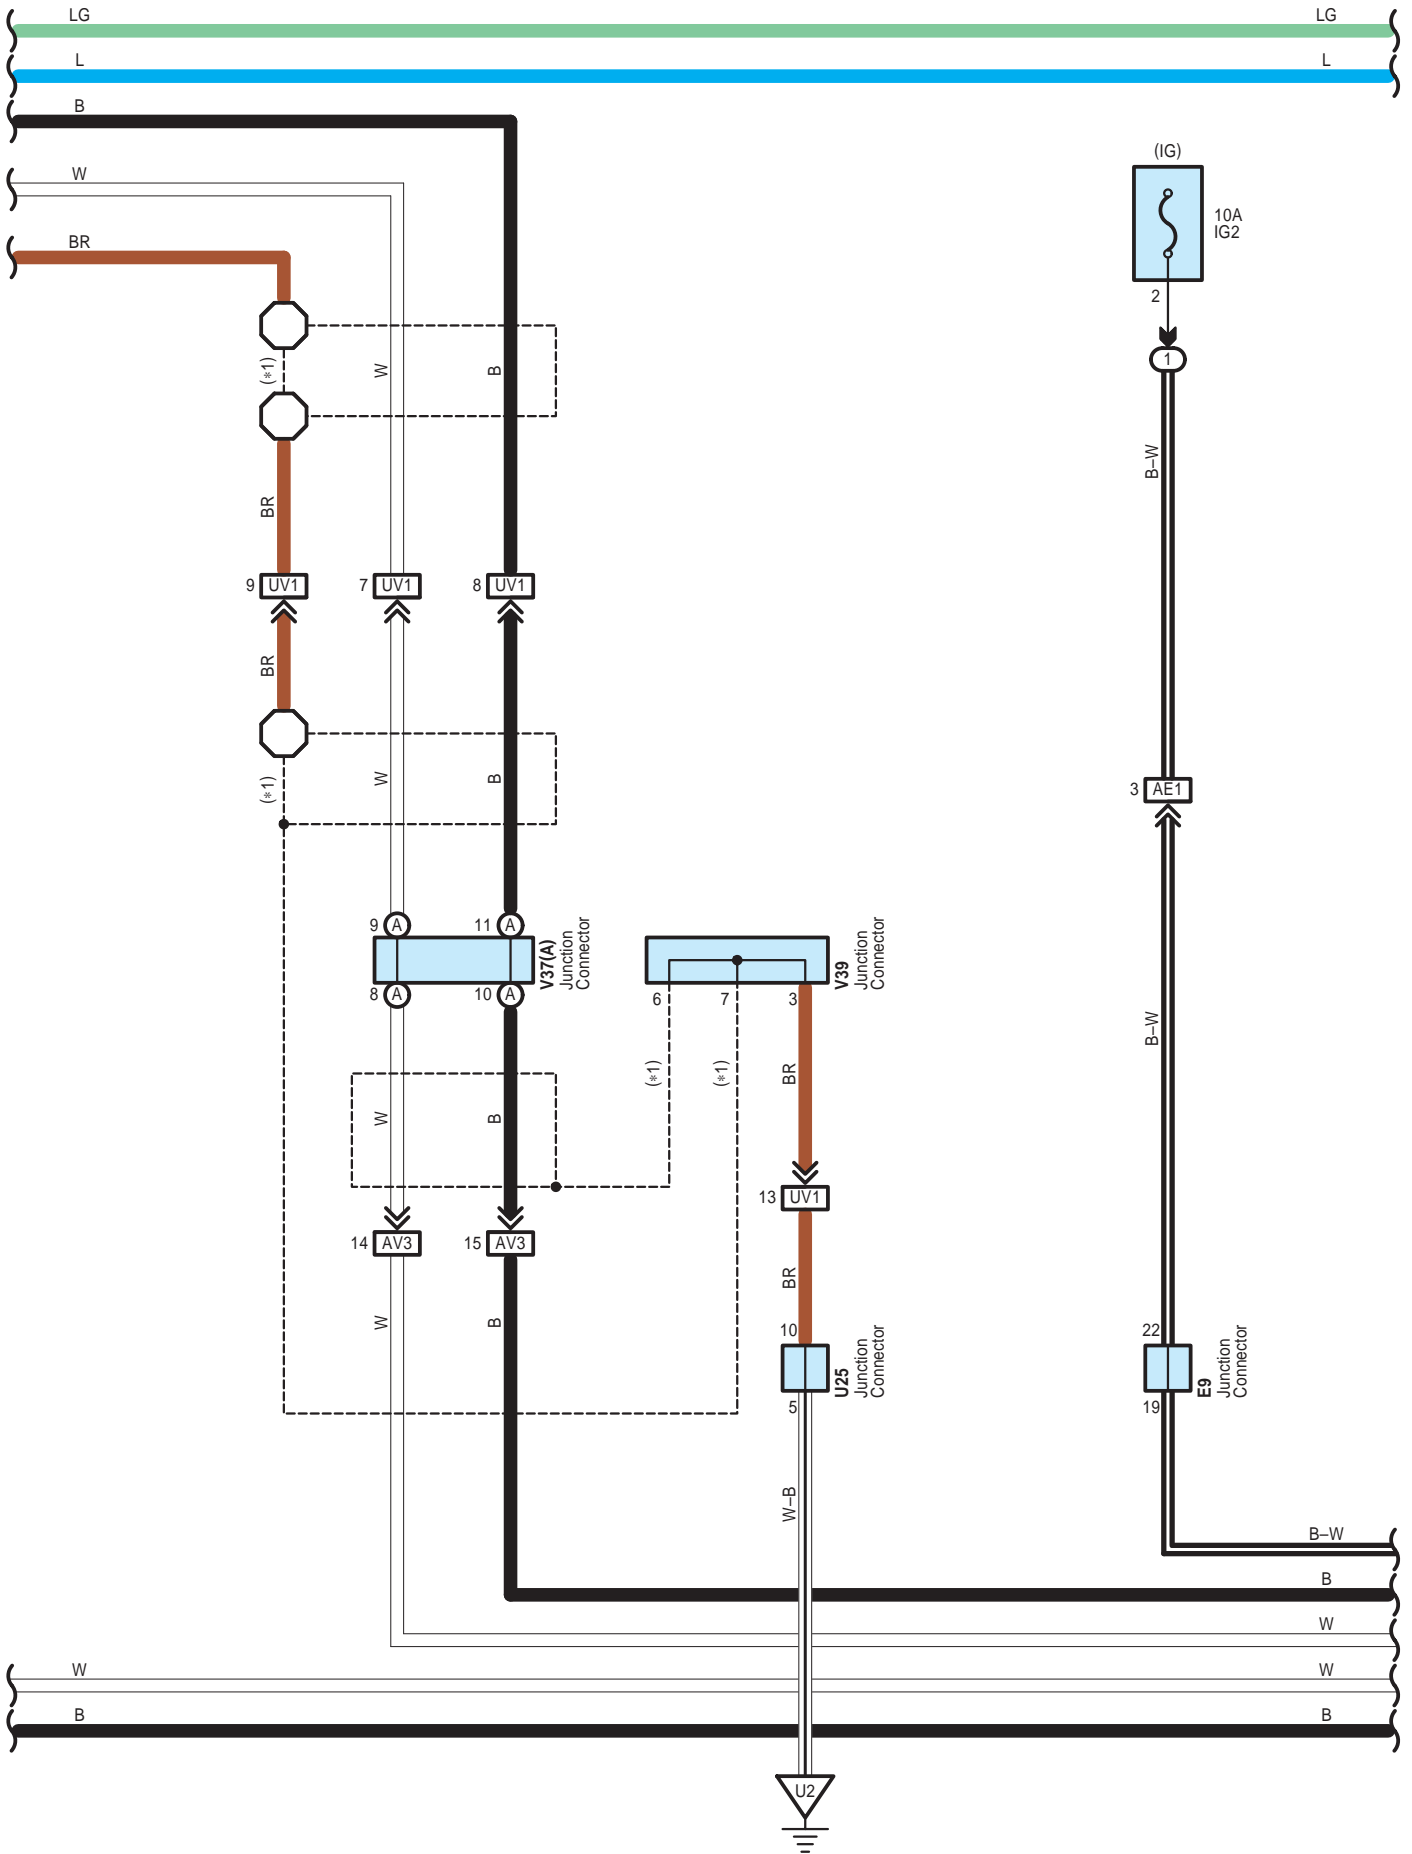

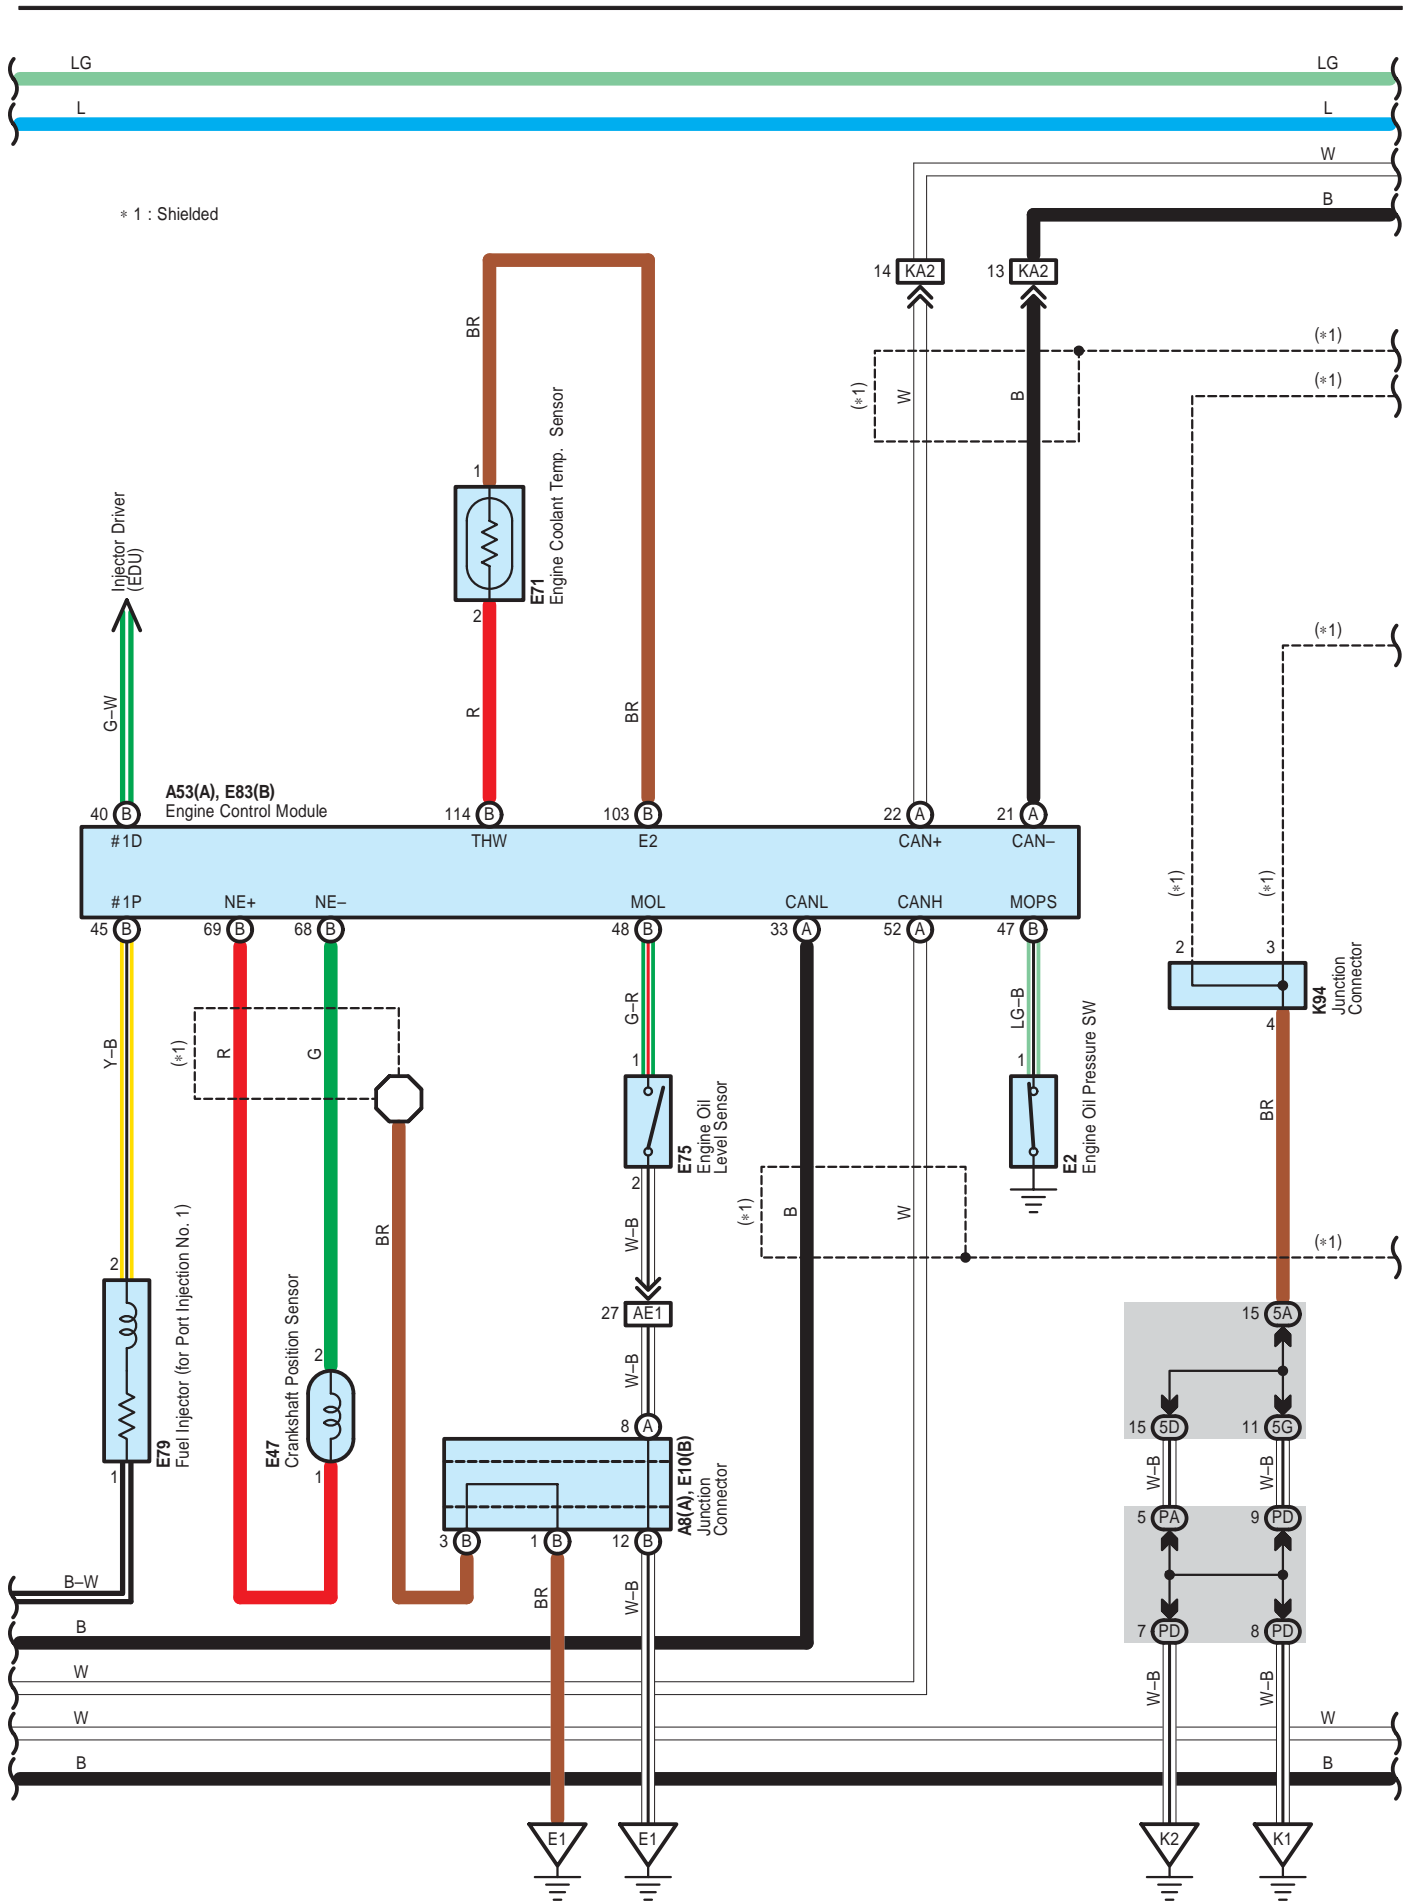

LEXUS GS 450h (EM02D0U)

# Combination Meter

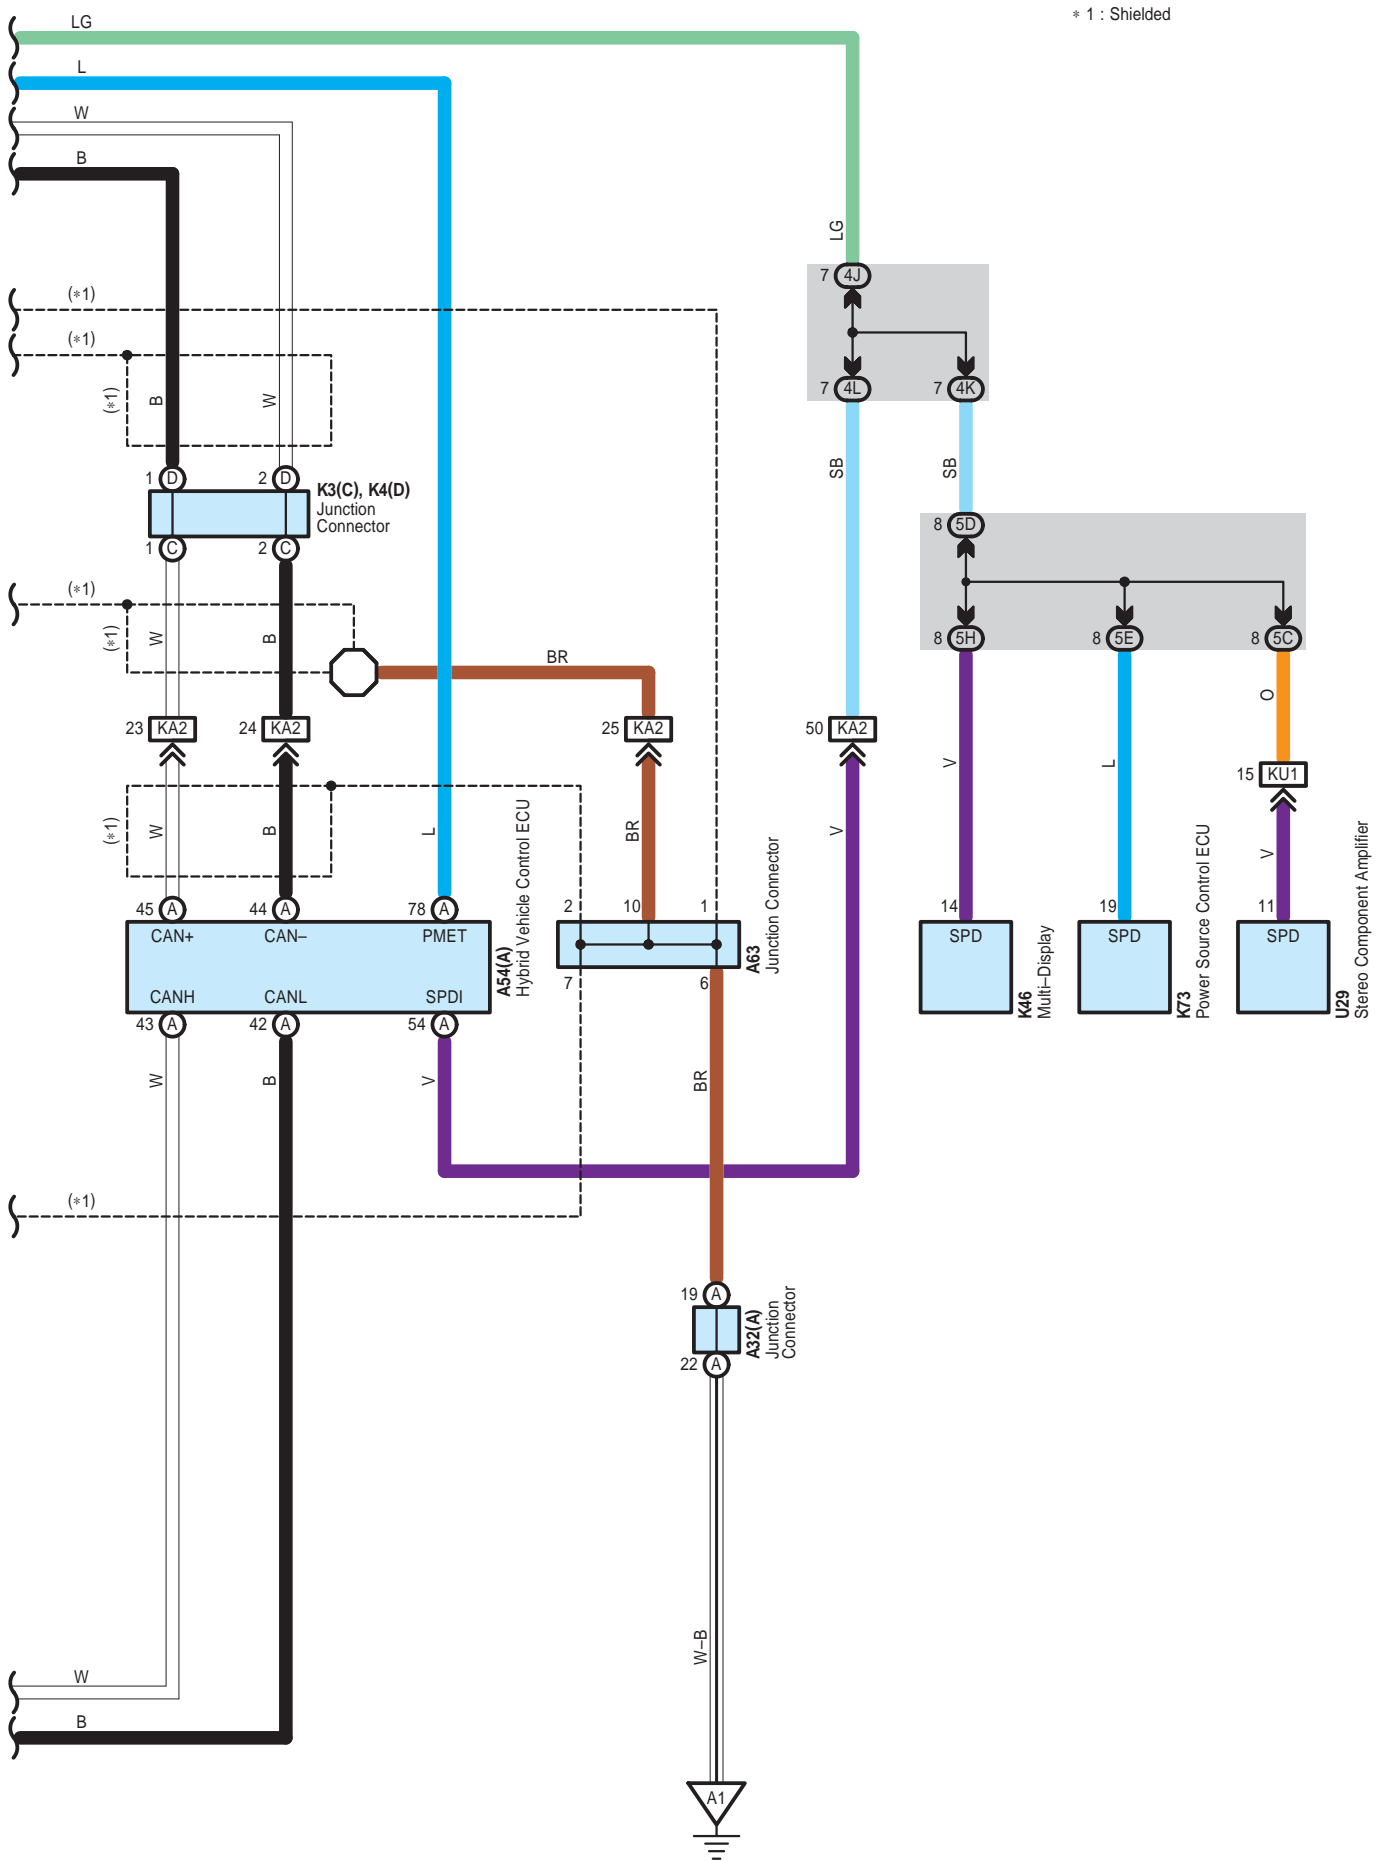

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
A4	80	E10   B	81	K73	86
A8   A	80	E47	81	K83   A	78, 86
A10   A	80	E71	81	K84   B	78, 86
A11   B	80	E75	81	K87   E	78, 86
A13   A	80	E79	81	K94	86
A15   C	80	E83   B	81	K95	86
A17	80	K3   C	74, 85	K96	86
A22	80	K4   D	74, 85	U9	90
A29	84	K12	85	U25	90
A30   A	84	K20	85	U29	90
A31	84	K22	85	V3   D	87
A32   A	84	K31   A	85	V11	91
A33   B	84	K44	86	V26   A	91
A53   A	80	K45	86	V27   B	91
A54   A	80	K46	86	V34	91
A63	84	K52	86	V37   A	91
E2	81	K66	86	V39	91
E9	81	K68   B	86	z2   B	87

**○ : Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

# Combination Meter

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1X	29	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
4A	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4C		
4D		
4E		
4F		
4I		
4J		
4K		
4L		
4M		
5A	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5C		
5D		
5E		
5F		
5G		
5H		
5L		
DA	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DD		
DK	56	Engine Room Main Wire and Cowl Side J/B RH (Behind the Glove Box)
DL		
LC	63	Floor No.2 Wire and Luggage Room J/B (Left Side of the Quarter Panel )
PA	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PD		
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PK	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AE1	96	Engine Room Main Wire and Engine Wire (Inside of the ECU Box)
AV3	97	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KA3	97	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
KU1	97	Instrument Panel Wire and Floor No.1 Wire (Under the Console Box)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)

## : Ground Points

Code	See Page	Ground Points Location
A1	96	Left Side of the Dash Panel
A2	96	Front Left Fender Apron
E1	96	Rear Side of the Left Cylinder Head
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
U2	98	Right Side of the Rear Floor Partition Panel

