




Air Conditioning

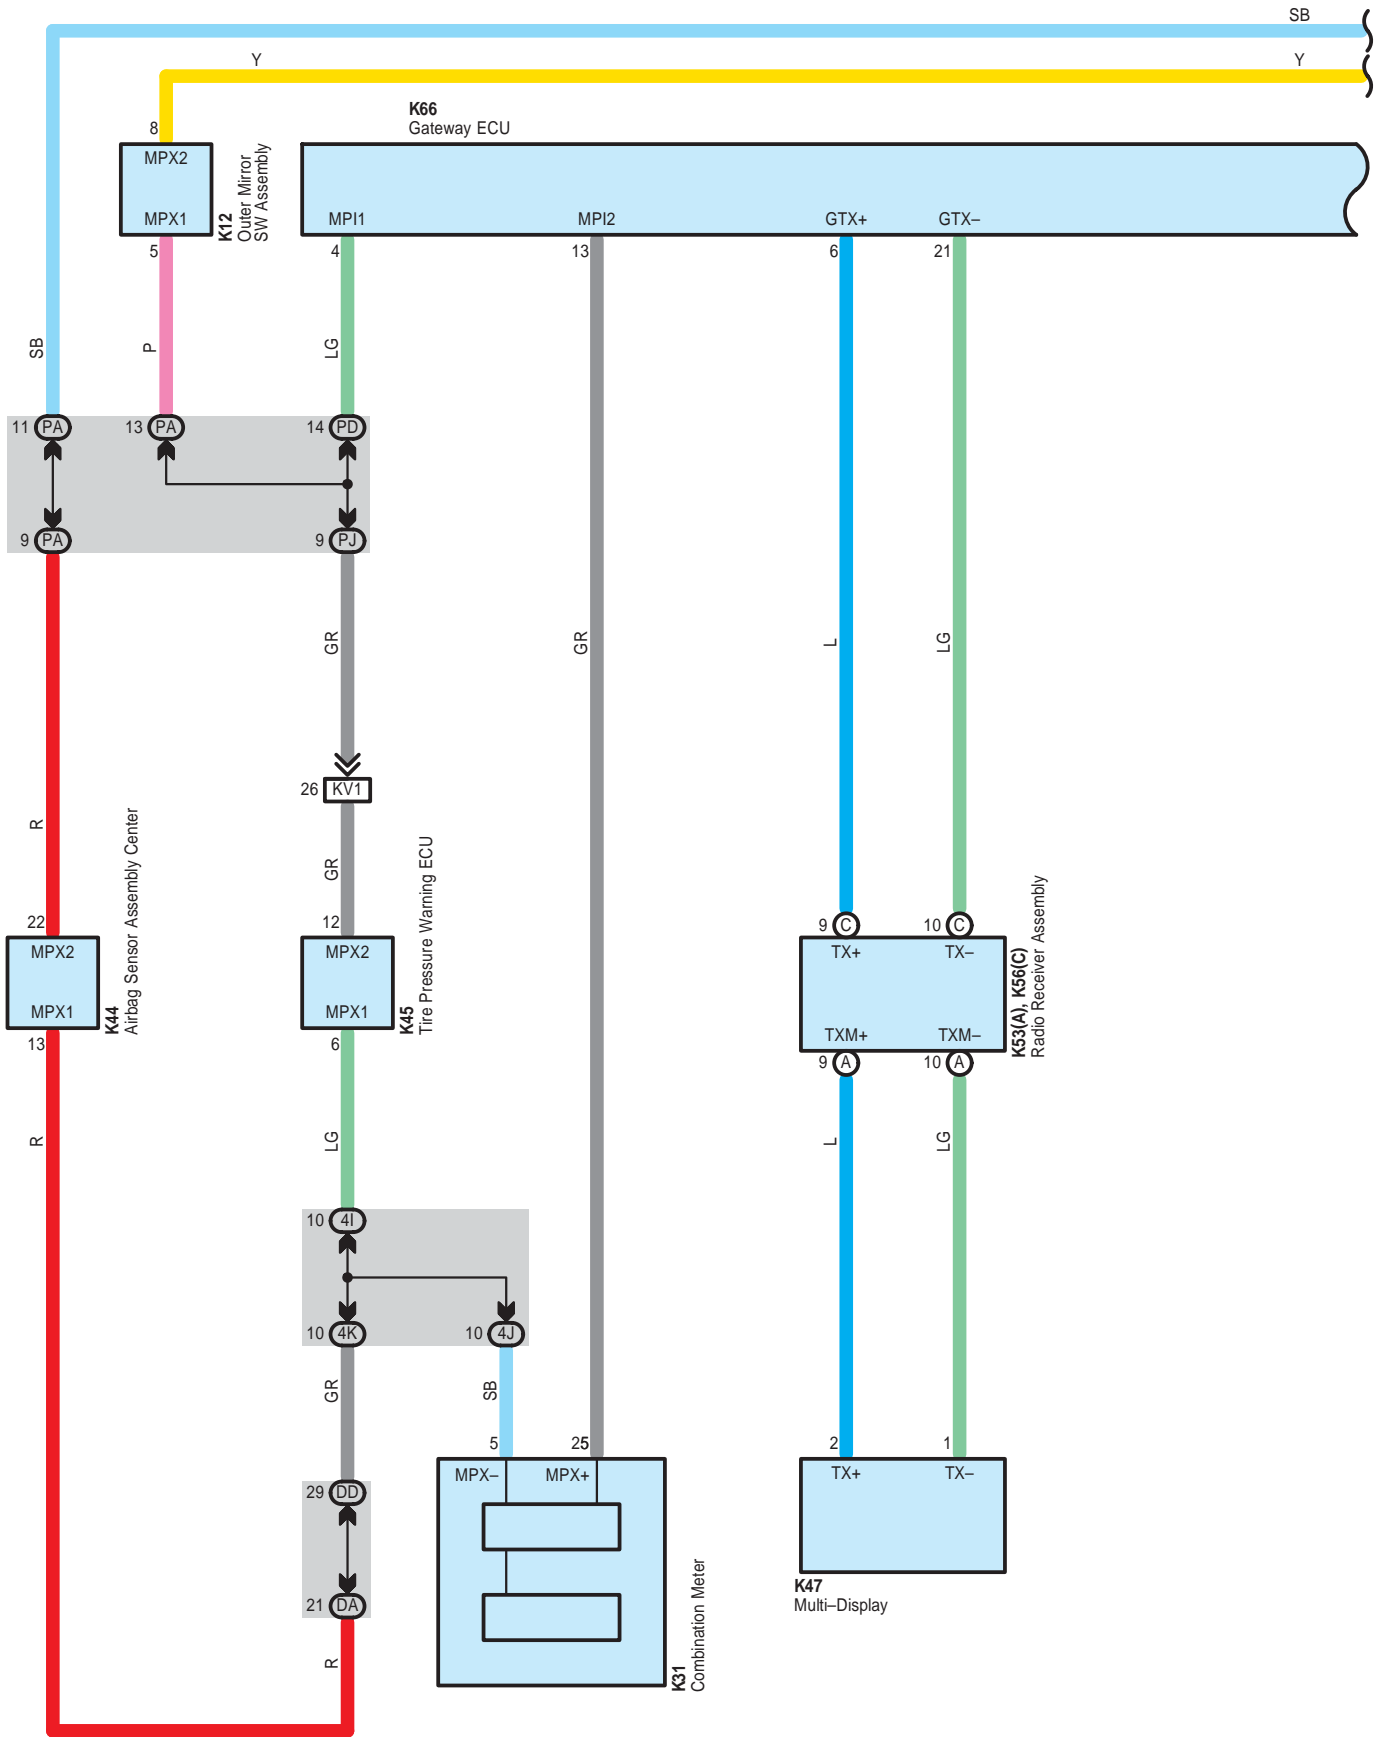


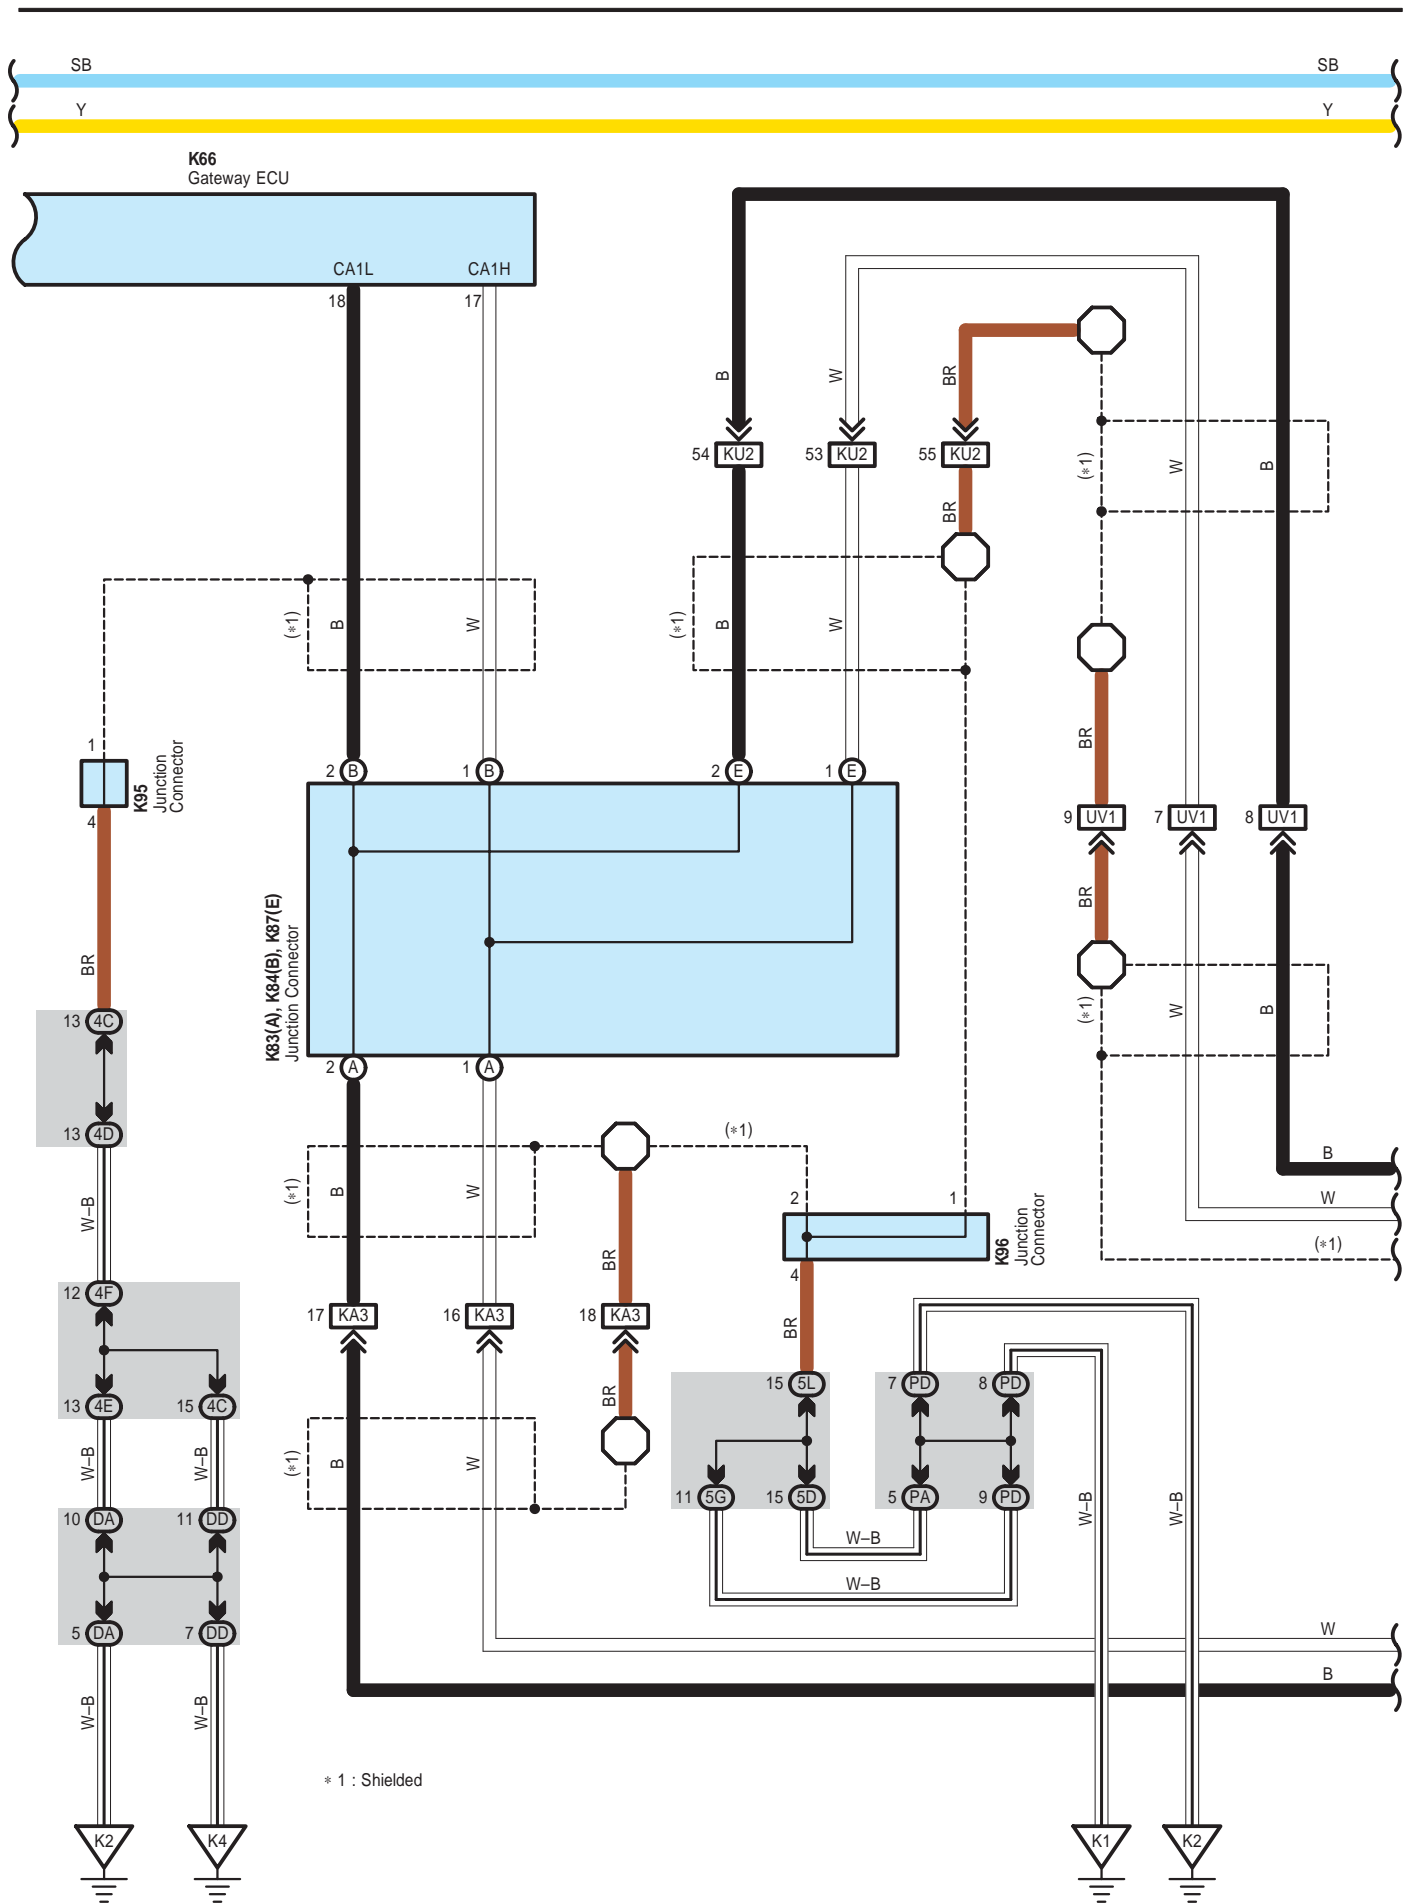


Air Conditioning


* 1 : Shielded

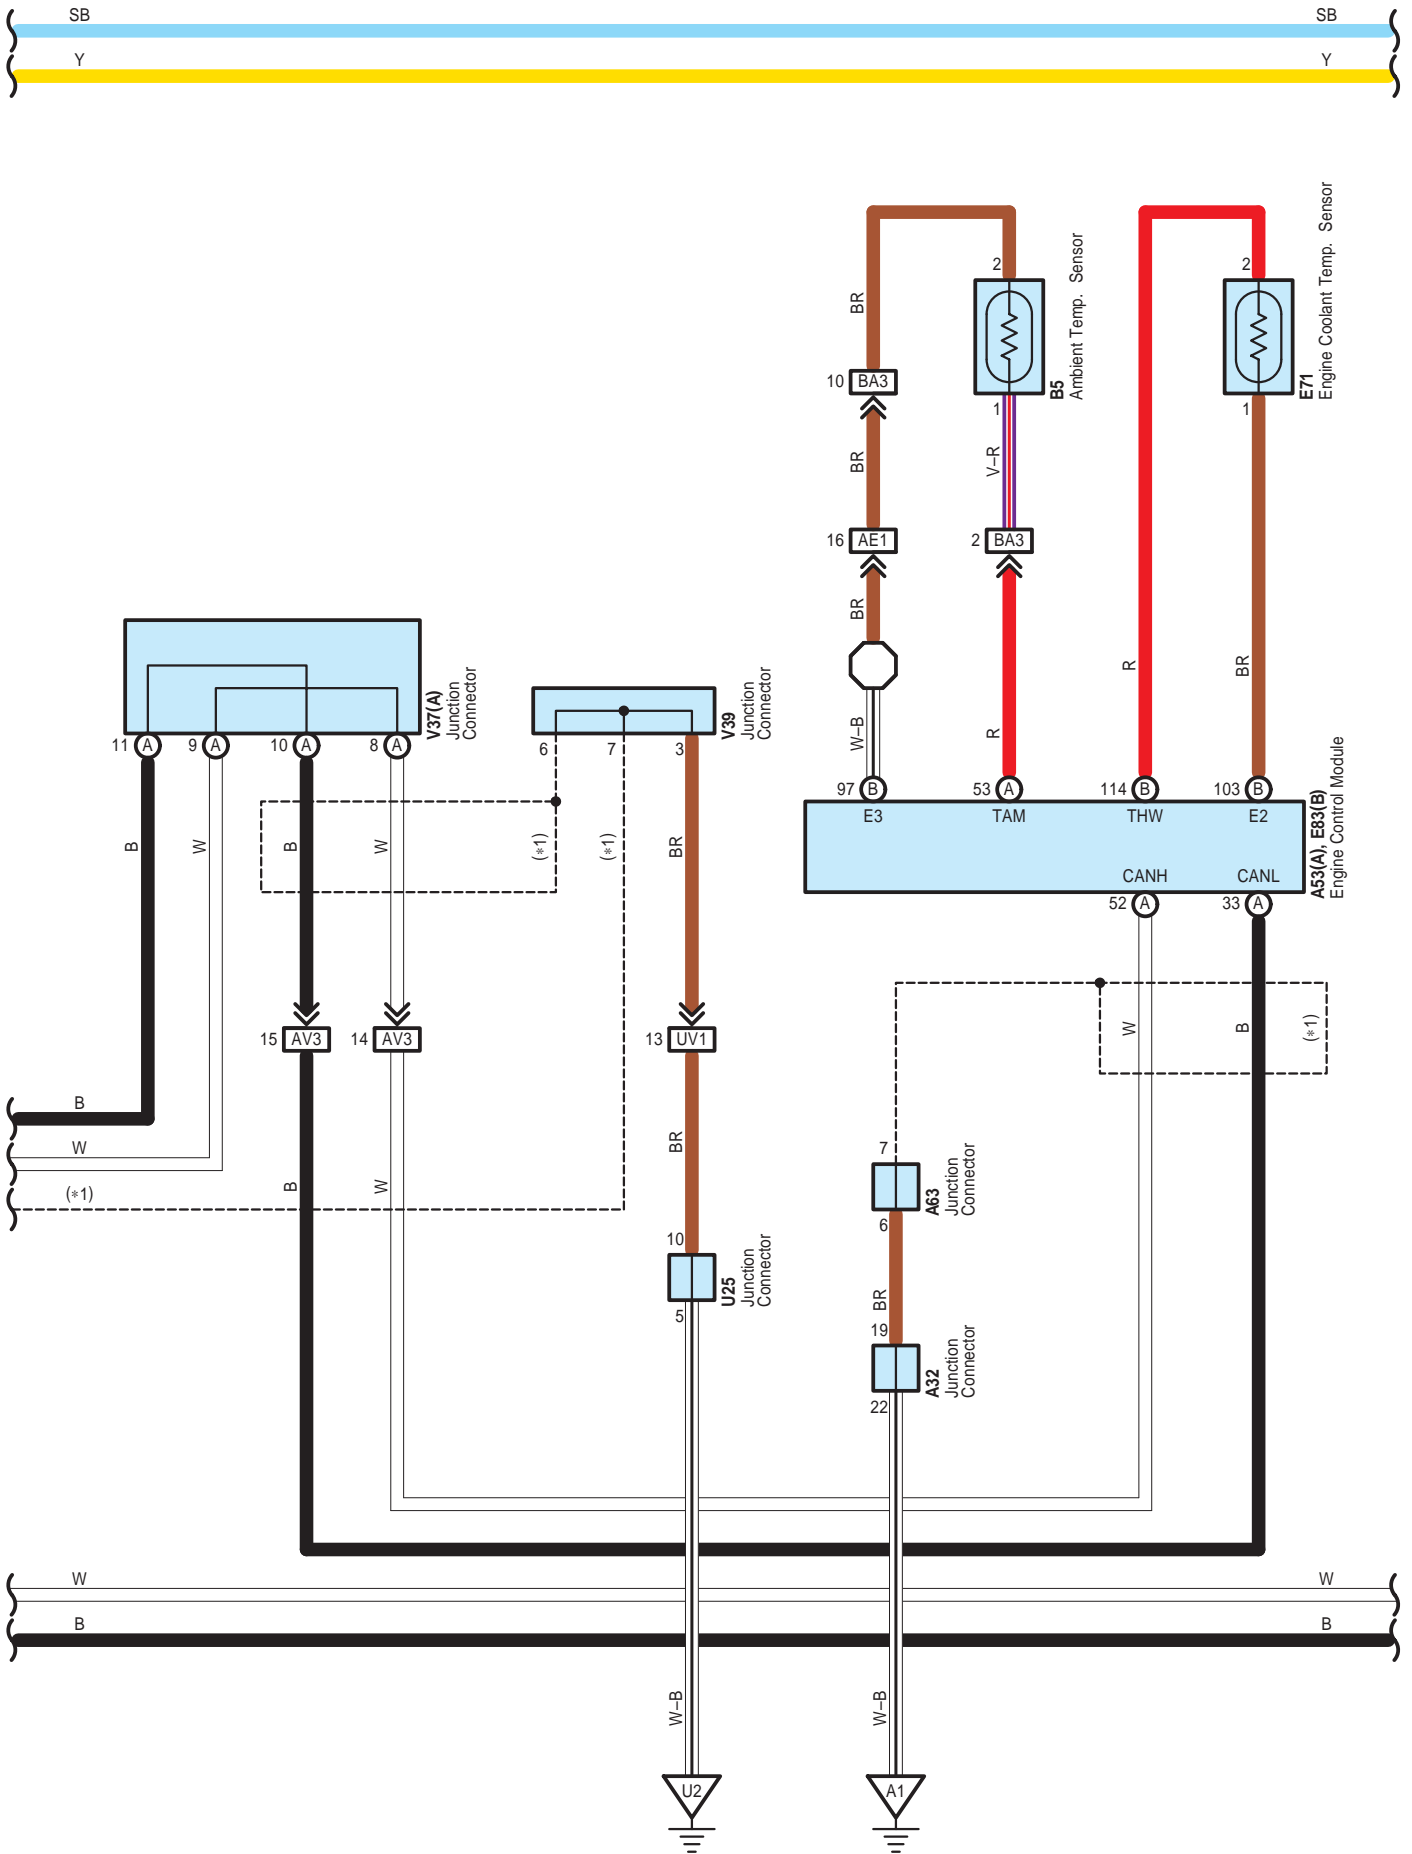

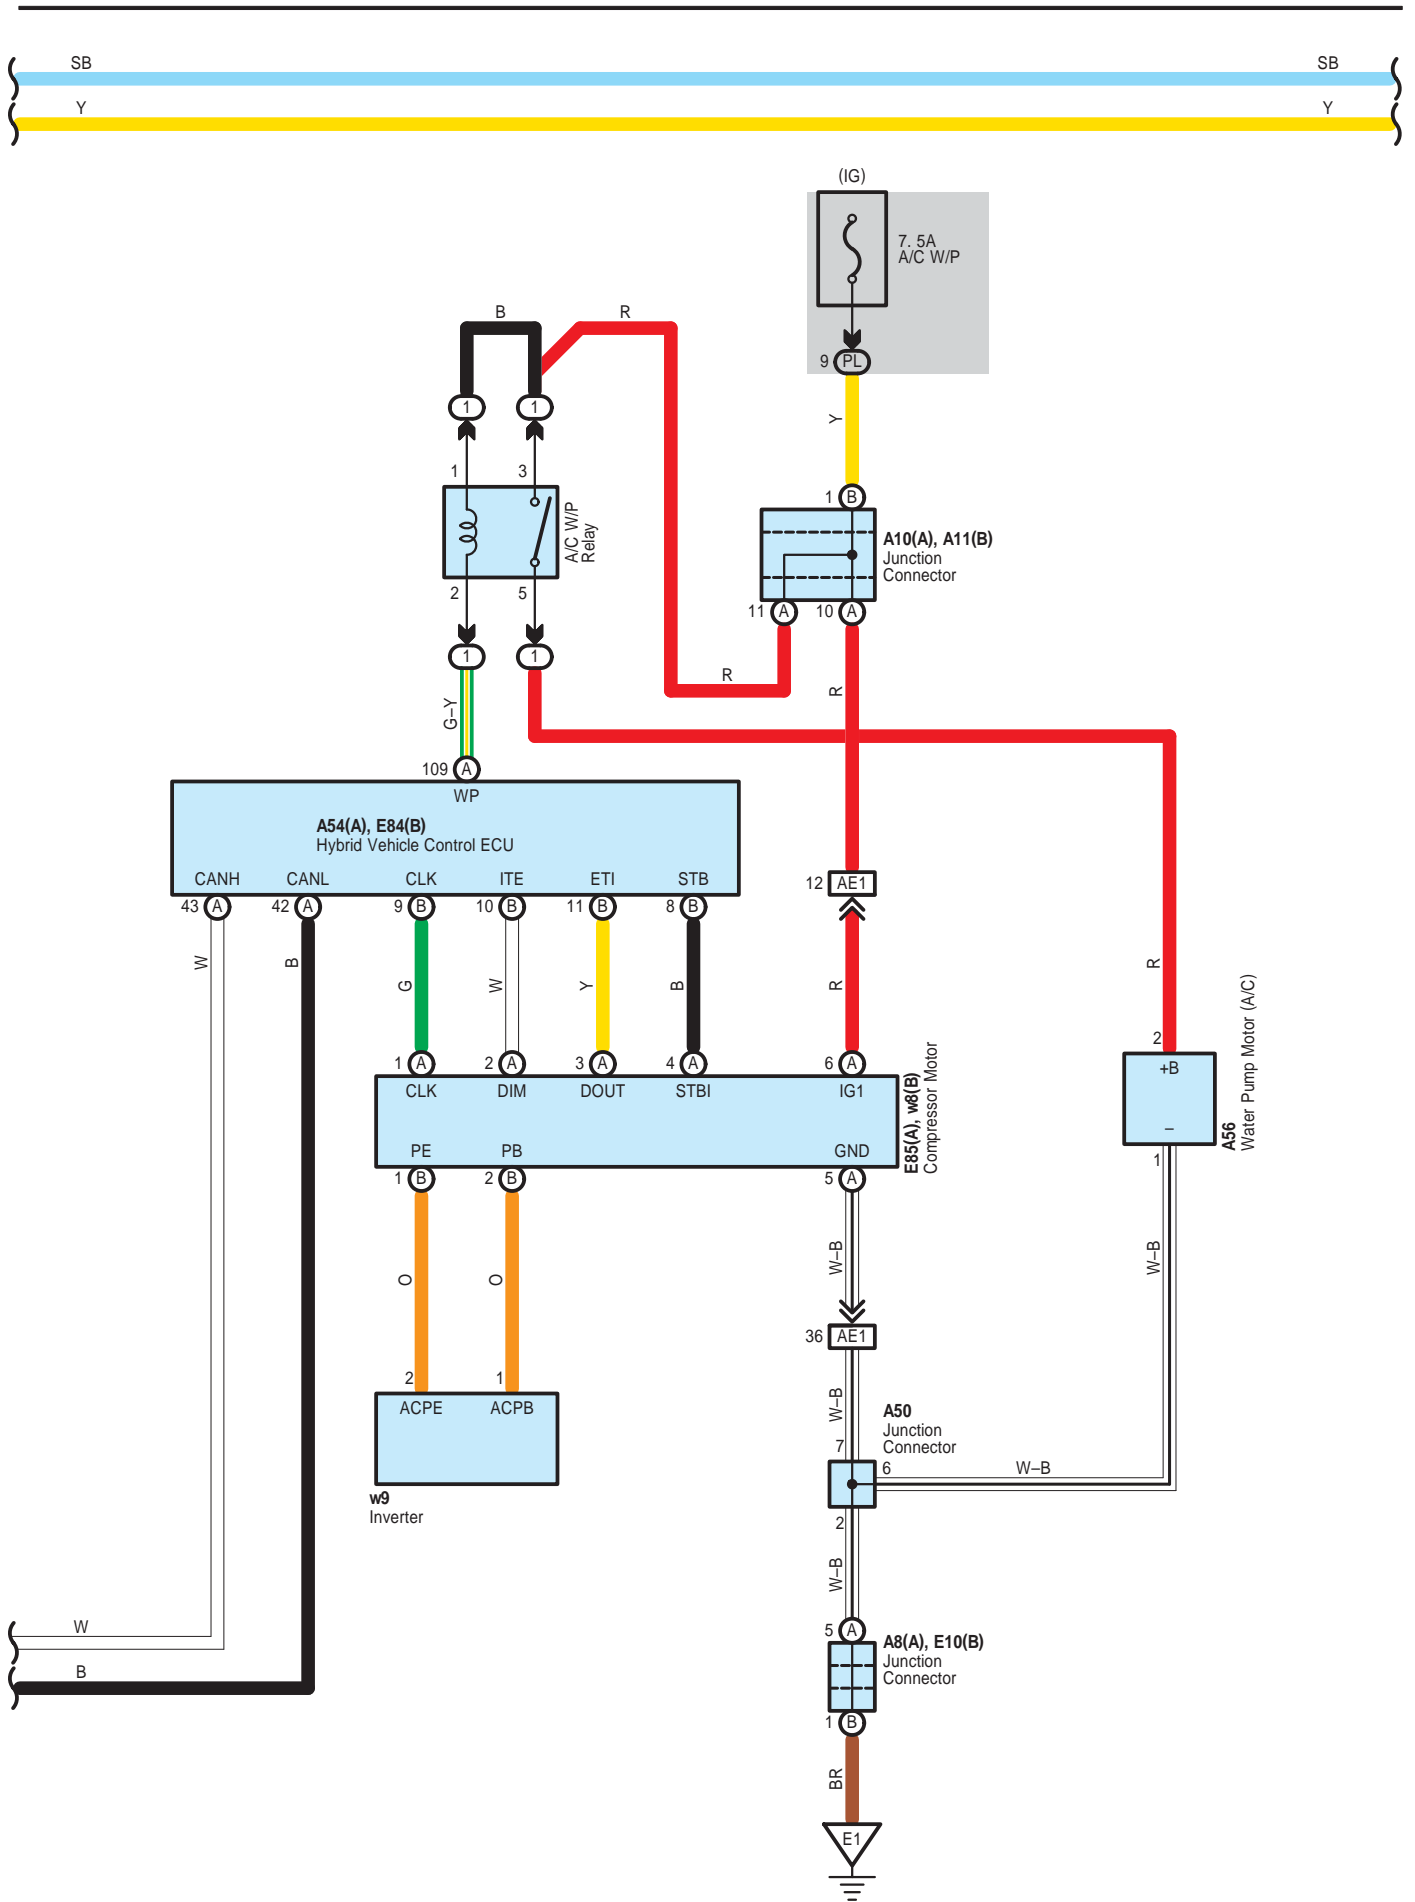



Air Conditioning

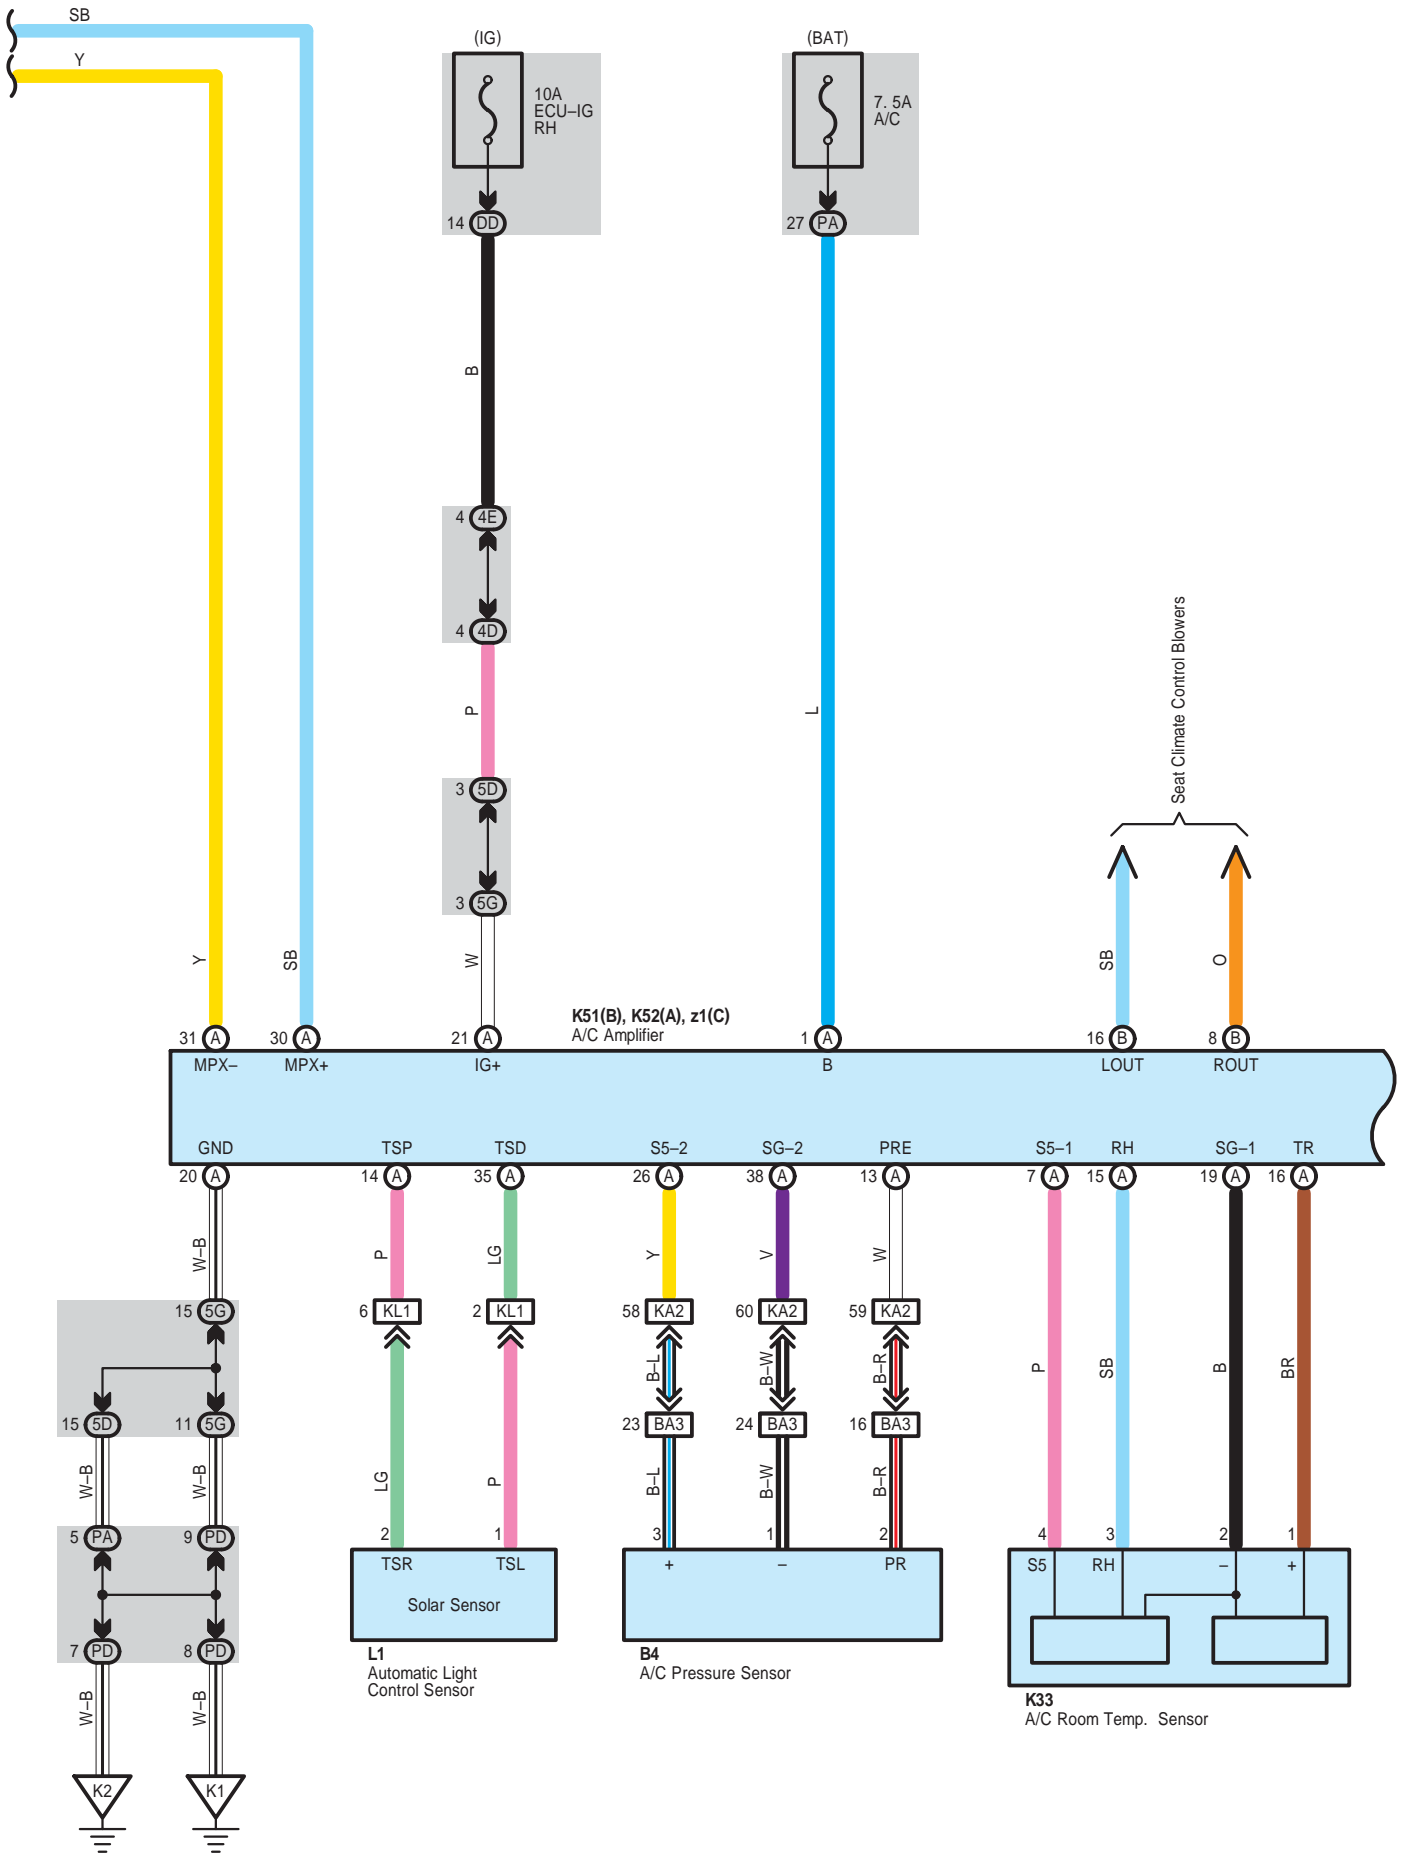

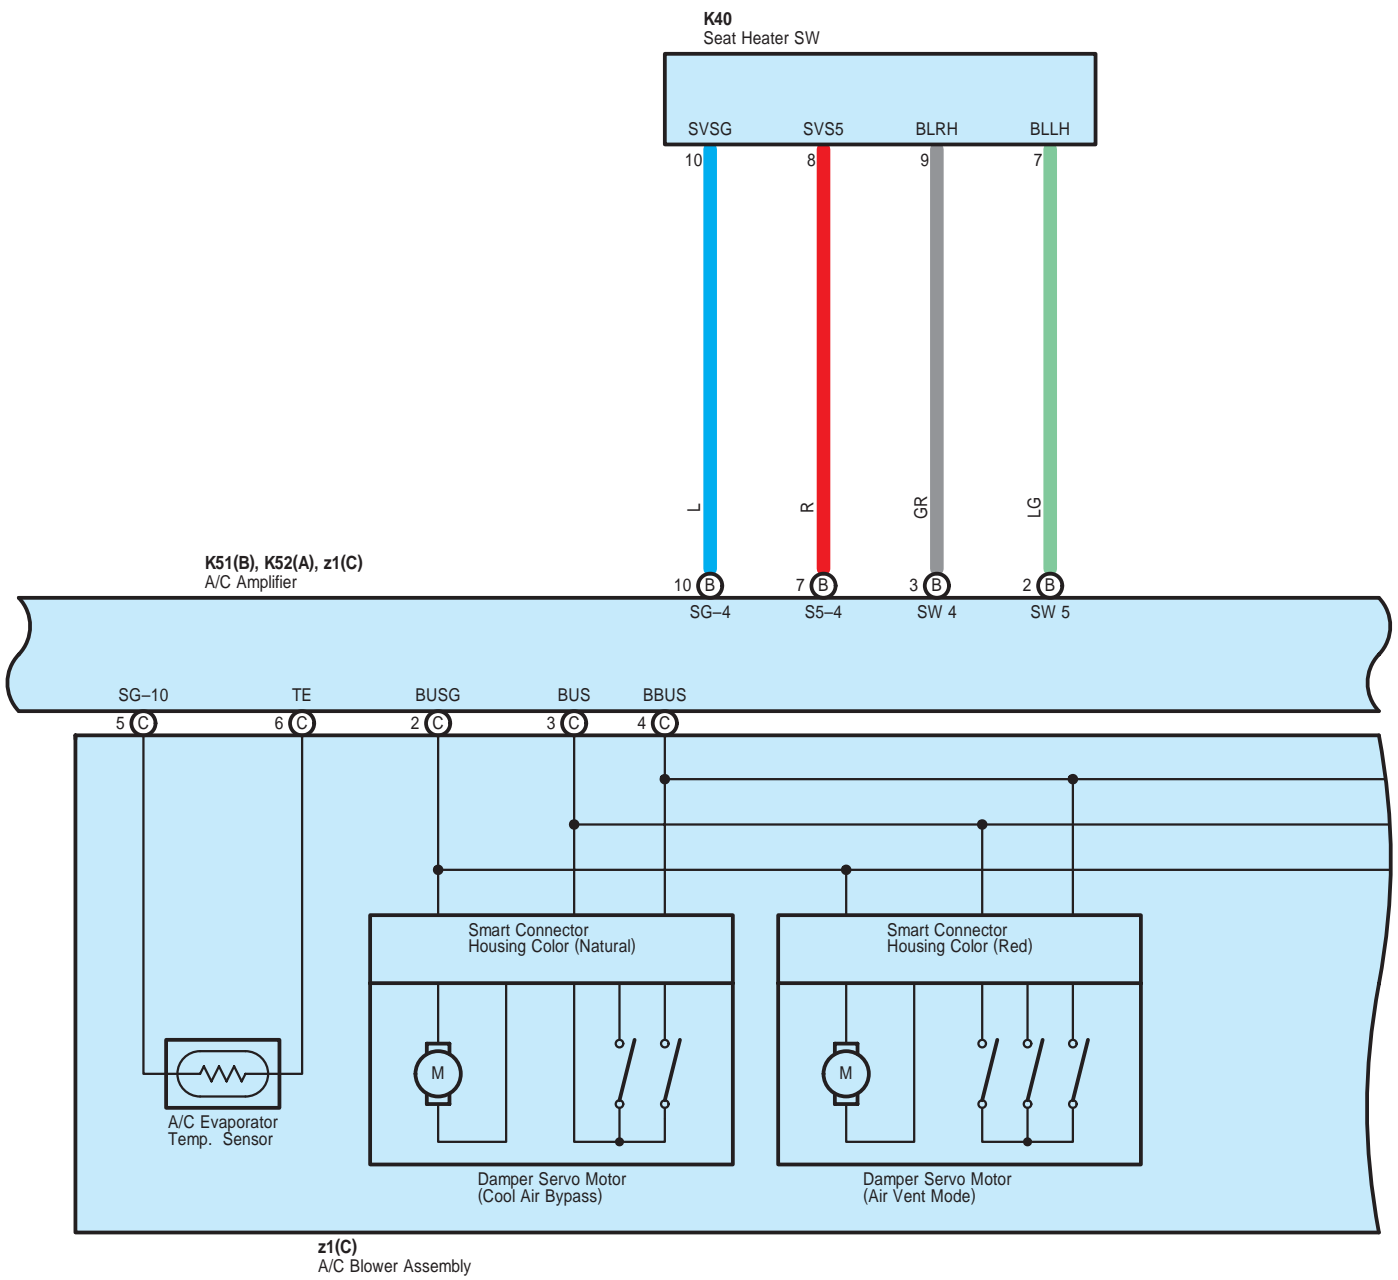

Air Conditioning

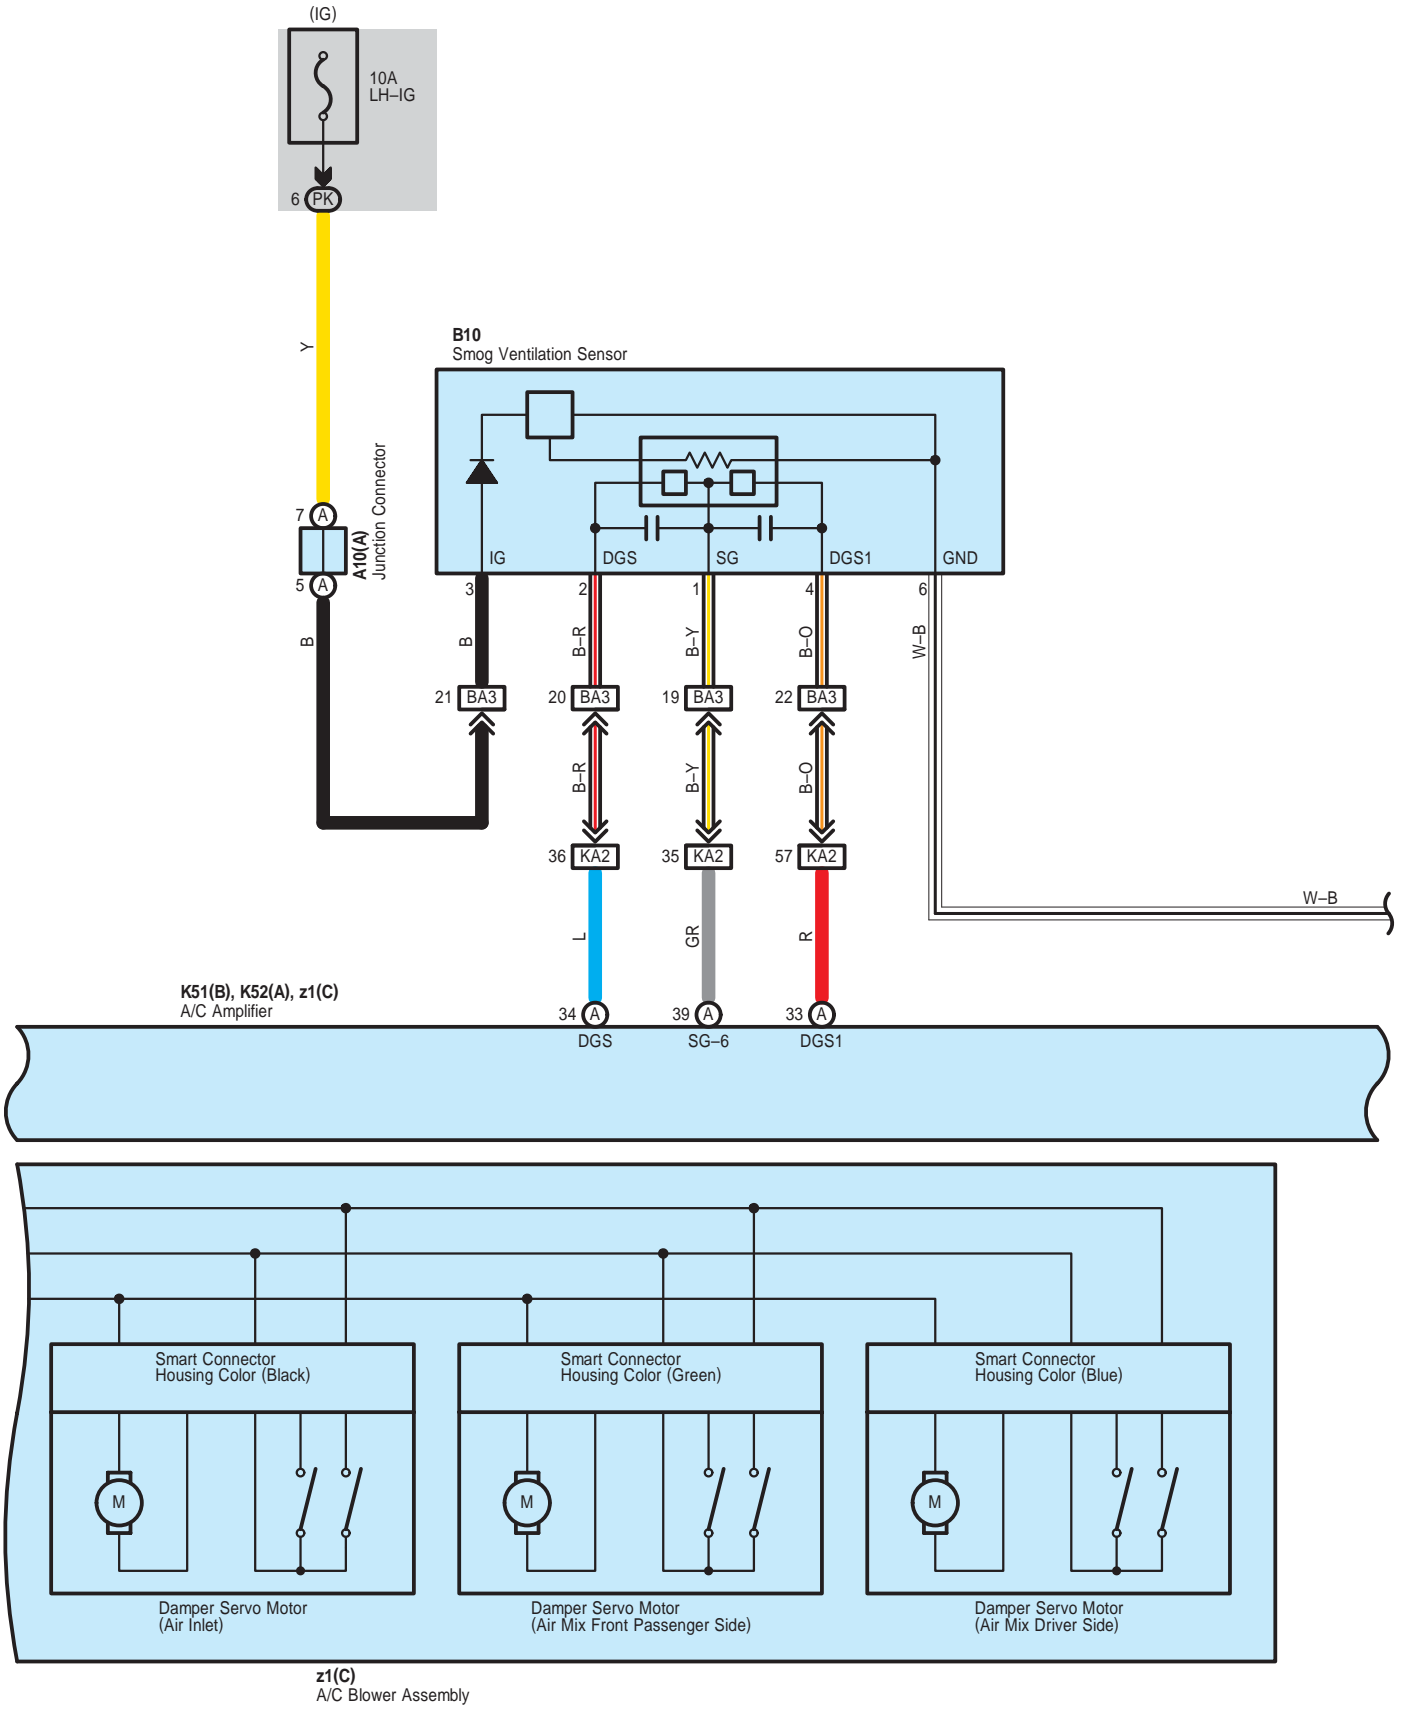

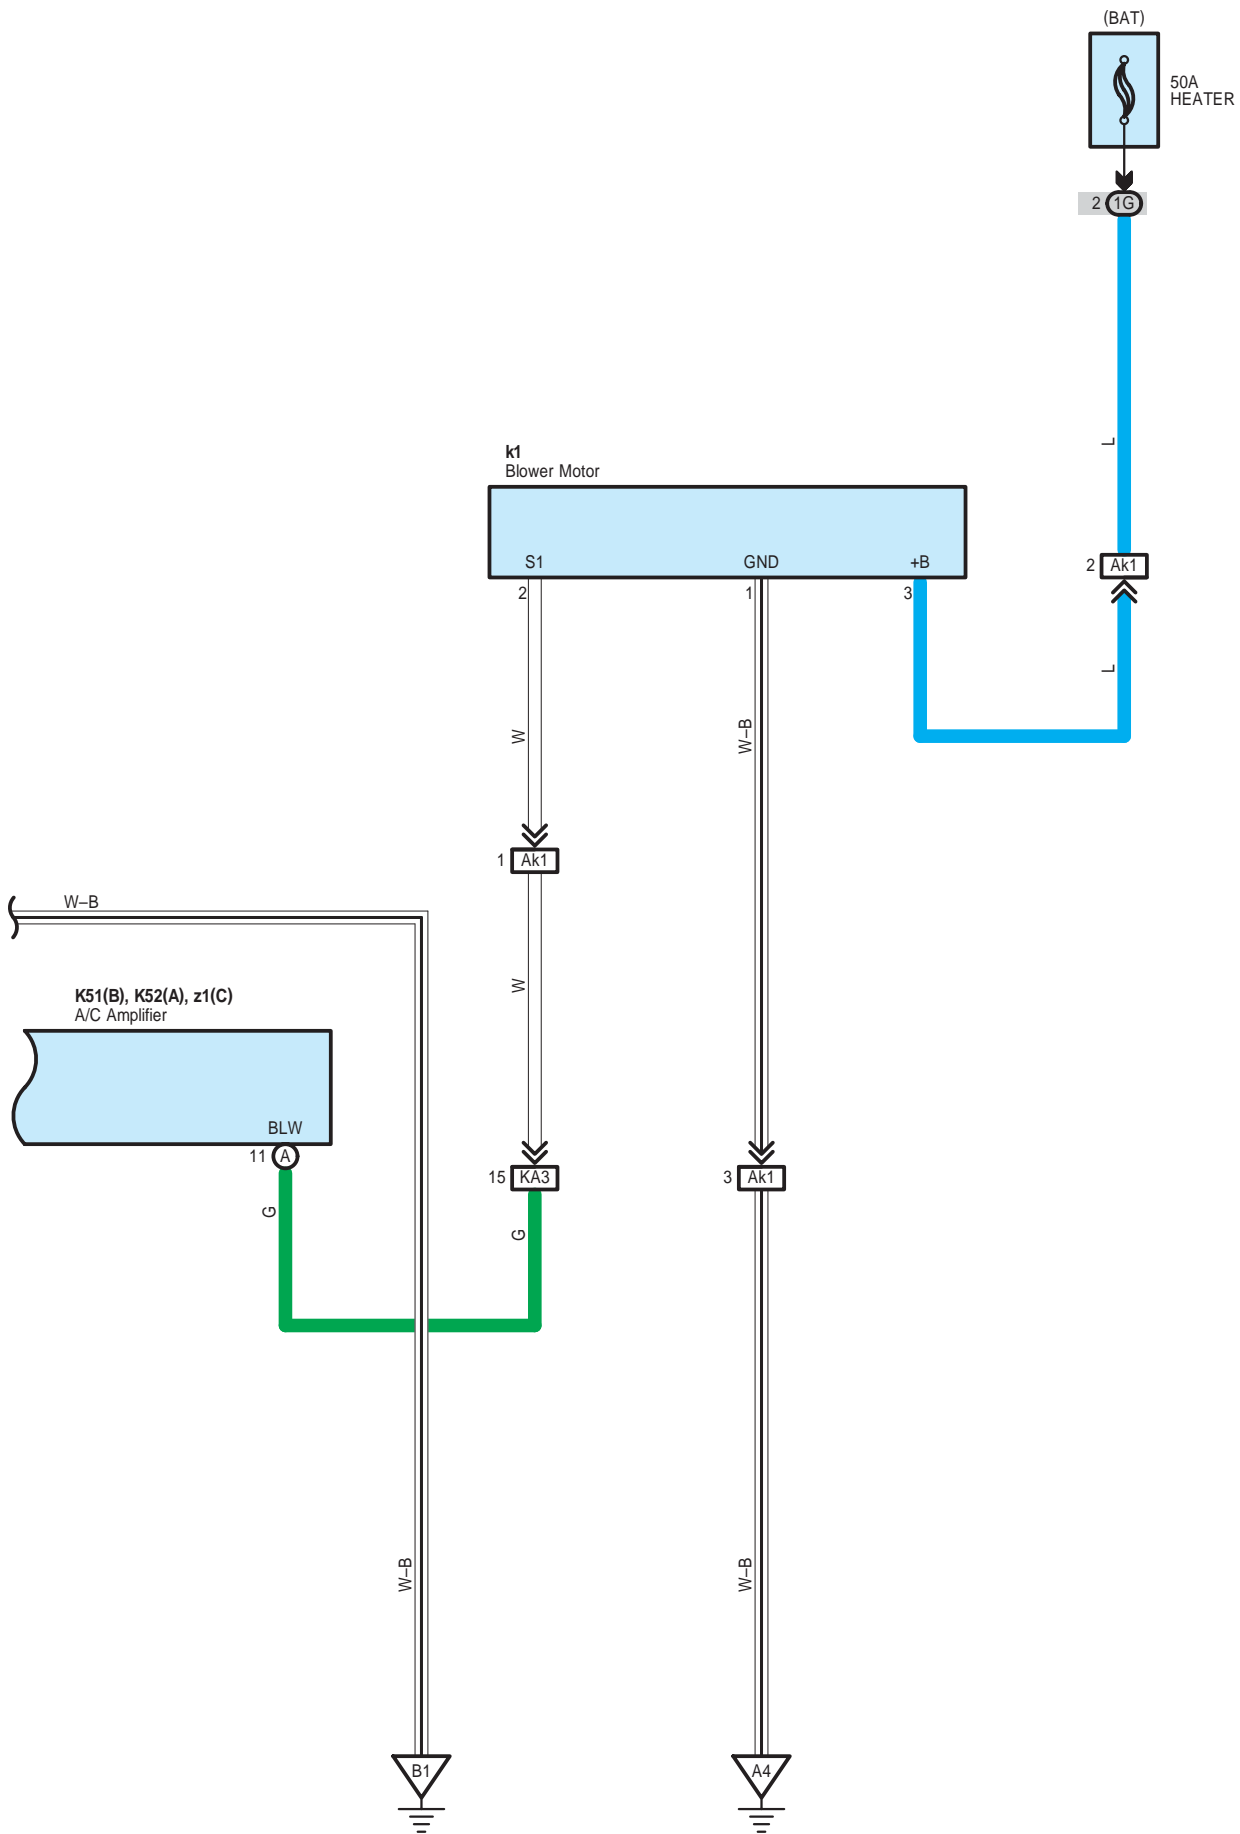

Air Conditioning

: Parts Location

Code		See Page	Code		See Page	Code		See Page
A8	A	80	E83	B	81	K66	86	
A10	A	80	E84	B	81	K83	A 78, 86	
A11	B	80	E85	A	81	K84	B 78, 86	
A32		84	K12		85	K87	E 78, 86	
A50		80	K31		85	K95	86	
A53	A	80	K33		85	K96	86	
A54	A	80	K40		86	L1	87	
A56		80	K44		86	U25	90	
A63		84	K45		86	V37	A 91	
B4		82	K47		86	V39	91	
B5		82	K51	B	86	k1	87	
B10		82	K52	A	86	w8	B 83	
E10	B	81	K53	A	86	w9	83	
E71		81	K56	C	86	z1	C 87	

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room R/B No.1 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	27	Engine Room Main Wire and Engine Room J/B No.1 (Engine Compartment left)
4C	70	Instrument Panel Wire and Center J/B RH (Right Side of the Instrument Panel Reinforcement)
4D		
4E		
4F		
4I		
4J		
4K	66	Instrument Panel Wire and Center J/B LH (Right Side of the Instrument Panel Reinforcement)
5D		
5G		
5L	55	Instrument Panel Wire and Cowl Side J/B RH (Behind the Glove Box)
DA		
DD	49	Instrument Panel Wire and Cowl Side J/B LH (Lower Finish Panel)
PA		
PD	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PJ	50	Floor No.2 Wire and Cowl Side J/B LH (Lower Finish Panel)
PK	50	Engine Room Main Wire and Cowl Side J/B LH (Lower Finish Panel)
PL		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AE1	96	Engine Room Main Wire and Engine Wire (Inside of the ECU Box)
AV3	97	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)
Ak1	97	Engine Room Main Wire and Wiring A/C No.2 Harness Sub Assembly (Under the Glove Box)
BA3	96	Engine Room No.2 Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.2)
KA2	97	Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel)
KA3	97	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)
KL1	97	Instrument Panel Wire and Instrument Panel No.2 Wire (Center of the Instrument Panel)
KU2	97	Instrument Panel Wire and Floor No.1 Wire (Right Kick Panel)
KV1	97	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
UV1	98	Floor No.1 Wire and Floor No.2 Wire (Center of the Rear Floor Partition Panel)



: Ground Points

Code	See Page	Ground Points Location
A1	96	Left Side of the Dash Panel
A4	96	Front Right Fender Apron
B1	96	Near the Headlamp RH
E1	96	Rear Side of the Left Cylinder Head
K1	97	Left Kick Panel
K2	97	Left Side of the Shift Lever
K4	97	Right Kick Panel
U2	98	Right Side of the Rear Floor Partition Panel