

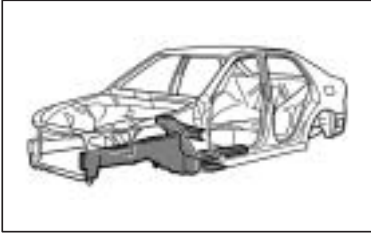
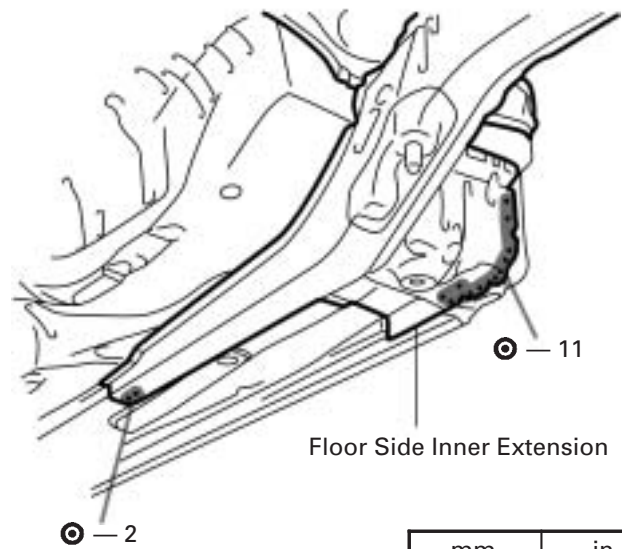
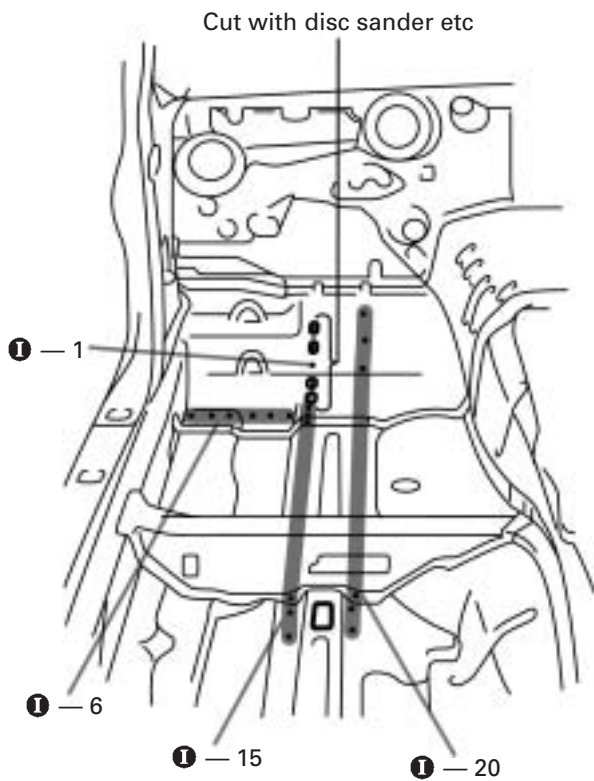


# FRONT SIDE MEMBER (ASSY)

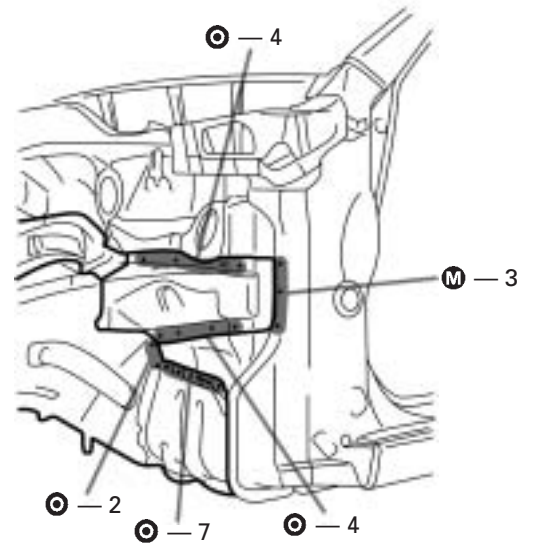





## REMOVAL (With the front crossmember and front fender apron removed.)

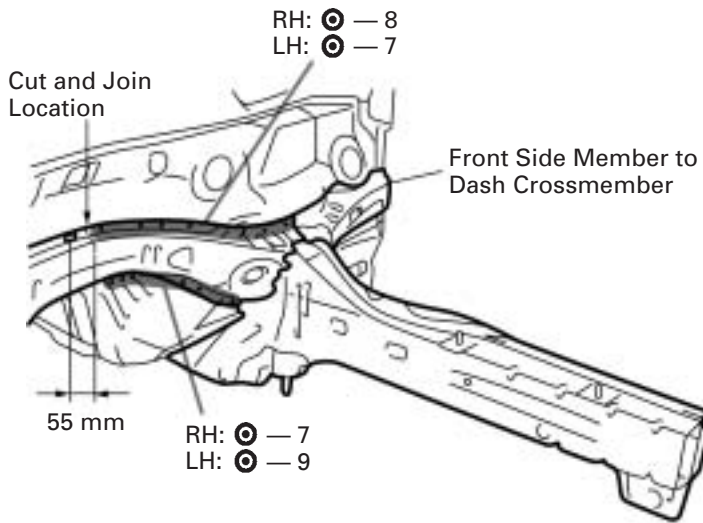

mm	in.
55	2.17




1. Cut the front side member to dash crossmember at the location shown above, and replace it at the same time as front side member.
2. Leave the floor side inner extension to the vehicle.

## INSTALLATION

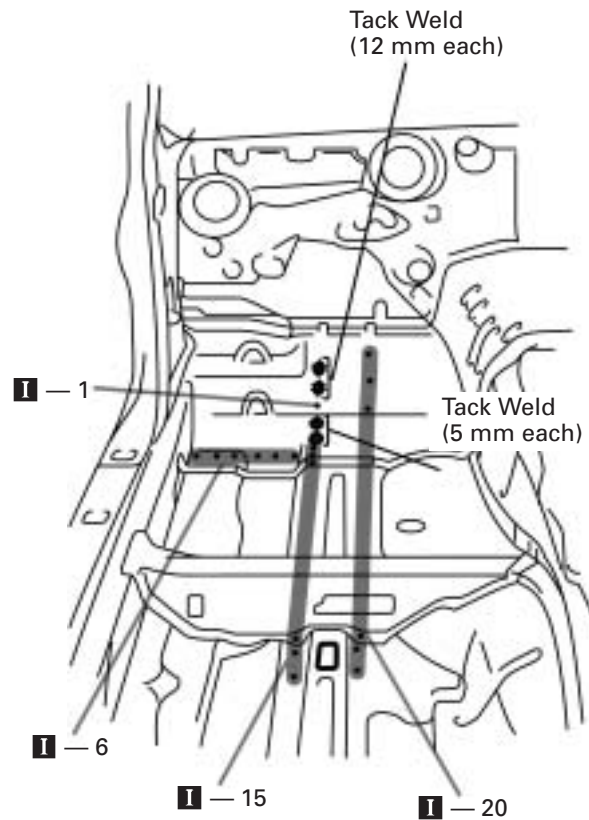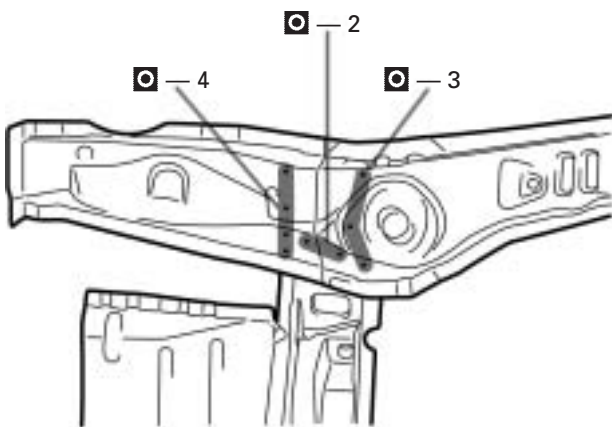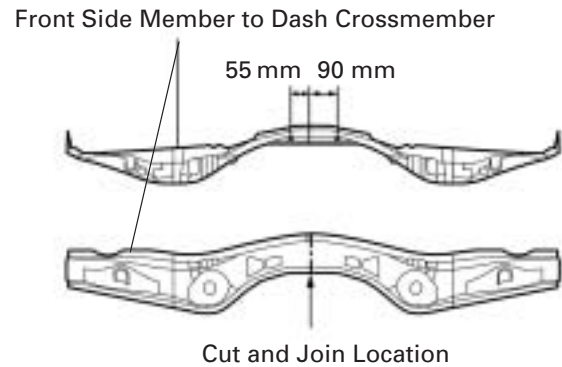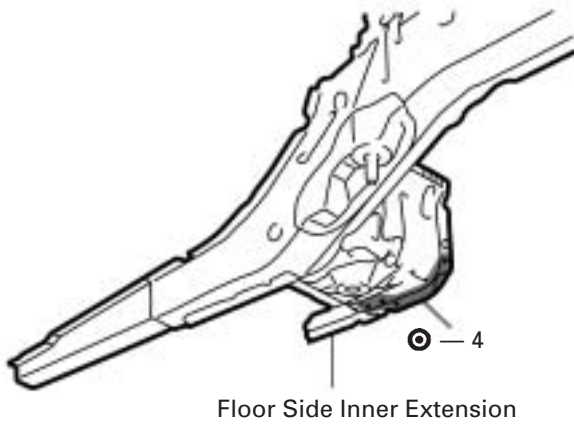

mm	in.
5	0.20
12	0.47
55	2.17
90	3.54

1. Cut the front side member to dash crossmember at the location shown above, and weld the front side member with standard points.
2. Remove the floor side inner extension from the new parts of front side member.

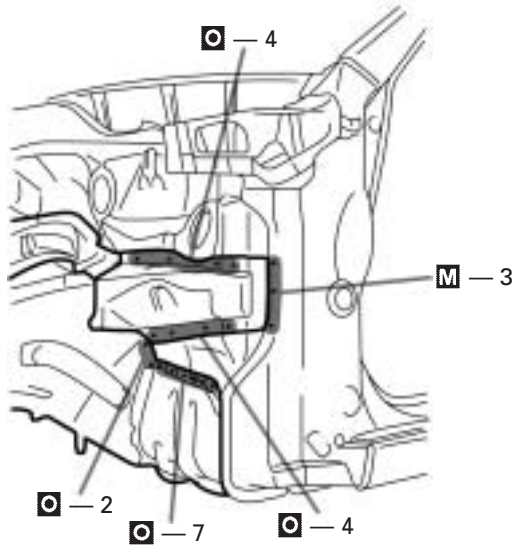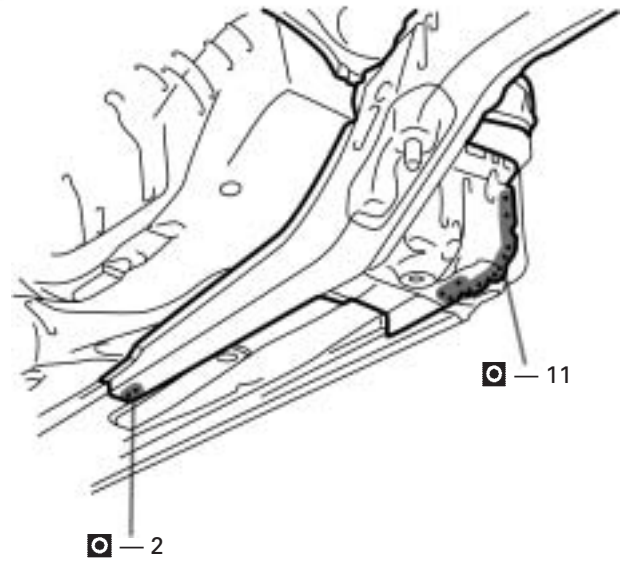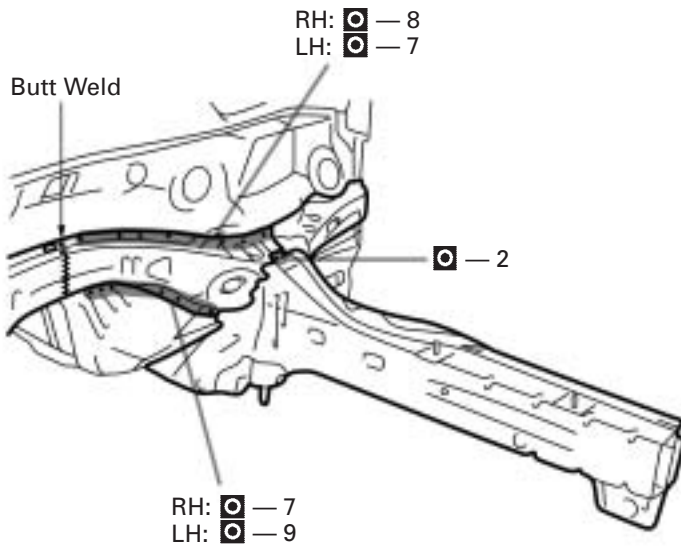

- Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

*HINT: Make sure each measurement is correct, as this parts affects the front wheel alignment.*