 

REAR FLOOR No.1 CROSSMEMBER (ASSY) REAR FLOOR No.2 CROSSMEMBER (ASSY)


REMOVAL (With the rear floor pan removed.)



⊙ – 4


⊙ – 2

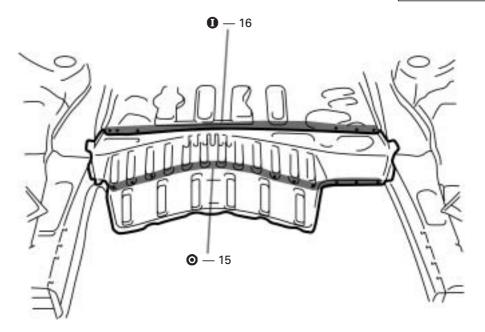

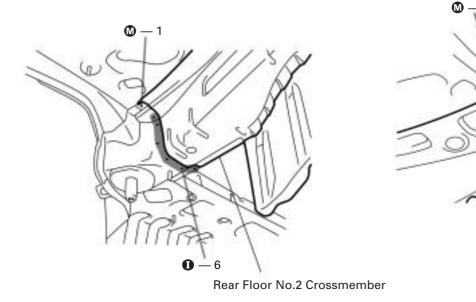

1. After removing the rear floor No.1 crossmember, remove the rear floor No.2 crossmember.

INSTALLATION

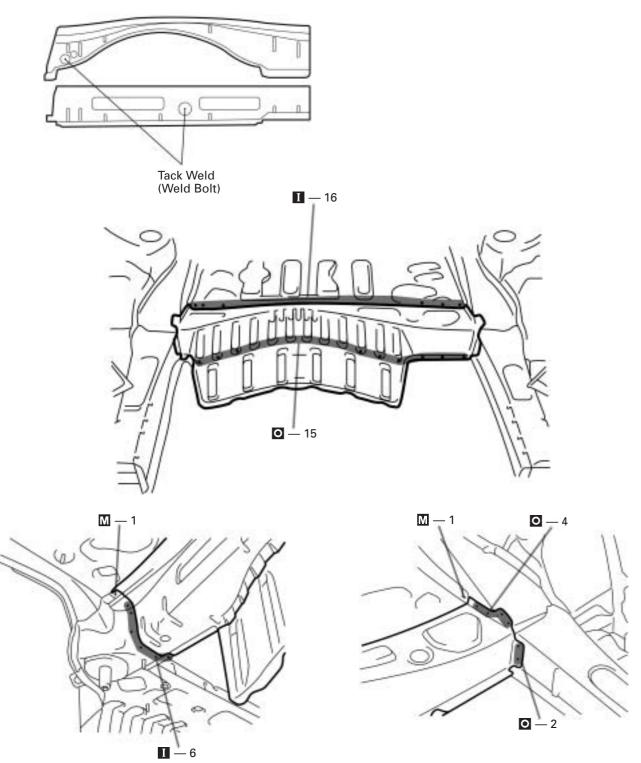

- 1. Temporarily install the new parts and measure each part in accordance with the body dimension diagram.
- 2. Attach the weld bolt to the center of the bearing surface.