


# E ELECTRICAL WIRING ROUTING

## Position of Parts in Engine Compartment

[LHD : 2JZ-GE]

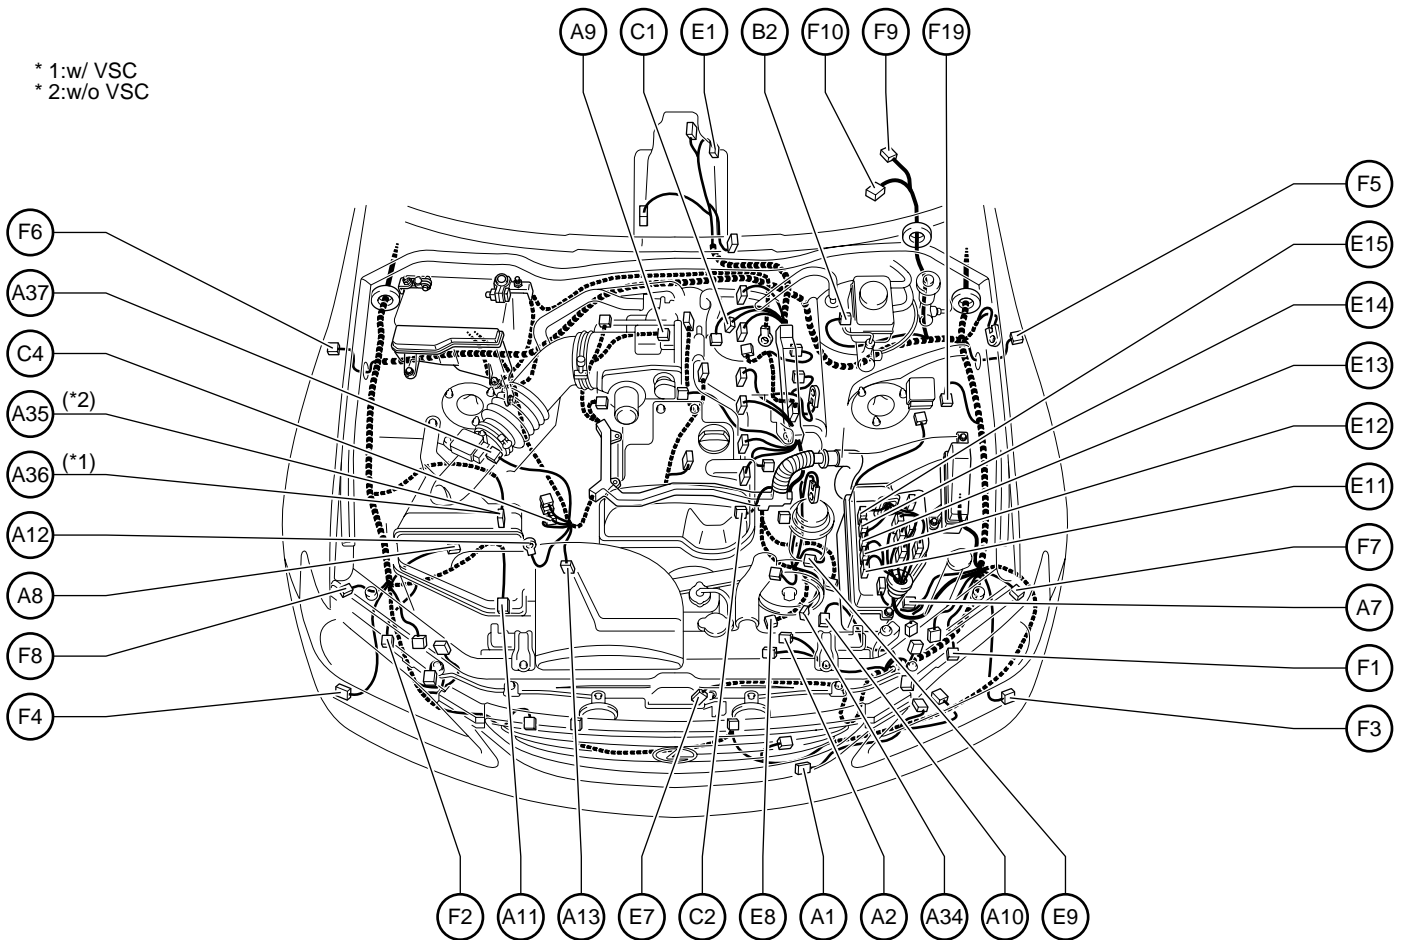

\* 1:w/ VSC  
\* 2:w/o VSC

- |  |                                     |
|--|-------------------------------------|
| A 1 A/C Ambient Temp. Sensor             | E 1 ECT Solenoid                    |
| A 2 A/C Condenser Fan Motor              | E 7 Engine Hood Courtesy SW         |
| A 7 ABS Speed Sensor Front LH            | E 8 Engine Oil Level Sensor         |
| A 8 ABS Speed Sensor Front RH            | E 9 Engine Oil Pressure SW          |
| A 9 Accel Position Sensor                | E 11 Engine and ECT ECU             |
| A 10 Airbag Sensor Front LH              | E 12 Engine and ECT ECU             |
| A 11 Airbag Sensor Front RH              | E 13 Engine and ECT ECU             |
| A 12 Alternator                          | E 14 Engine and ECT ECU             |
| A 13 Alternator                          | E 15 Engine and ECT ECU             |
| A 34 A/C Magnetic Clutch and Lock Sensor | F 1 Front Clearance Light LH        |
| A 35 ABS & BA & TRC Actuator             | F 2 Front Clearance Light RH        |
| A 36 ABS & BA & TRC & VSC Actuator       | F 3 Front Fog Light LH              |
| A 37 Air Flow Meter                      | F 4 Front Fog Light RH              |
| B 2 Brake Fluid Level Warning SW         | F 5 Front Side Turn Signal Light LH |
| C 1 Camshaft Position Sensor             | F 6 Front Side Turn Signal Light RH |
| C 2 Camshaft Timing Oil Control Valve    | F 7 Front Turn Signal Light LH      |
| C 4 Crankshaft Position Sensor           | F 8 Front Turn Signal Light RH      |
|  | F 9 Front Window Deicer             |
|  | F 10 Front Wiper Motor              |
|  | F 19 Fuel Pump Resistor             |