


# E ELECTRICAL WIRING ROUTING

## Position of Parts in Body

[LHD : W/G]

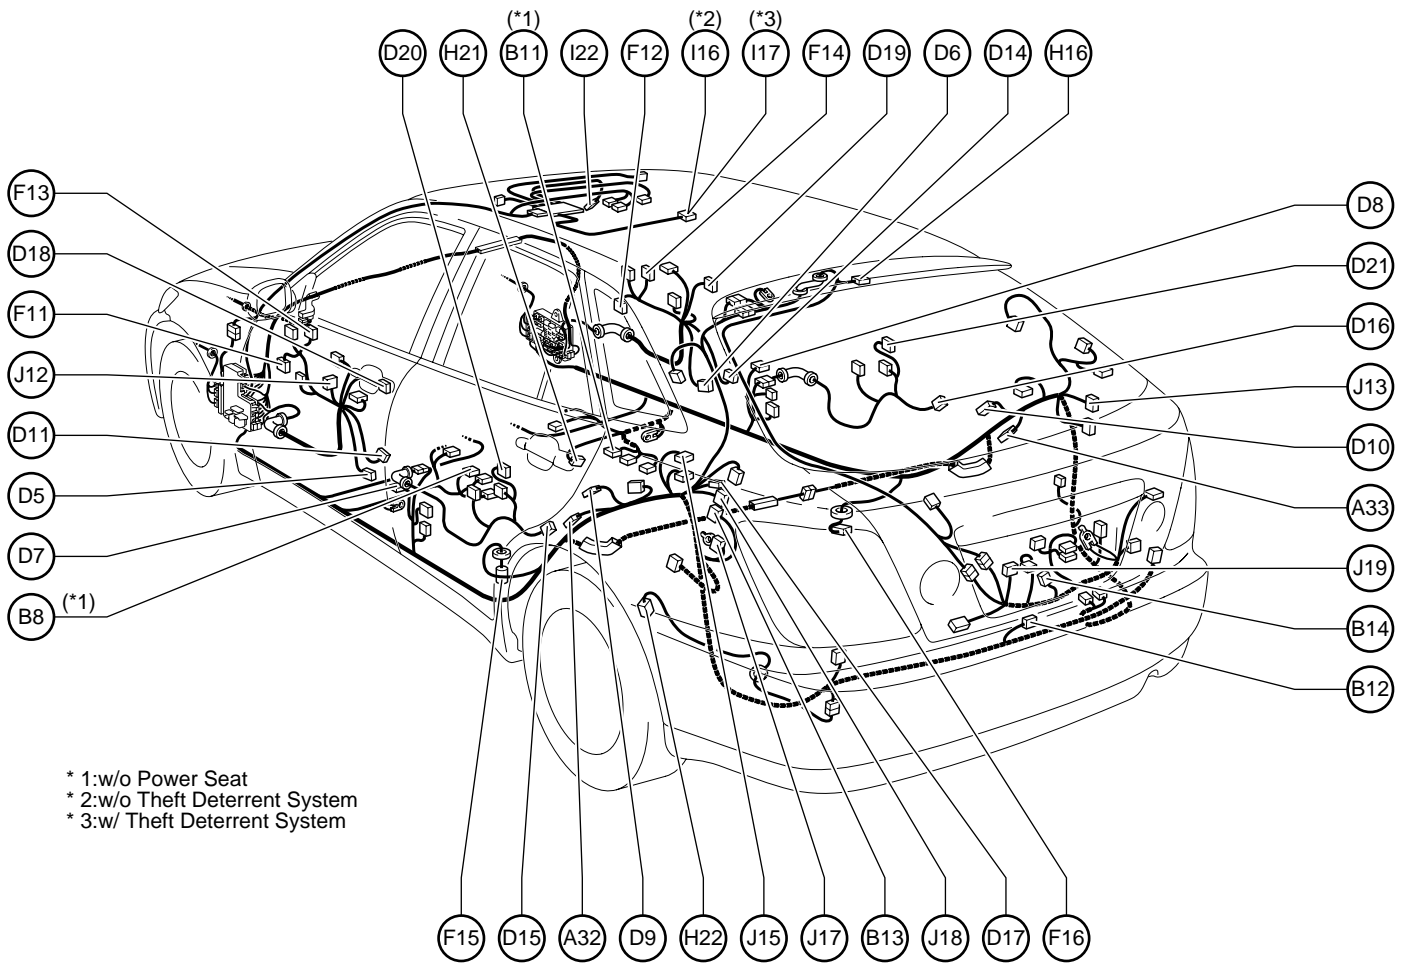

\* 1:w/o Power Seat  
 \* 2:w/o Theft Deterrent System  
 \* 3:w/ Theft Deterrent System

- |  |  |
|--|--|
| A 32 ABS Speed Sensor Rear LH  | D 20 Door Lock Detection SW Rear LH<br>Door Lock Motor Rear LH<br>Double Lock Motor Rear LH<br>Double Lock Position SW Rear LH |
| A 33 ABS Speed Sensor Rear RH  | D 21 Door Lock Detection SW Rear RH<br>Door Lock Motor Rear RH<br>Double Lock Motor Rear RH<br>Double Lock Position SW Rear RH |
| B 8 Buckle SW LH   | F 11 Front Door Speaker LH   |
| B 11 Buckle SW RH and<br>Seat Belt Warning Occupant Detection Sensor   | F 12 Front Door Speaker RH   |
| B 12 Back Door Courtesy SW and Opener Motor  | F 13 Front Door Tweeter Speaker LH   |
| B 13 Back Door Opener Relay  | F 14 Front Door Tweeter Speaker RH   |
| B 14 Back Door Opener SW   | F 15 Fuel Pump<br>Fuel Sender  |
| D 5 Door Courtesy Light Front LH   | F 16 Fuel Sender (Sub)   |
| D 6 Door Courtesy Light Front RH   | H 16 High Mounted Stop Light   |
| D 7 Door Courtesy SW Front LH  | H 21 Heated Oxygen Sensor (Bank 2 Sensor 2)  |
| D 8 Door Courtesy SW Front RH  | H 22 Height Control Sensor Rear LH   |
| D 9 Door Courtesy SW Rear LH   | I 16 Interior Light  |
| D 10 Door Courtesy SW Rear RH  | I 17 Interior Light<br>Radar Sensor  |
| D 11 Door Key Lock and Unlock SW Front LH<br>Door Lock Detection SW Front LH<br>Door Lock Motor Front LH                           | I 22 Inner Mirror  |
| D 14 Door Lock Detection SW Front RH<br>Door Lock Motor Front RH   | J 12 Junction Connector  |
| D 15 Door Lock Detection SW Rear LH<br>Door Lock Motor Rear LH   | J 13 Junction Connector  |
| D 16 Door Lock Detection SW Rear RH<br>Door Lock Motor Rear RH   | J 15 Junction Connector  |
| D 17 Diode (Luggage Compartment)   | J 17 Junction Connector  |
| D 18 Door Lock Detection SW Front LH<br>Door Lock Motor Front LH<br>Double Lock Motor Front LH<br>Double Lock Position SW Front LH | J 18 Junction Connector  |
| D 19 Door Lock Detection SW Front RH<br>Door Lock Motor Front RH<br>Double Lock Motor Front RH<br>Double Lock Position SW Front RH | J 19 Junction Connector  |