
Position of Parts in Seat

[LHD]

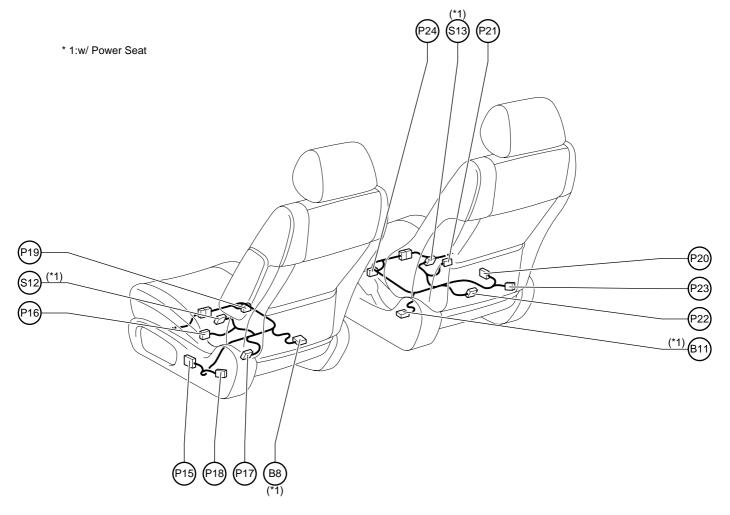

- B 8 Buckle SW LH
- B 11 Buckle SW RH and
 - Seat Belt Warning Occupant Detection Sensor
- P15 Power Seat Control SW (Driver's Seat)
- P16 Power Seat Motor (Driver's Seat Front Vertical Control)
- P17 Power Seat Motor (Driver's Seat Rear Vertical Control)
- P18 Power Seat Motor (Driver's Seat Reclining Control)
- P19 Power Seat Motor (Driver's Seat Slide Control)
- P20 Power Seat Control SW (Front Passenger's Seat)
- P21 Power Seat Motor
 - (Front Passenger's Seat Front Vertical Control)
- P22 Power Seat Motor
 - (Front Passenger's Seat Rear Vertical Control)
- P23 Power Seat Motor
 - (Front Passenger's Seat Reclining Control)
- P24 Power Seat Motor
 - (Front Passenger's Seat Slide Control)

- S12 Seat Heater (Driver's Seat)
- S13 Seat Heater (Passenger's Seat)