


## Position of Parts in Seat

**[RHD]**

\* 1:w/ Power Seat

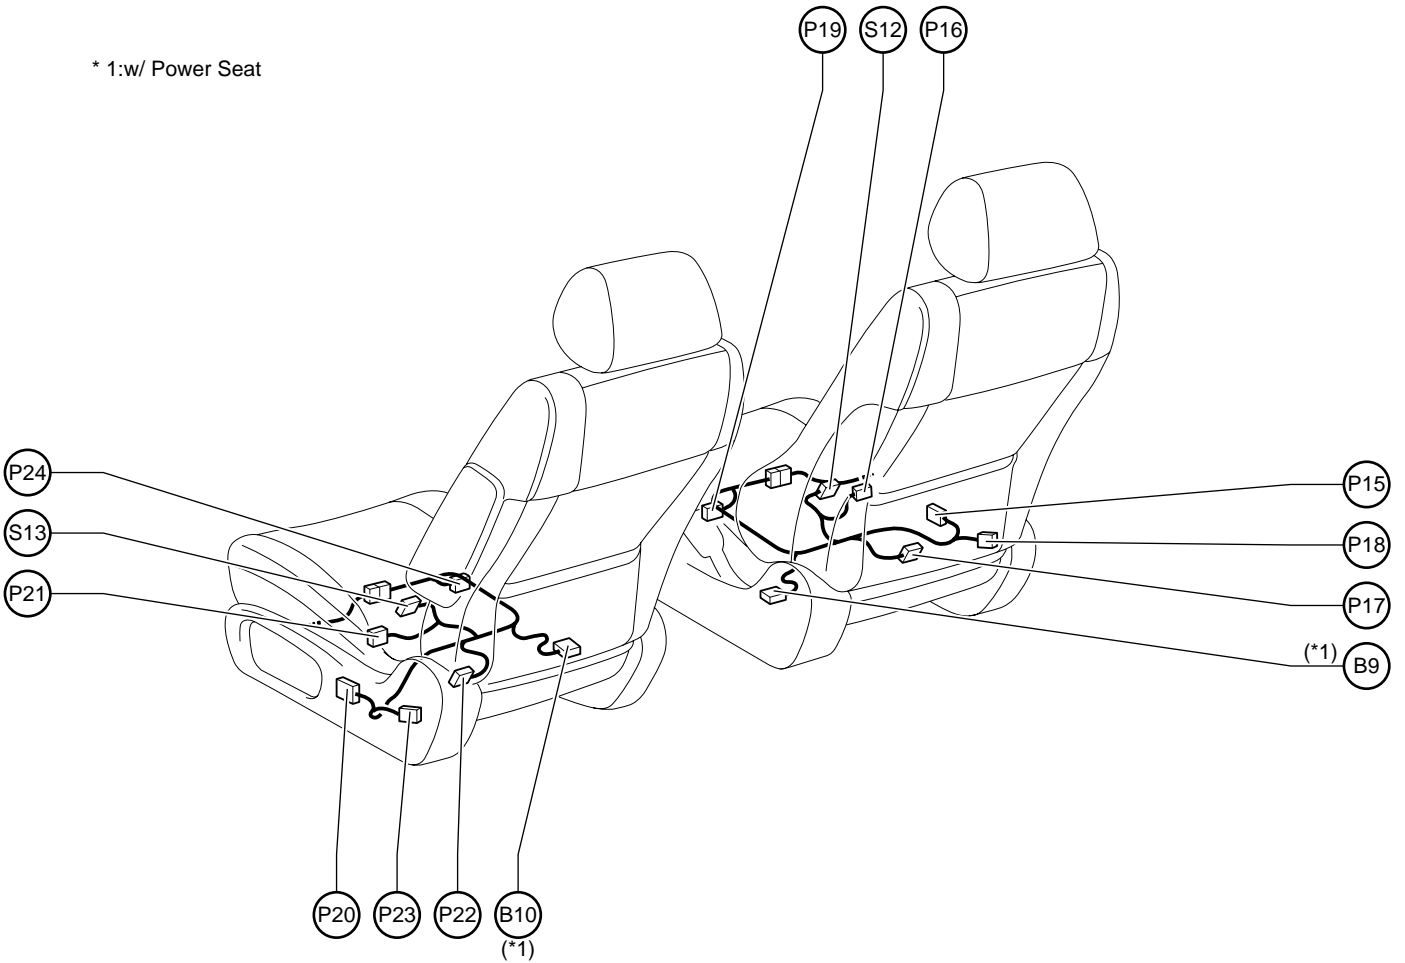

B 9 Buckle SW RH  
 B10 Buckle SW LH and  
 Seat Belt Warning Occupant Detection Sensor

S12 Seat Heater (Driver's Seat)  
 S13 Seat Heater (Passenger's Seat)

P15 Power Seat Control SW (Driver's Seat)  
 P16 Power Seat Motor (Driver's Seat Front Vertical Control)  
 P17 Power Seat Motor (Driver's Seat Rear Vertical Control)  
 P18 Power Seat Motor (Driver's Seat Reclining Control)  
 P19 Power Seat Motor (Driver's Seat Slide Control)  
 P20 Power Seat Control SW (Front Passenger's Seat)  
 P21 Power Seat Motor  
 (Front Passenger's Seat Front Vertical Control)  
 P22 Power Seat Motor  
 (Front Passenger's Seat Rear Vertical Control)  
 P23 Power Seat Motor  
 (Front Passenger's Seat Reclining Control)  
 P24 Power Seat Motor  
 (Front Passenger's Seat Slide Control)