


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : W/G]

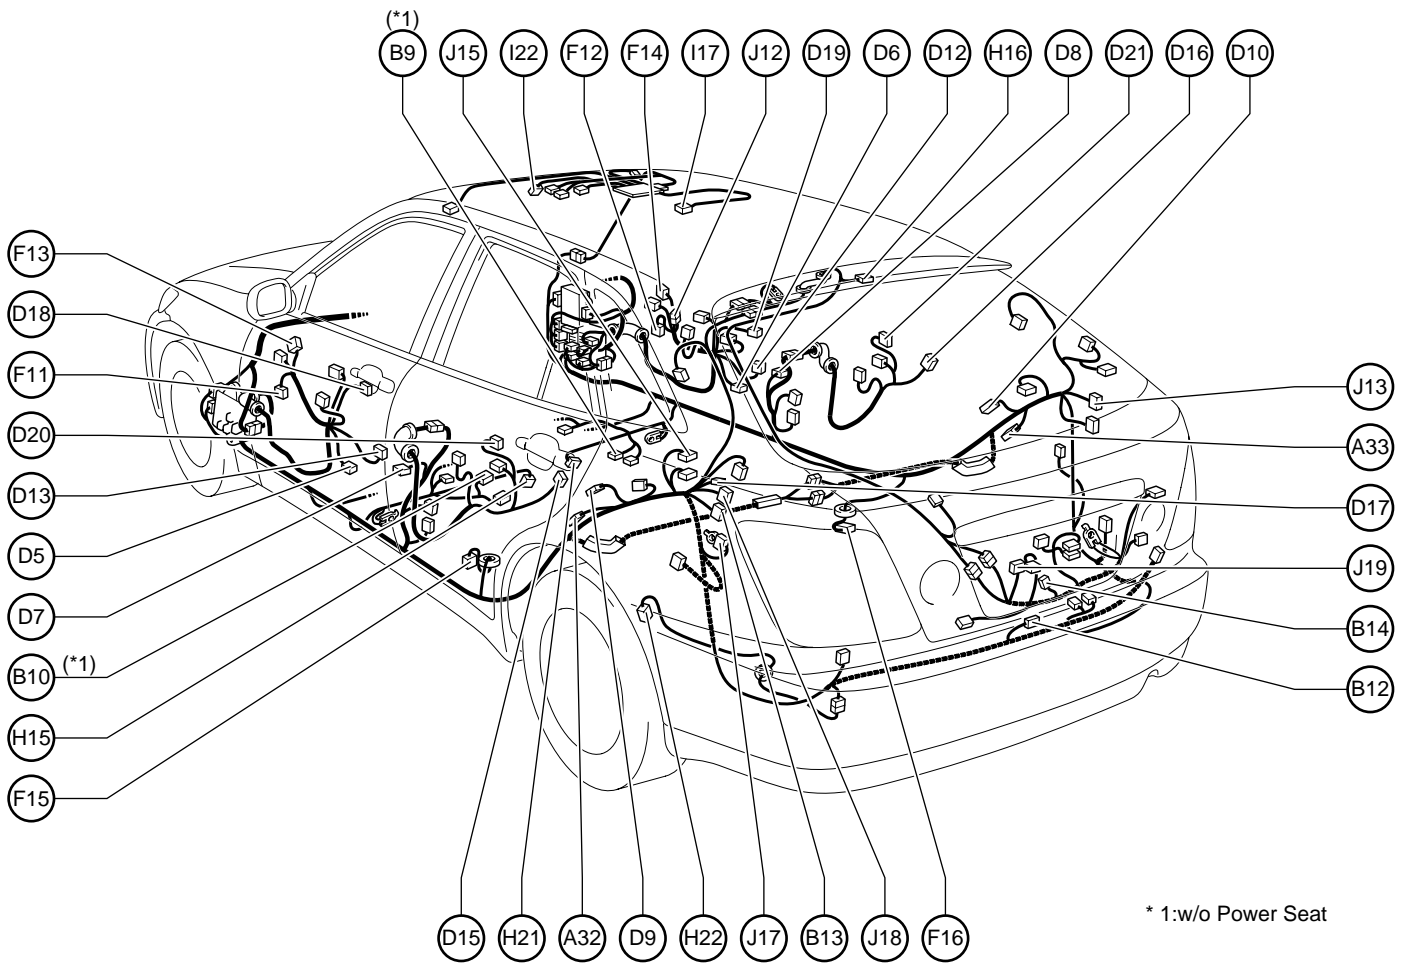

* 1:w/o Power Seat

A 32 ABS Speed Sensor Rear LH
A 33 ABS Speed Sensor Rear RH

B 9 Buckle SW RH
B 10 Buckle SW LH and
Seat Belt Warning Occupant Detection Sensor
B 12 Back Door Courtesy SW and Opener Motor
B 13 Back Door Opener Relay
B 14 Back Door Opener SW

D 5 Door Courtesy Light Front LH
D 6 Door Courtesy Light Front RH
D 7 Door Courtesy SW Front LH
D 8 Door Courtesy SW Front RH
D 9 Door Courtesy SW Rear LH
D 10 Door Courtesy SW Rear RH
D 12 Door Key Lock and Unlock SW Front RH
Door Lock Detection SW Front RH
Door Lock Motor Front RH
D 13 Door Lock Detection SW Front LH
Door Lock Motor Front LH
D 15 Door Lock Detection SW Rear LH
Door Lock Motor Rear LH
D 16 Door Lock Detection SW Rear RH
Door Lock Motor Rear RH
D 17 Diode (Luggage Compartment)
D 18 Door Lock Detection SW Front LH
Door Lock Motor Front LH
Double Lock Motor Front LH
Double Lock Position SW Front LH
D 19 Door Lock Detection SW Front RH
Door Lock Motor Front RH
Double Lock Motor Front RH
Double Lock Position SW Front RH

D 20 Door Lock Detection SW Rear LH
Door Lock Motor Rear LH
Double Lock Motor Rear LH
Double Lock Position SW Rear LH
D 21 Door Lock Detection SW Rear RH
Door Lock Motor Rear RH
Double Lock Motor Rear RH
Double Lock Position SW Rear RH

F 11 Front Door Speaker LH
F 12 Front Door Speaker RH
F 13 Front Door Tweeter Speaker LH
F 14 Front Door Tweeter Speaker RH
F 15 Fuel Pump
Fuel Sender
F 16 Fuel Sender (Sub)

H 15 Heated Oxygen Sensor (Bank 1 Sensor 2)
H 16 High Mounted Stop Light
H 21 Heated Oxygen Sensor (Bank 2 Sensor 2)
H 22 Height Control Sensor Rear LH

I 17 Interior Light
Radar Sensor
I 22 Inner Mirror

J 12 Junction Connector
J 13 Junction Connector
J 15 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector