



REMOVAL

REMOVE DRIVE BELT

- (a) Loosen the idle pulley lock nut.
- (b) Loosen the drive belt tension by adjusting bolt and remove the drive belt.