



INSTALLATION

INSTALL DRIVE BELT

- (a) Tighten the idle pulley lock nut temporarily.
Torque: 2.5 N·m (25 kgf·cm, 22 in·lbf)
- (b) Install the drive belt.
- (c) Using an adjusting bolt, adjust drive belt tension.
Drive belt tension:
New belt: 520 – 755 N (53 – 77 kgf)
Used belt: 294 – 392 N (30 – 40 kgf)
- (d) Tighten the idle pulley lock nut at regular torque.
Torque: 44 N·m (440 kgf·cm, 32 ft·lbf)