


ROOM TEMPERATURE SENSOR INSPECTION

AC20Q-02


1. REMOVE LOWER FINISH PANEL

- (a) Remove the 3 screws.
- (b) Release the 3 claws and pull out the lower finish panel.

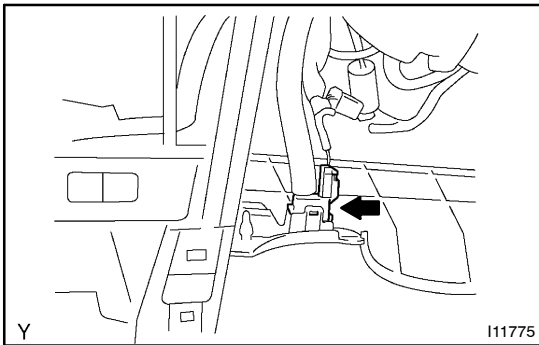

2. REMOVE ROOM TEMPERATURE SENSOR

- (a) Disconnect the connector and aspirator hose.
- (b) Release the 2 claws and pull out the sensor.

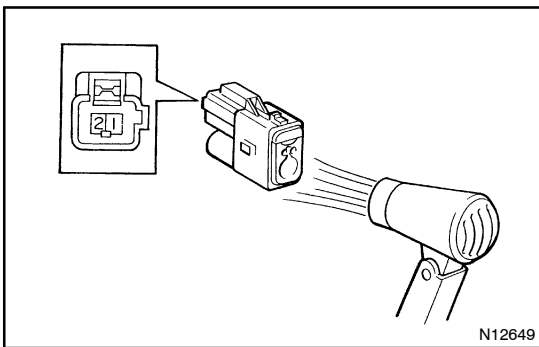

3. INSPECT ROOM TEMPERATURE SENSOR RESISTANCE


Measure resistance between terminals at each temperature as shown in the chart.

Temperature	Specified condition
25 °C (77 °F)	1.6 - 1.8 kΩ
50 °C (122 °F)	0.6 - 0.8 kΩ

If resistance is not as specified, replace the sensor.

4. INSTALL ROOM TEMPERATURE SENSOR

- (a) Install the sensor and fit the 2 claws.
- (b) Connect the aspirator hose and connector.

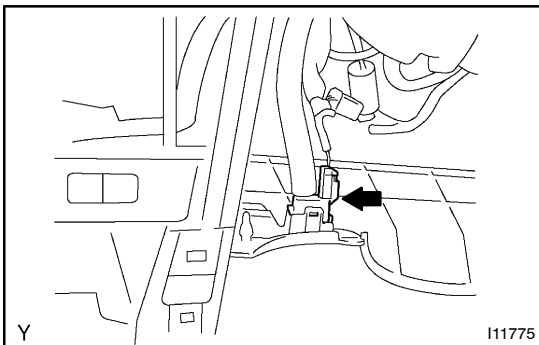

5. INSTALL LOWER FINISH PANEL

- (a) Install the lower finish panel and fit the 3 claws.
- (b) Install the 3 screws.