



HEATER MAIN RELAY INSPECTION

AC25Z-01


1. REMOVE FRONT DOOR SCUFF PLATE LH
(See page BO-96)
2. REMOVE COWL SIDE TRIM BOARD LH
(See page BO-96)

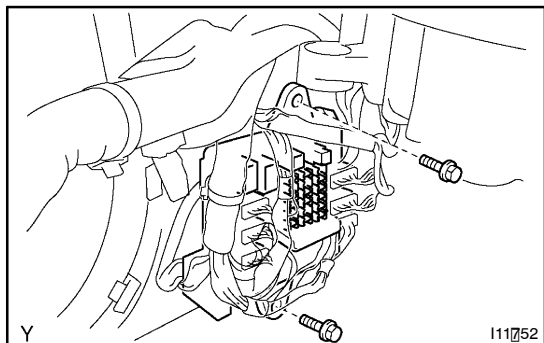

3. REMOVE HEATER MAIN RELAY
 - (a) Disconnect the connectors.
 - (b) Remove the 2 passenger side junction block set nuts.

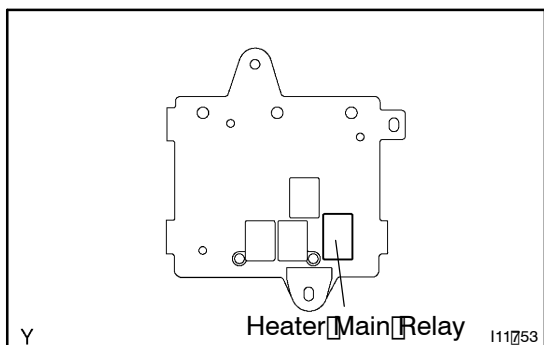

- (c) Remove the heater main relay from passenger side junction block.

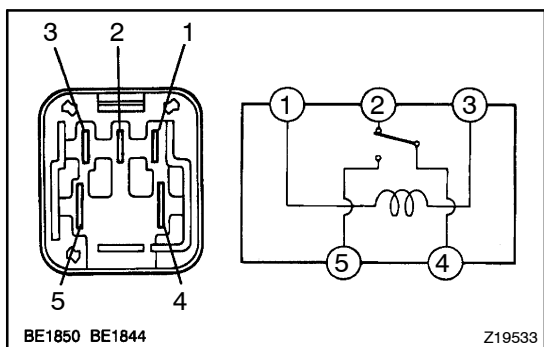

4. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 1 - 3	Continuity
Apply B+ between terminals 1 and 3.	4 - 5	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL HEATER MAIN RELAY

- (a) Install the heater main relay to passenger side junction block.
 - (b) Install the passenger side junction block set nuts.
 - (c) Connect the connectors.
6. INSTALL COWL SIDE TRIM BOARD LH
(See page BO-104)
7. INSTALL FRONT DOOR SCUFF PLATE LH
(See page BO-104)