



## COOLING FAN RELAY INSPECTION

AC260-01

1. REMOVE NO.2 COOLING FAN RELAY FROM RELAY BLOCK NO.3

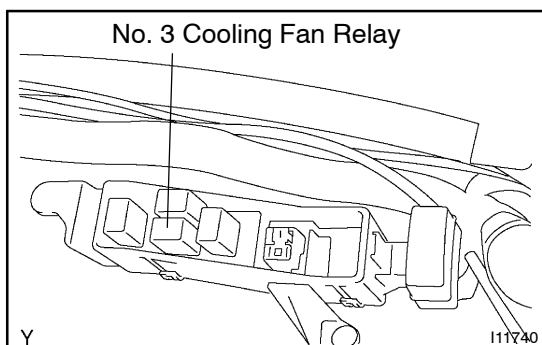

2. REMOVE NO.3 COOLING FAN RELAY FROM RELAY BLOCK NO.3

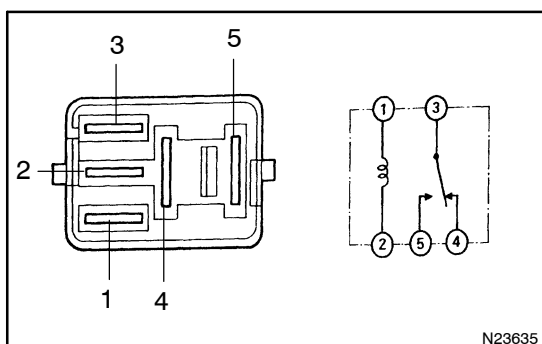

3. INSPECT NO.2 COOLING FAN RELAY  
(Marking: FAN NO.2) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 4	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

4. INSPECT NO.3 COOLING FAN RELAY  
(Marking: FAN NO.3) CONTINUITY

Check the relay in the same way as for "MAGNETIC CLUTCH RELAY".