



## REMOVAL

1. REMOVE CENTER CLUSTER FINISH PANEL  
(See page BO-96)
2. REMOVE LOWER CENTER CLUSTER FINISH PANEL  
(See page BO-96)

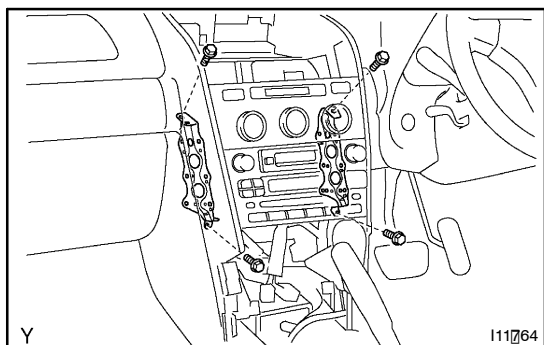

3. REMOVE A/C CONTROL ASSEMBLY
  - (a) Remove the 4 bolts and pull out the A/C control assembly with radio assembly, then disconnect the connectors.

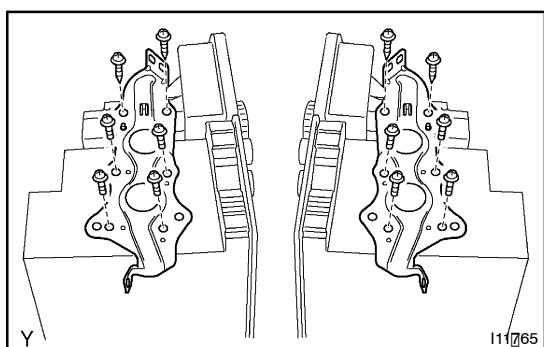

- (b) Remove the 12 screws and 2 brackets.
- (c) Separate the A/C control assembly and radio assembly.