


EXTENSION HOUSING OIL SEAL ON-VEHICLE REPAIR

ATQHE-01


1. REMOVE NO. 1 REAR FLOOR BOARD
2. REMOVE EXHAUST PIPE ASSEMBLY
(See page PR-4)
3. REMOVE PROPELLER SHAFT (See page PR-4)

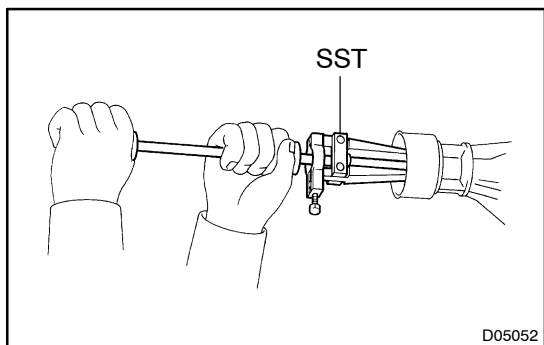

4. REMOVE REAR OIL SEAL

Using SST, remove the oil seal.

SST 09308-00010

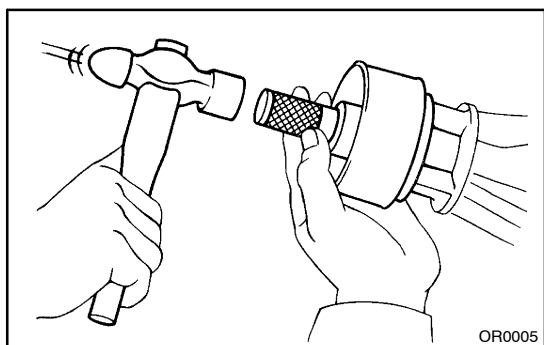

5. INSTALL NEW OIL SEAL

- (a) Using SST and a hammer, carefully drive a new oil seal in as far as it will go.

SST 09325-20010

NOTICE:

Clean the extension housing before removing the oil seal.

- (b) Coat the lip of a new oil seal with MP grease.

6. INSTALL PROPELLER SHAFT (See page PR-10)
7. INSTALL EXHAUST PIPE ASSEMBLY
(See page PR-10)
8. INSTALL NO. 1 REAR FLOOR BOARD
9. FILL ATF AND CHECK FLUID LEVEL
(See page DI-156)