



TRANSMISSION INPUT SPEED SENSOR

ATOHG-01

ON-VEHICLE REPAIR

1. **DISCONNECT TRANSMISSION INPUT SPEED SENSOR CONNECTOR**
2. **REMOVE TRANSMISSION INPUT SPEED SENSOR**
 - (a) Remove the bolt and transmission input speed sensor.
 - (b) Remove the O-ring from transmission input speed sensor.
3. **INSTALL TRANSMISSION INPUT SPEED SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the transmission input speed sensor.
 - (b) Install the transmission input speed sensor to the transmission case and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
4. **CONNECT TRANSMISSION INPUT SPEED SENSOR CONNECTOR**