



TRANSMISSION OUTPUT SPEED SENSOR

AT0HH-01

ON-VEHICLE REPAIR

1. **DISCONNECT TRANSMISSION OUTPUT SPEED SENSOR CONNECTOR**
2. **REMOVE TRANSMISSION OUTPUT SPEED SENSOR**
 - (a) Remove the bolt and transmission output speed sensor.
 - (b) Remove the O-ring from the transmission output speed sensor.
3. **INSTALL TRANSMISSION OUTPUT SPEED SENSOR**
 - (a) Coat a new O-ring with ATF and install it to the transmission output speed sensor.
 - (b) Install the transmission output speed sensor to the extension housing and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
4. **CONNECT TRANSMISSION OUTPUT SPEED SENSOR CONNECTOR**