


ATF TEMPERATURE SENSOR ON-VEHICLE REPAIR

AT0H-01

1. REMOVE DRAIN PLUG WITH GASKET AND DRAIN ATF
2. REMOVE OIL PAN AND OIL STRAINER
(See page AT-11)
3. REMOVE SOLENOID WIRING WITH ATF TEMPERATURE SENSOR (See page AT-11)

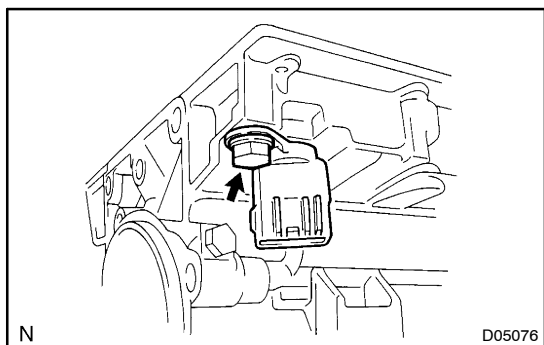

4. REMOVE SOLENOID CONNECTOR
Remove the bolt and pull out the solenoid connector.
5. INSTALL SOLENOID CONNECTOR
Pull in the solenoid connector with the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
6. INSTALL SOLENOID WIRING WITH ATF TEMPERATURE SENSOR (See page AT-11)
7. INSTALL OIL STRAINER AND OIL PAN
(See page AT-11)
8. INSTALL DRAIN PLUG WITH NEW GASKET
Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)
9. FILL ATF AND CHECK FLUID LEVEL
(See page DI-156)