

INSTALLATION

1. INSTALL FLOOR SHIFT LEVER ASSEMBLY


- (a) Connect the 2 connectors to the floor shift lever assembly.
- (b) Install the floor shift lever assembly with the 4 bolts.

Torque: 8.3 N·m (85 kgf·cm, 73 in·lbf)

2. INSTALL CONSOLE BOX ASSEMBLY

(See page [BO-104](#))

- (a) Install the console box assembly.
- (b) Install the parking brake hole cover assembly.
- (c) Install the box bottom mat.
- (d) Install the console upper panel.

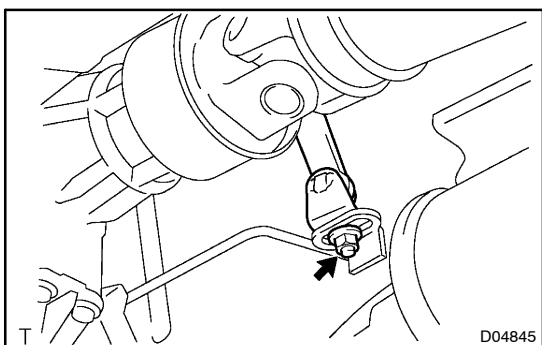

3. INSTALL NO. 1 FLOOR SHIFT GEAR SHIFTING ROD

- (a) Shift into the N range.
- (b) Connect the No. 1 floor shift gear shifting rod and connecting rod swivel with the nut.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

4. CHECK SHIFTING LEVER POSITION

(See page [DI-156](#))