



INSTALLATION

1. CHECK TORQUE CONVERTER INSTALLATION

Using calipers and a straight edge, measure the distance from the installation surface of the transmission housing to the installation surface of the torque converter.

Correct distance: More than 26.05 mm (1.0256 in.)

2. INSTALL TRANSMISSION

Installation is in the reverse order of removal (See page AT-29).

HINT:

After installation, check, inspect and adjust the following items.

- Shift lever position and neutral start switch (See page DI-156)
- Fluid level (See page DI-156)
- Conduct the road test of the vehicle