


# HEADLIGHT BEAM LEVEL CONTROL SYSTEM


## LOCATION

BE01R-05

Engine Room J/B  
● H-LP LVL Fuse

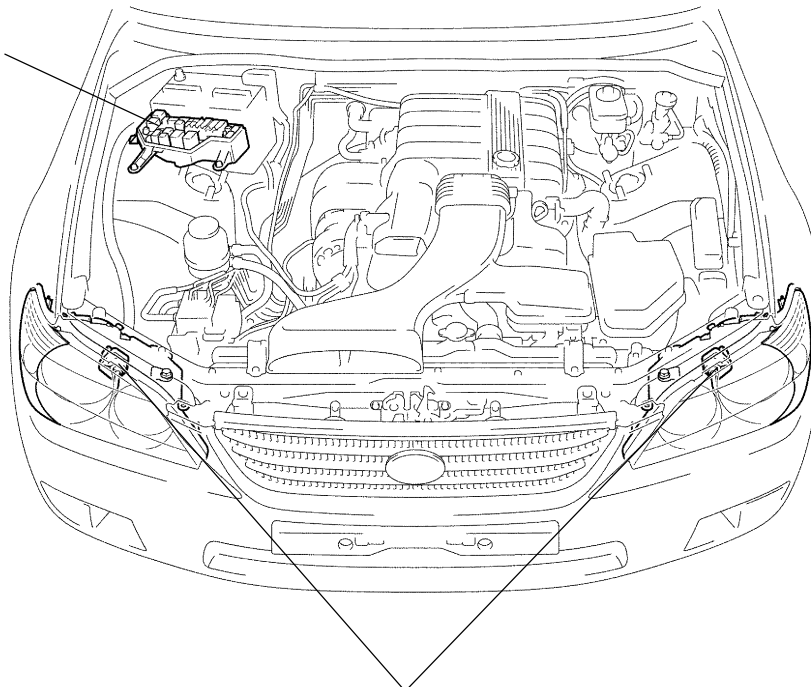

Headlight Leveling Actuator

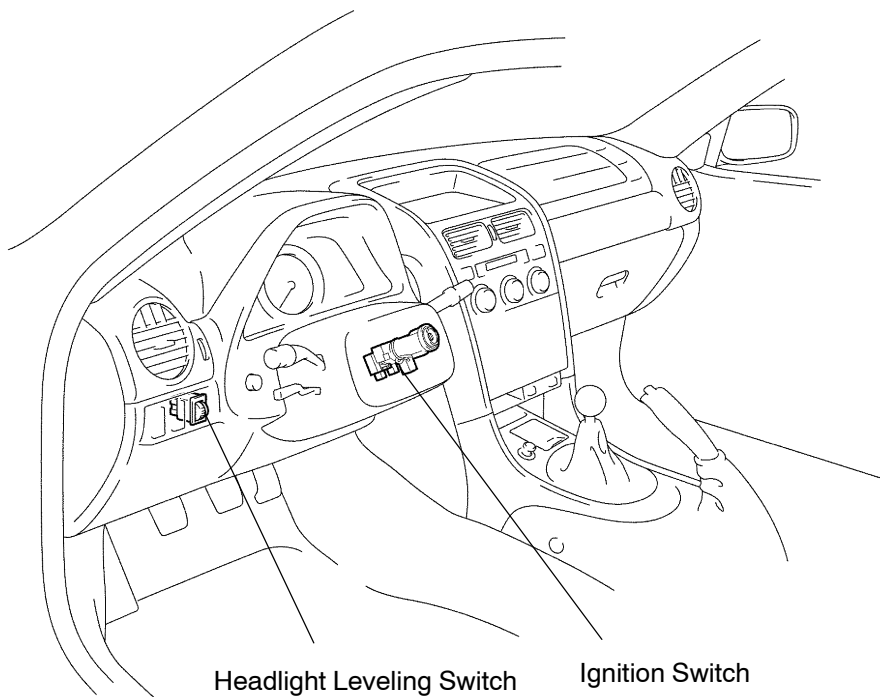

Headlight Leveling Switch

Ignition Switch