


INSPECTION

1. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH

- (a) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2.
- (b) Measure the ammpere terminal 4.

Switch position	Ampere (A)
0	8
1	7.2
2	6.39
3	5.59
4	4.78
5	3.98


If current value is not as specified, replace the switch.

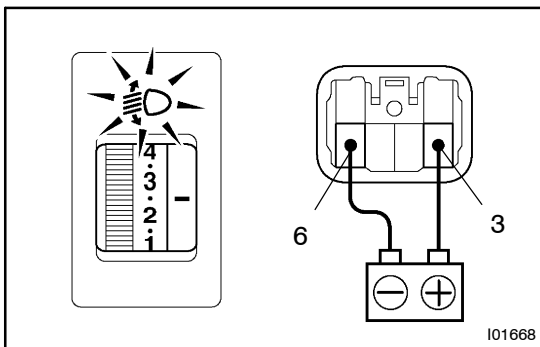

2. INSPECT HEADLIGHT BEAM LEVEL CONTROL SWITCH ILLUMINATION

Connect the positive (+) lead from the battery to terminal 3 and negative (-) lead to terminal 6, and check that the illumination light light up.

If operation is not as specified, replace the switch.

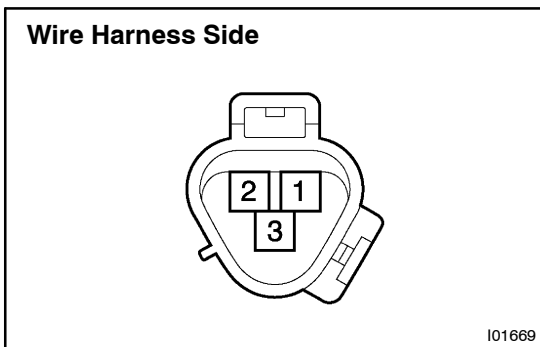

3. INSPECT HEADLIGHT BEAM LEVEL CONTROL ACTUATOR CIRCUIT

Disconnect the connector from the actuator and inspect the connector on wire harness side, as shown in the chart.

Tester connection	Condition	Specified condition
1 - Ground	Constant	Continuity
3 - Ground	Constant	Battery voltage

If circuit is not as specified, replace the actuator.