


REMOVAL

1. REMOVE FOG LIGHT ASSEMBLY

HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
 - Follow the same procedure for RH as for LH.
- (a) As shown in the illustration, remove the LH fog light assembly.
 - (b) Move the claw as shown in the illustration, and disconnect the engagement of claws.
 - (c) Separate the connector. Remove the 2 bolts.
 - (d) Install LH fog light assembly.
 - (e) Adjust optical axis of fog light (See page BE-48).

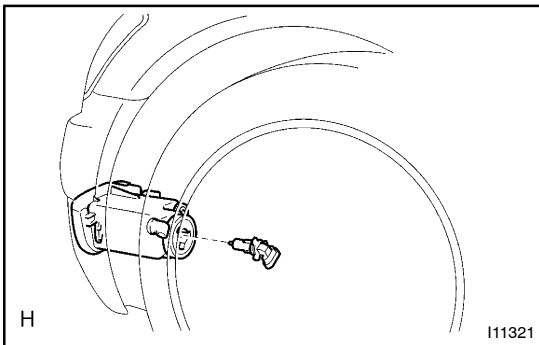

2. REMOVE FOG LIGHT BULB

HINT:

Follow the same procedure for RH as for LH.

- (a) Remove a part of LH front fender liner.
- (b) Separate the connector and remove the bulb.