



REMOVAL

1. REMOVE CENTER STOP LIGHT ASSEMBLY

HINT:

Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.

- (a) Insert the clip remover in the position as shown in the illustration, pull it upwards, and disconnect the engagement of the 2 front claws.
- (b) Pull the center stop light assembly in the direction as shown in the illustration, and disconnect the engagement of 4 claws.
- (c) Separate the connector, and remove the center stop light assembly.

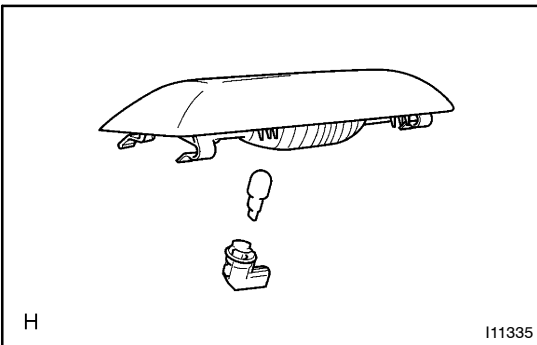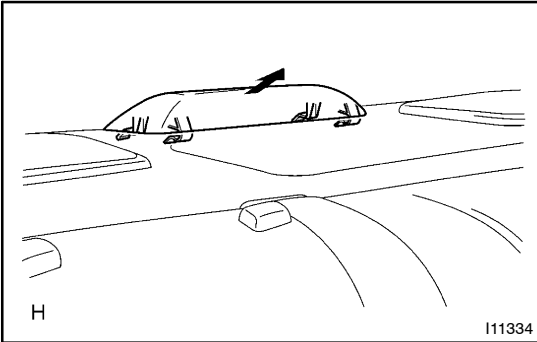

2. REMOVE CENTER STOP LIGHT BULB

HINT:

Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.

- (a) Remove center stop light assembly.
- (b) Remove the bulb sockets and bulbs.