

INSPECTION


1. INSPECT THEFT DETERRENT INDICATOR LIGHT OPERATION

- (a) Remove the combination meter.
- (b) Disconnect the combination meter connector.
- (c) Check indicator light lights up when connect the positive (+) lead from the battery to terminal B8 and the negative (-) lead to terminal B1 of combination meter connector.

If operation is not as specified, replace the indicator light.

2. INSPECT THEFT DETERRENT INDICATOR LIGHT CIRCUIT


(See page DI-444)

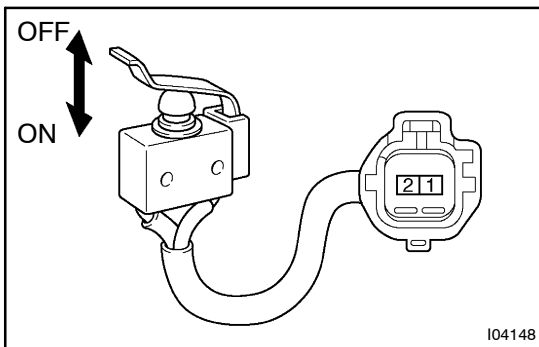

3. INSPECT ENGINE HOOD COURTESY SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF (closed)	-	No continuity
ON (opened)	1 - 2	Continuity

If continuity is not as specified, replace the switch.

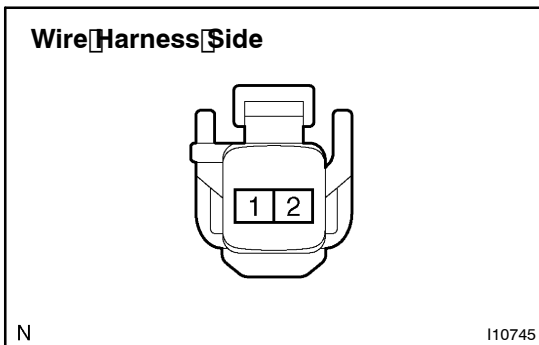

4. INSPECT ENGINE HOOD COURTESY SWITCH CIRCUIT

(See page DI-475)

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 - Ground	Constant	Continuity

If circuit is not as specified, inspect power source or wire harness.

5. INSPECT THEFT DETERRENT SIREN BATTERY

- (a) The internal battery is fully discharged.
- (b) Set the system inside the vehicle.
- (c) Disconnect the connector of theft deterrent ECU in this condition, and sounds the siren for open detection.
- (d) The siren battery is normal when the siren sounds for 30 seconds, stops, then after 5 seconds, seconds again.
- (e) Replace the siren battery when the siren stops sounding before 30 seconds elapse the battery because the battery life has run out